


FINGERPRINT CABINET LOCK

USER MANUAL

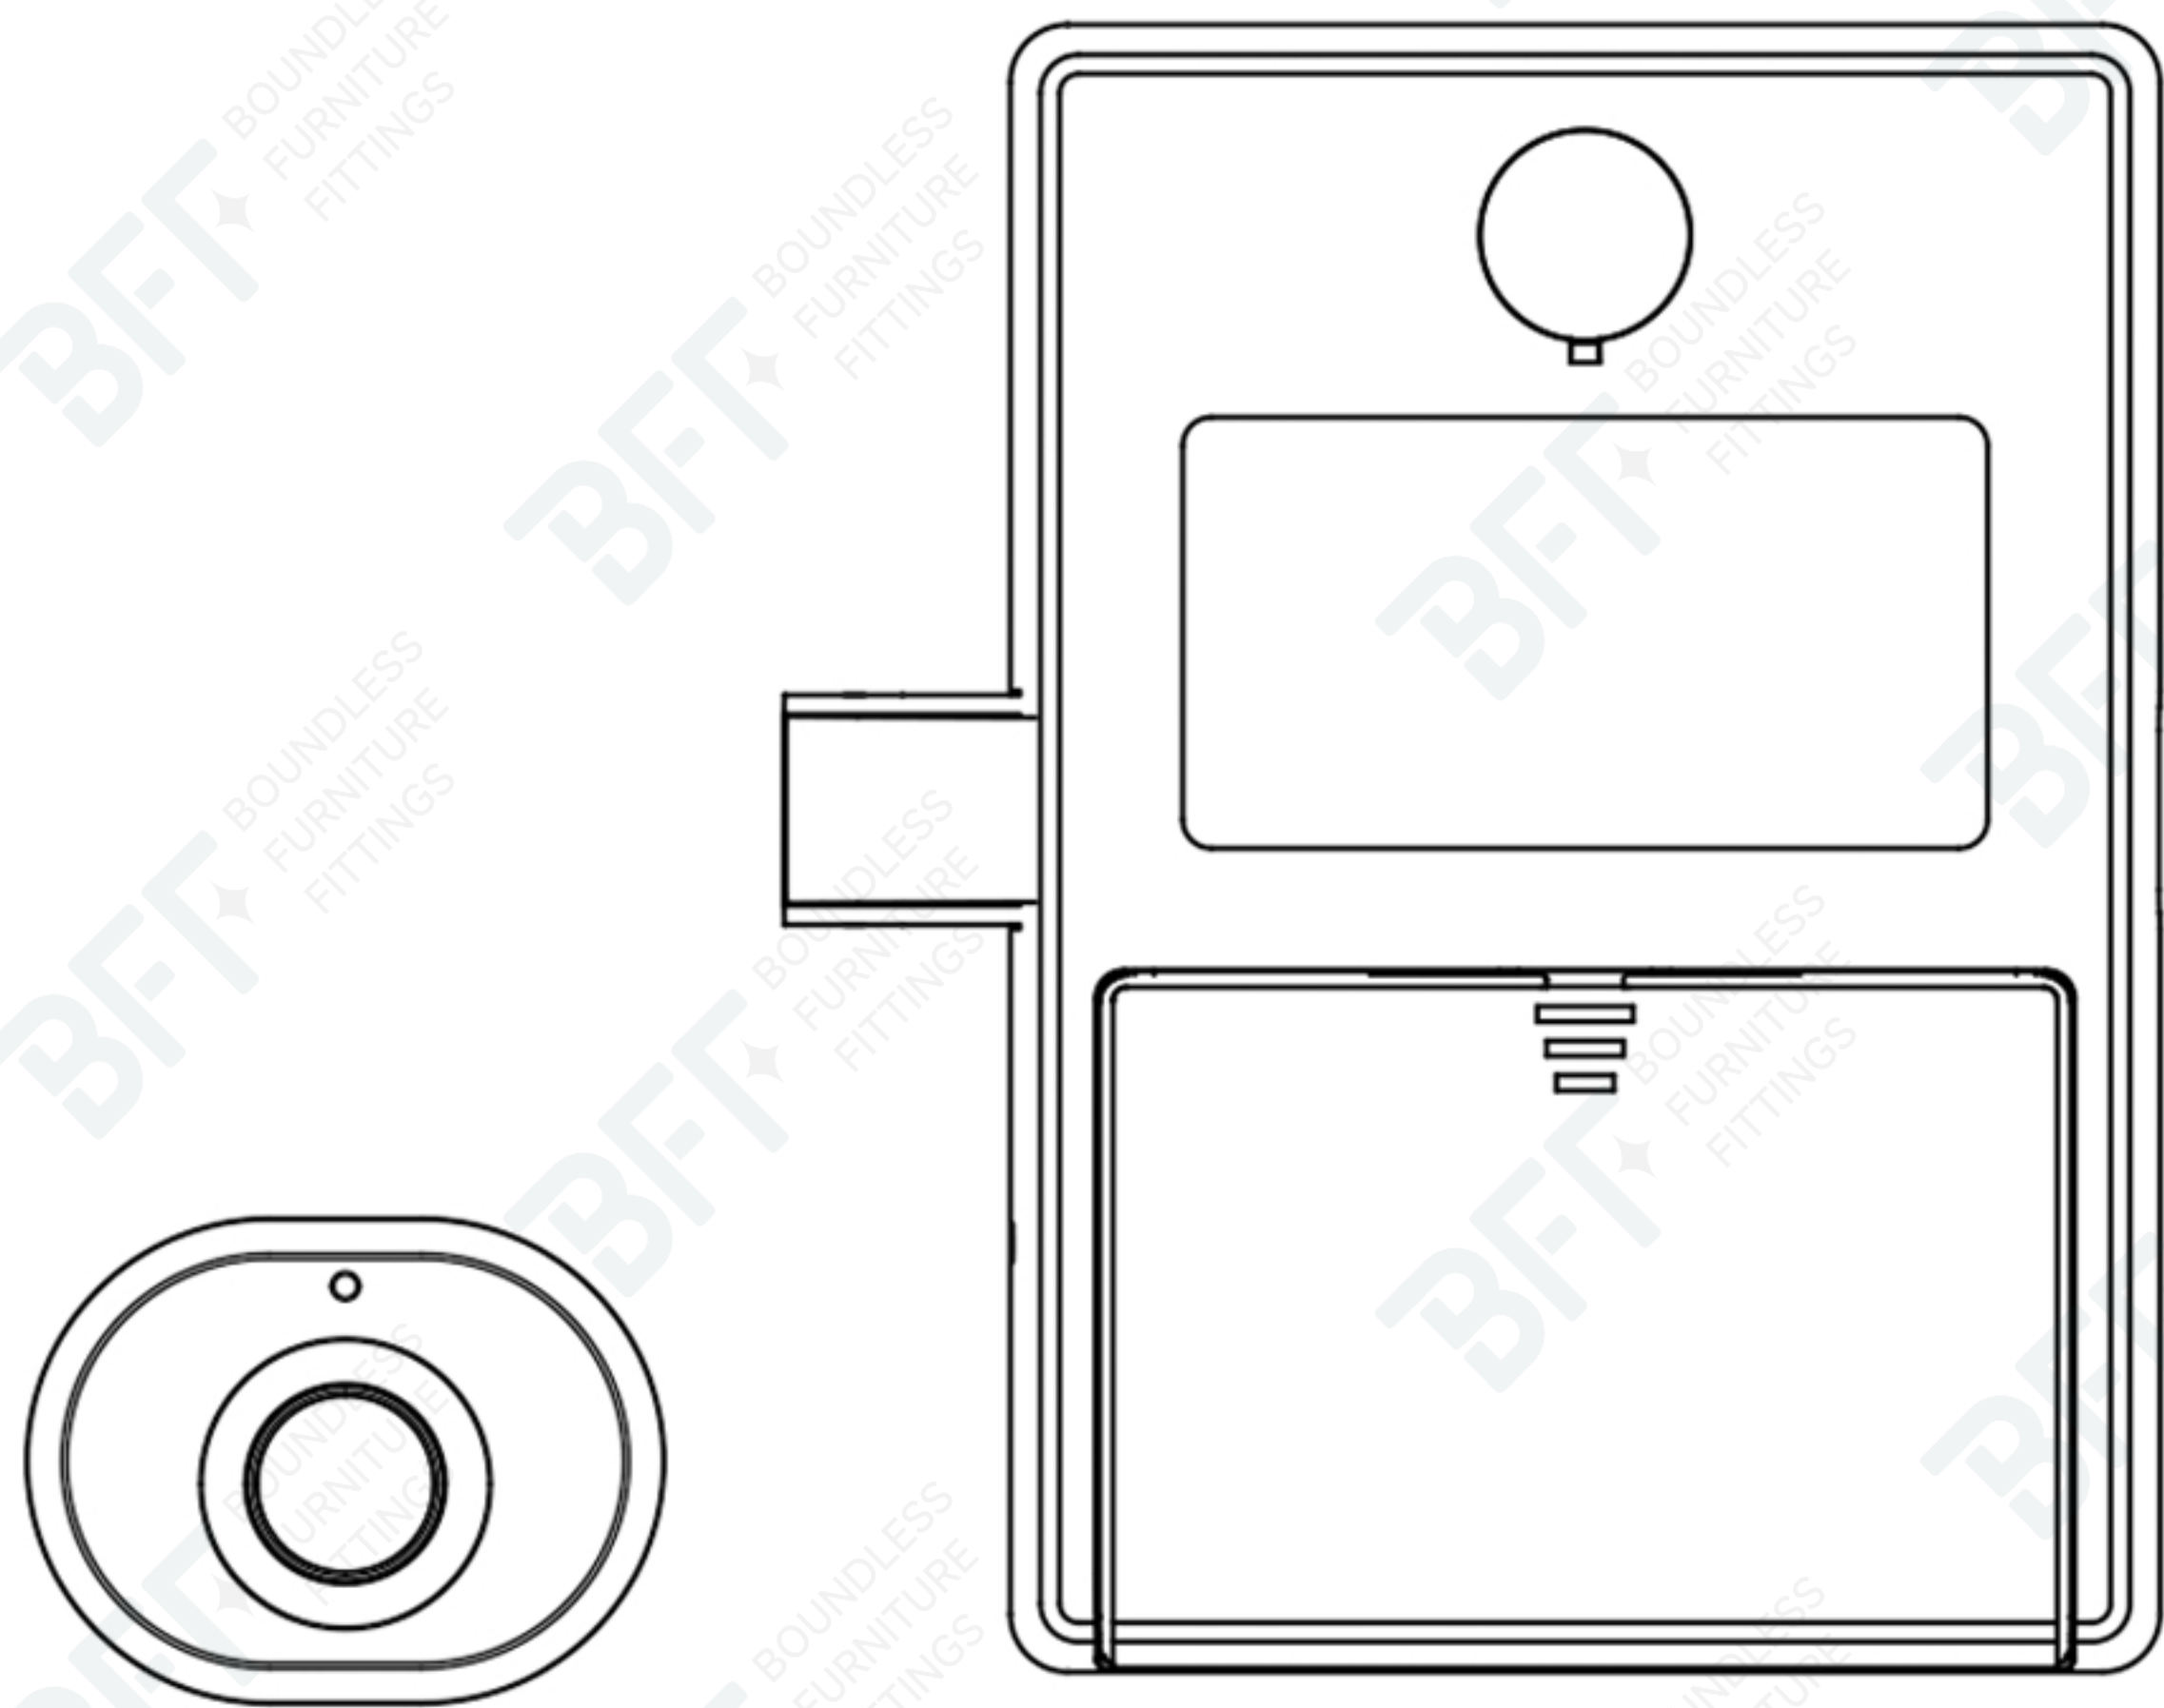


Feature


- Biometric sensors with high sensitivity
- Fingerprint capacity: 10 groups
- E-key for emergency unlocking and management
- Usage Scenarios: drawer, cabinet, wardrobe etc.

Installation Instructions

1. Put the installation drawing on the door, approx. 45mm between the door frame and center hole (Picture 1), then drill the hole

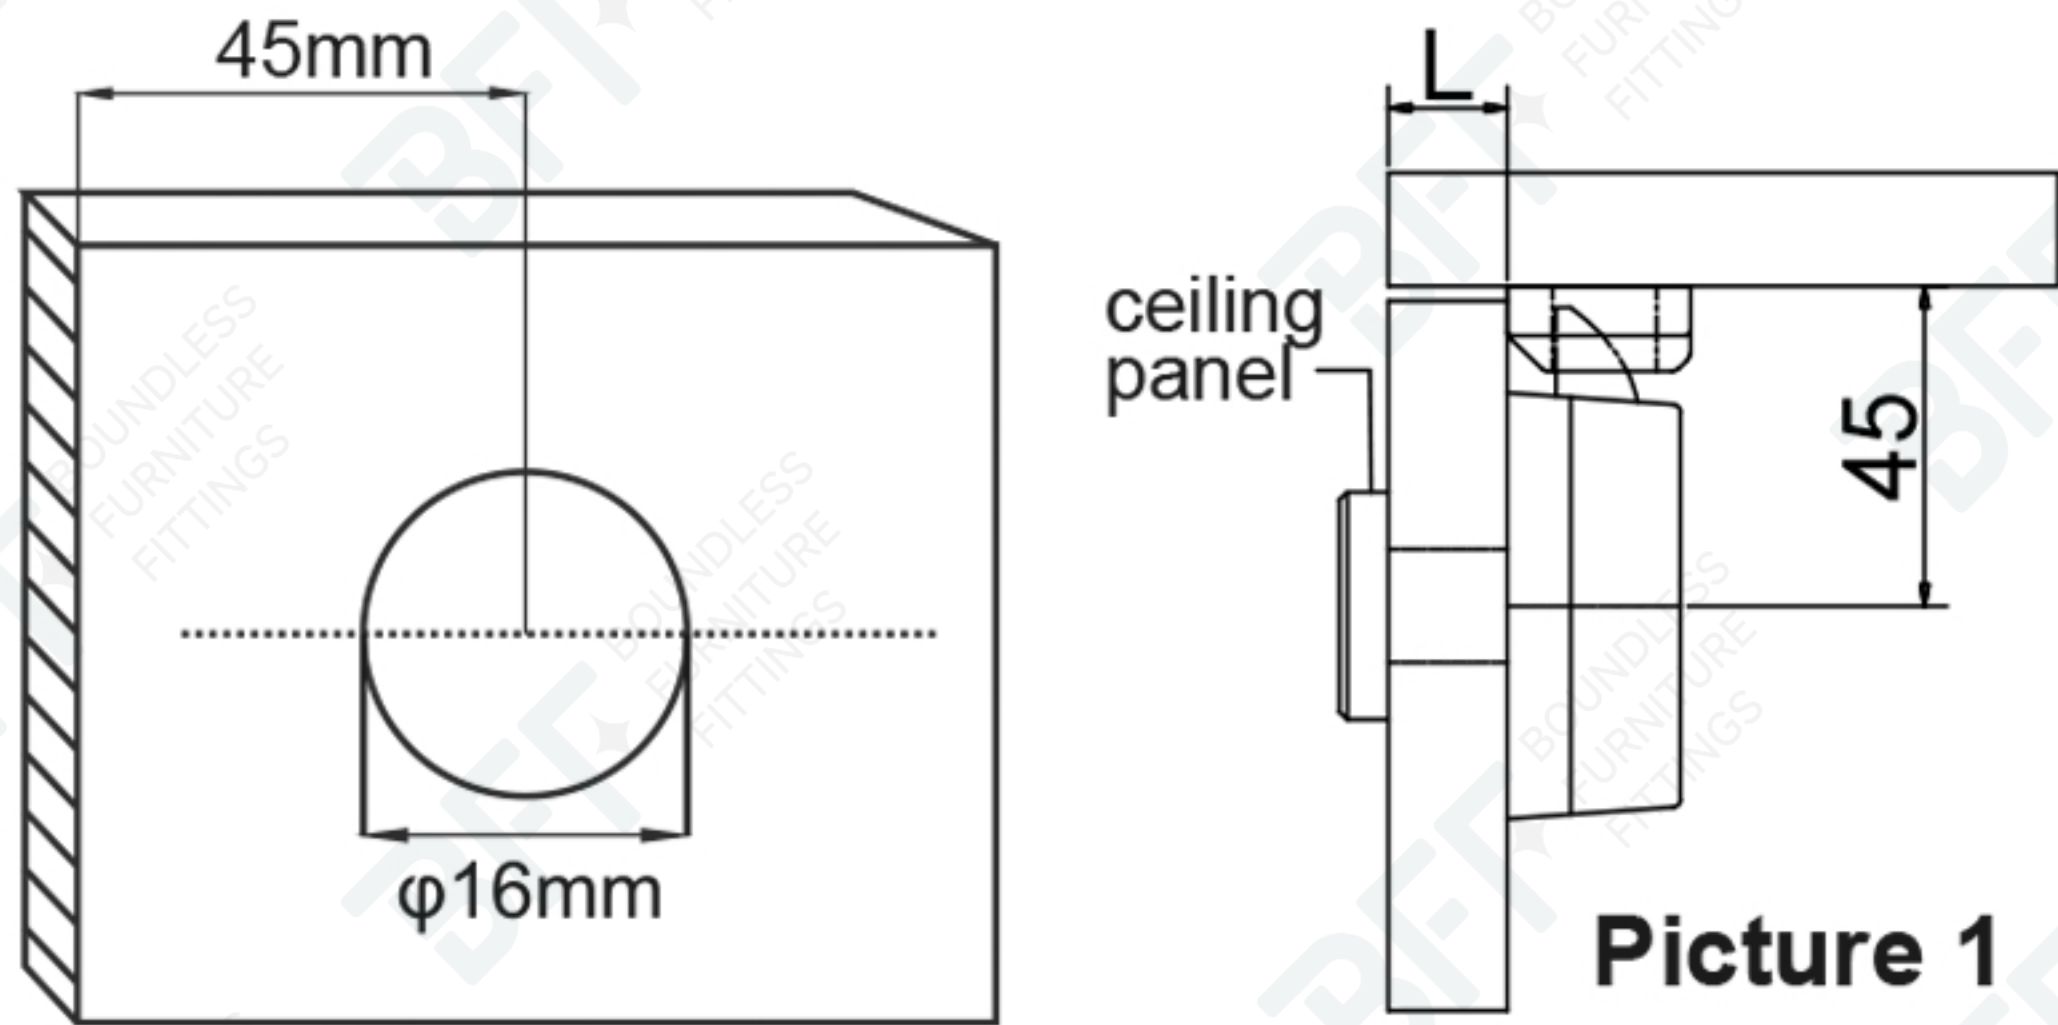


wire connection

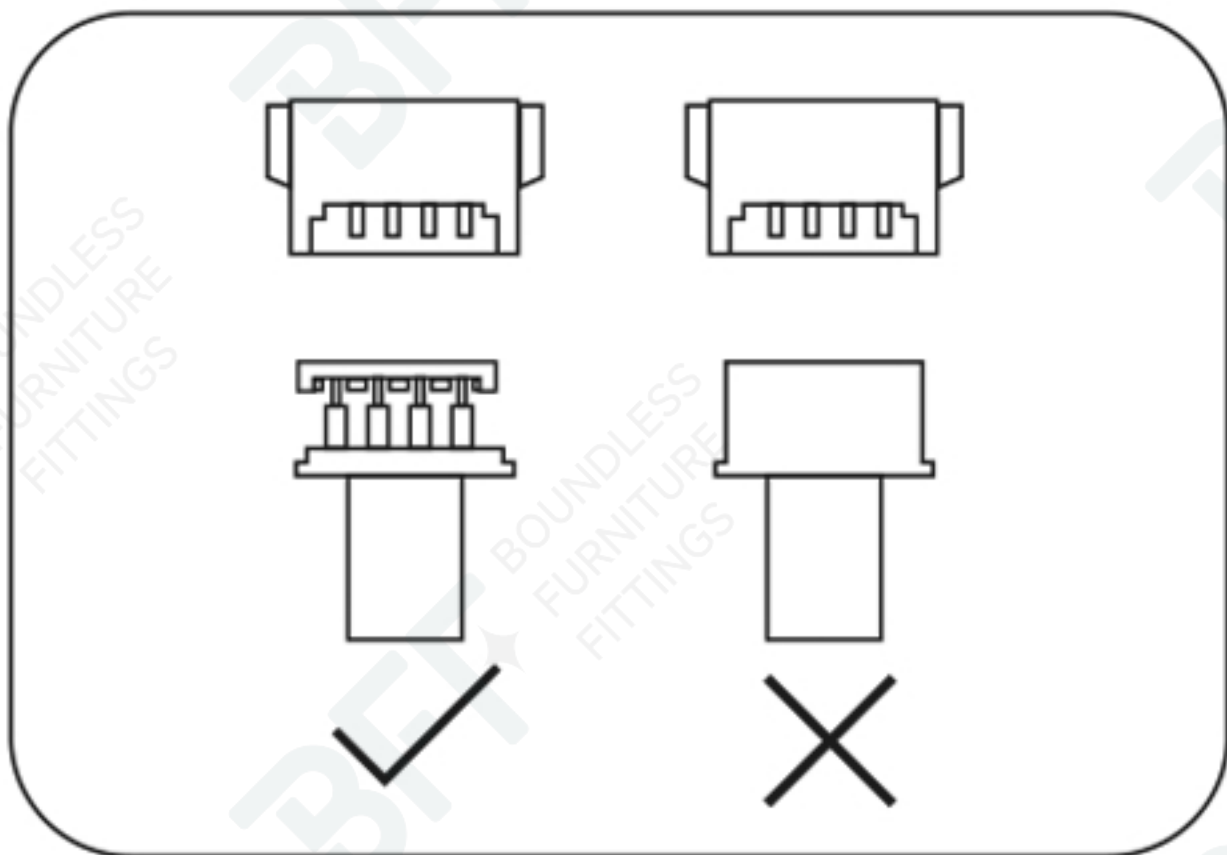

How to add new fingerprints

→Place your (registered) finger on the sensor. Waiting green light to come on for the third time then release your finger.
→ Blue light is on, you can start recording your fingerprints.
→ Repeat placing your finger on the sensor (blue and green lights flash alternately) until the green light stays on for 2 seconds (fingerprint registration is successful).
→The blue light is on again, the next fingerprint can be recorded.(If fingerprint-ing is not required, wait for the light to go out)

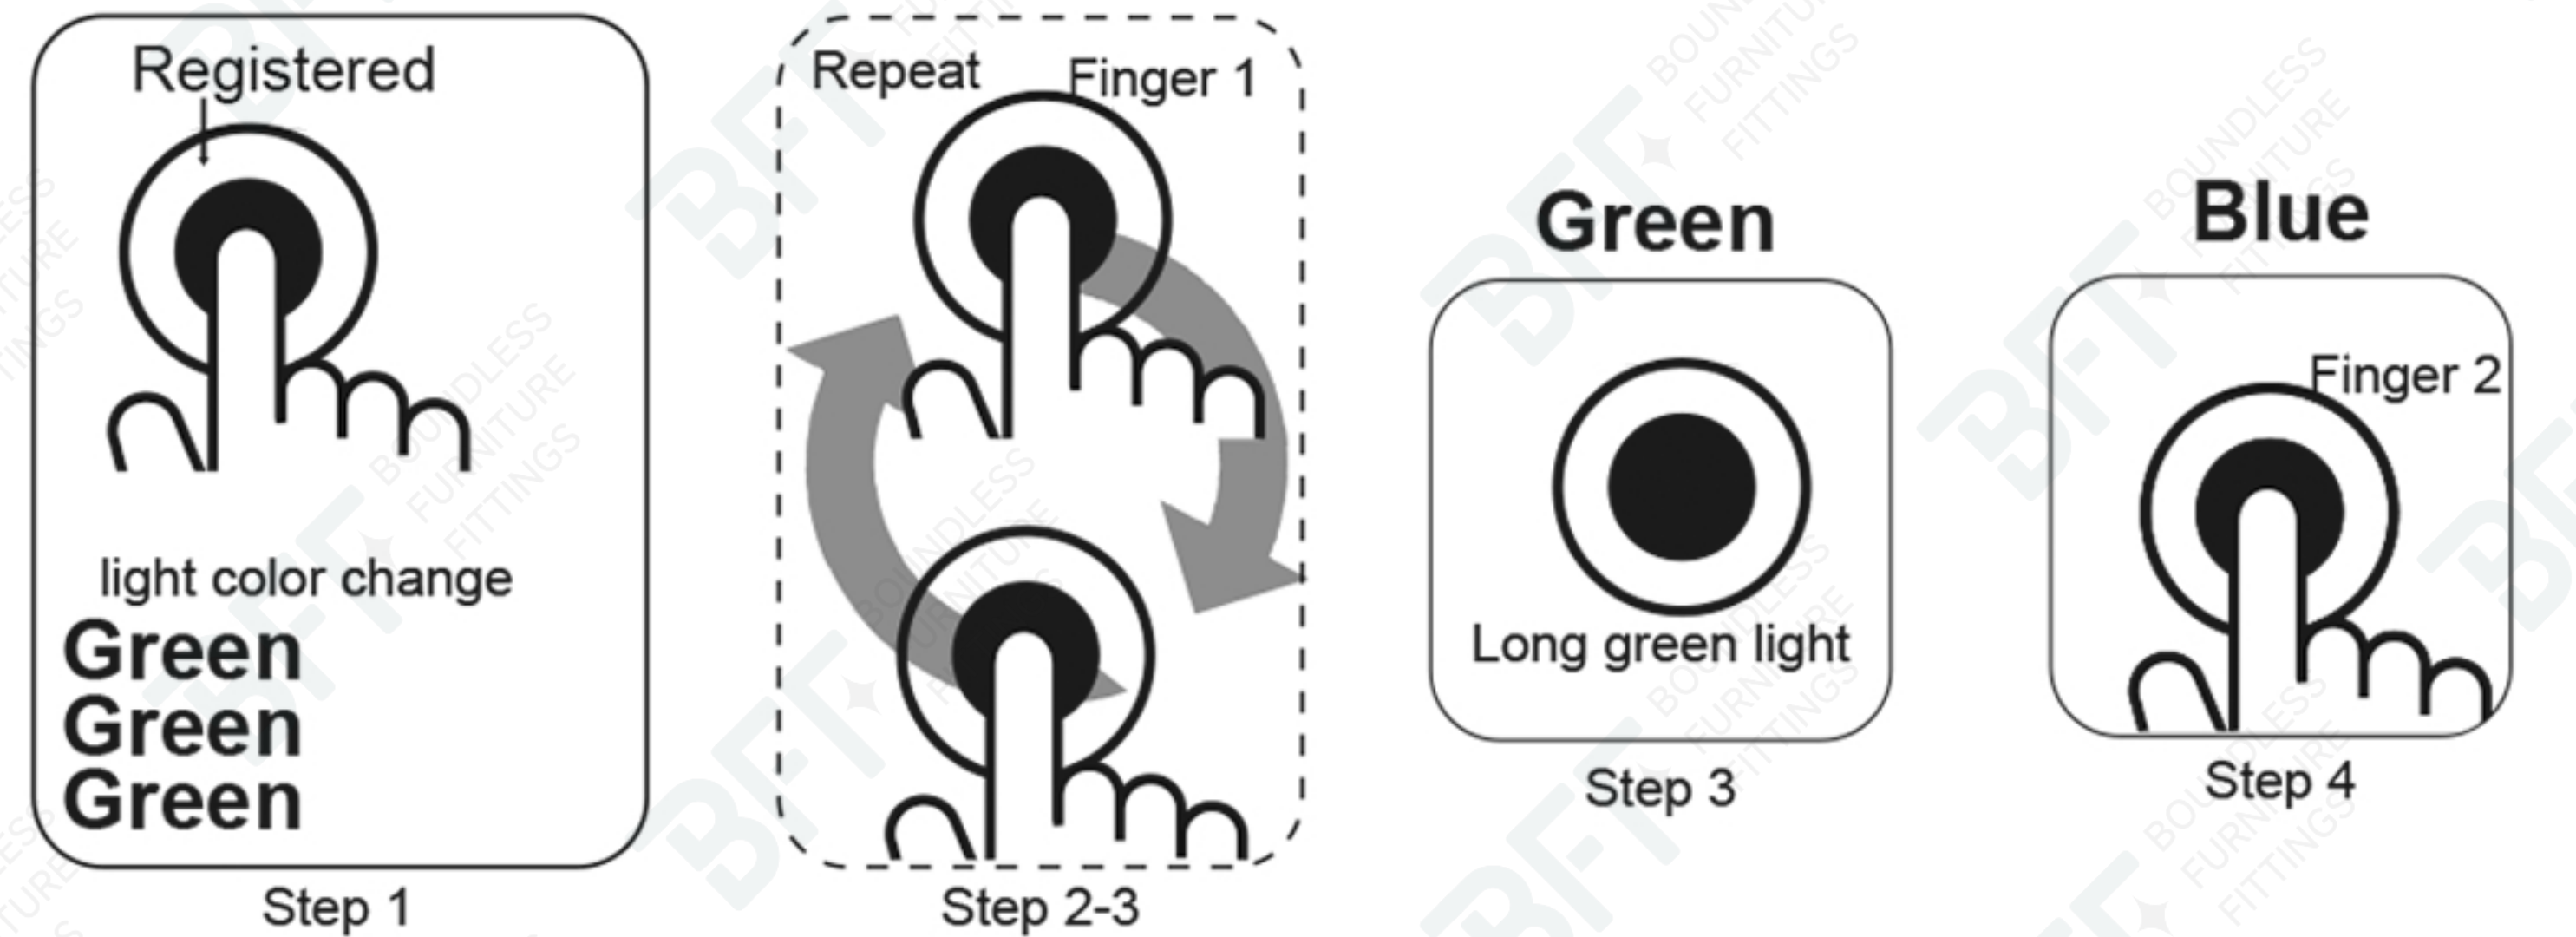

Note

- 1) Make sure add the fingerprint before using. Any finger can unlock in the factory setting
- 2) In order to keep the lock work well, to add no less than 3 fingerprints


How to delete fingerprints

→Holding with the registered finger until a red light is illuminated.
→Release your finger.
→Green light for 2 seconds, registered fingerprints will be deleted.




2.1)Insert connecting wire(See picture 2) into the front panel,then wire goes through the centre hole;fix up the panel by screw ST3*14MM.

2.2)Insert connecting wire(See picture 2) into lock body,then fix up by screw ST3.5*18MM.Make sure the distance is 45MM between the centre of lock case and opening wall.

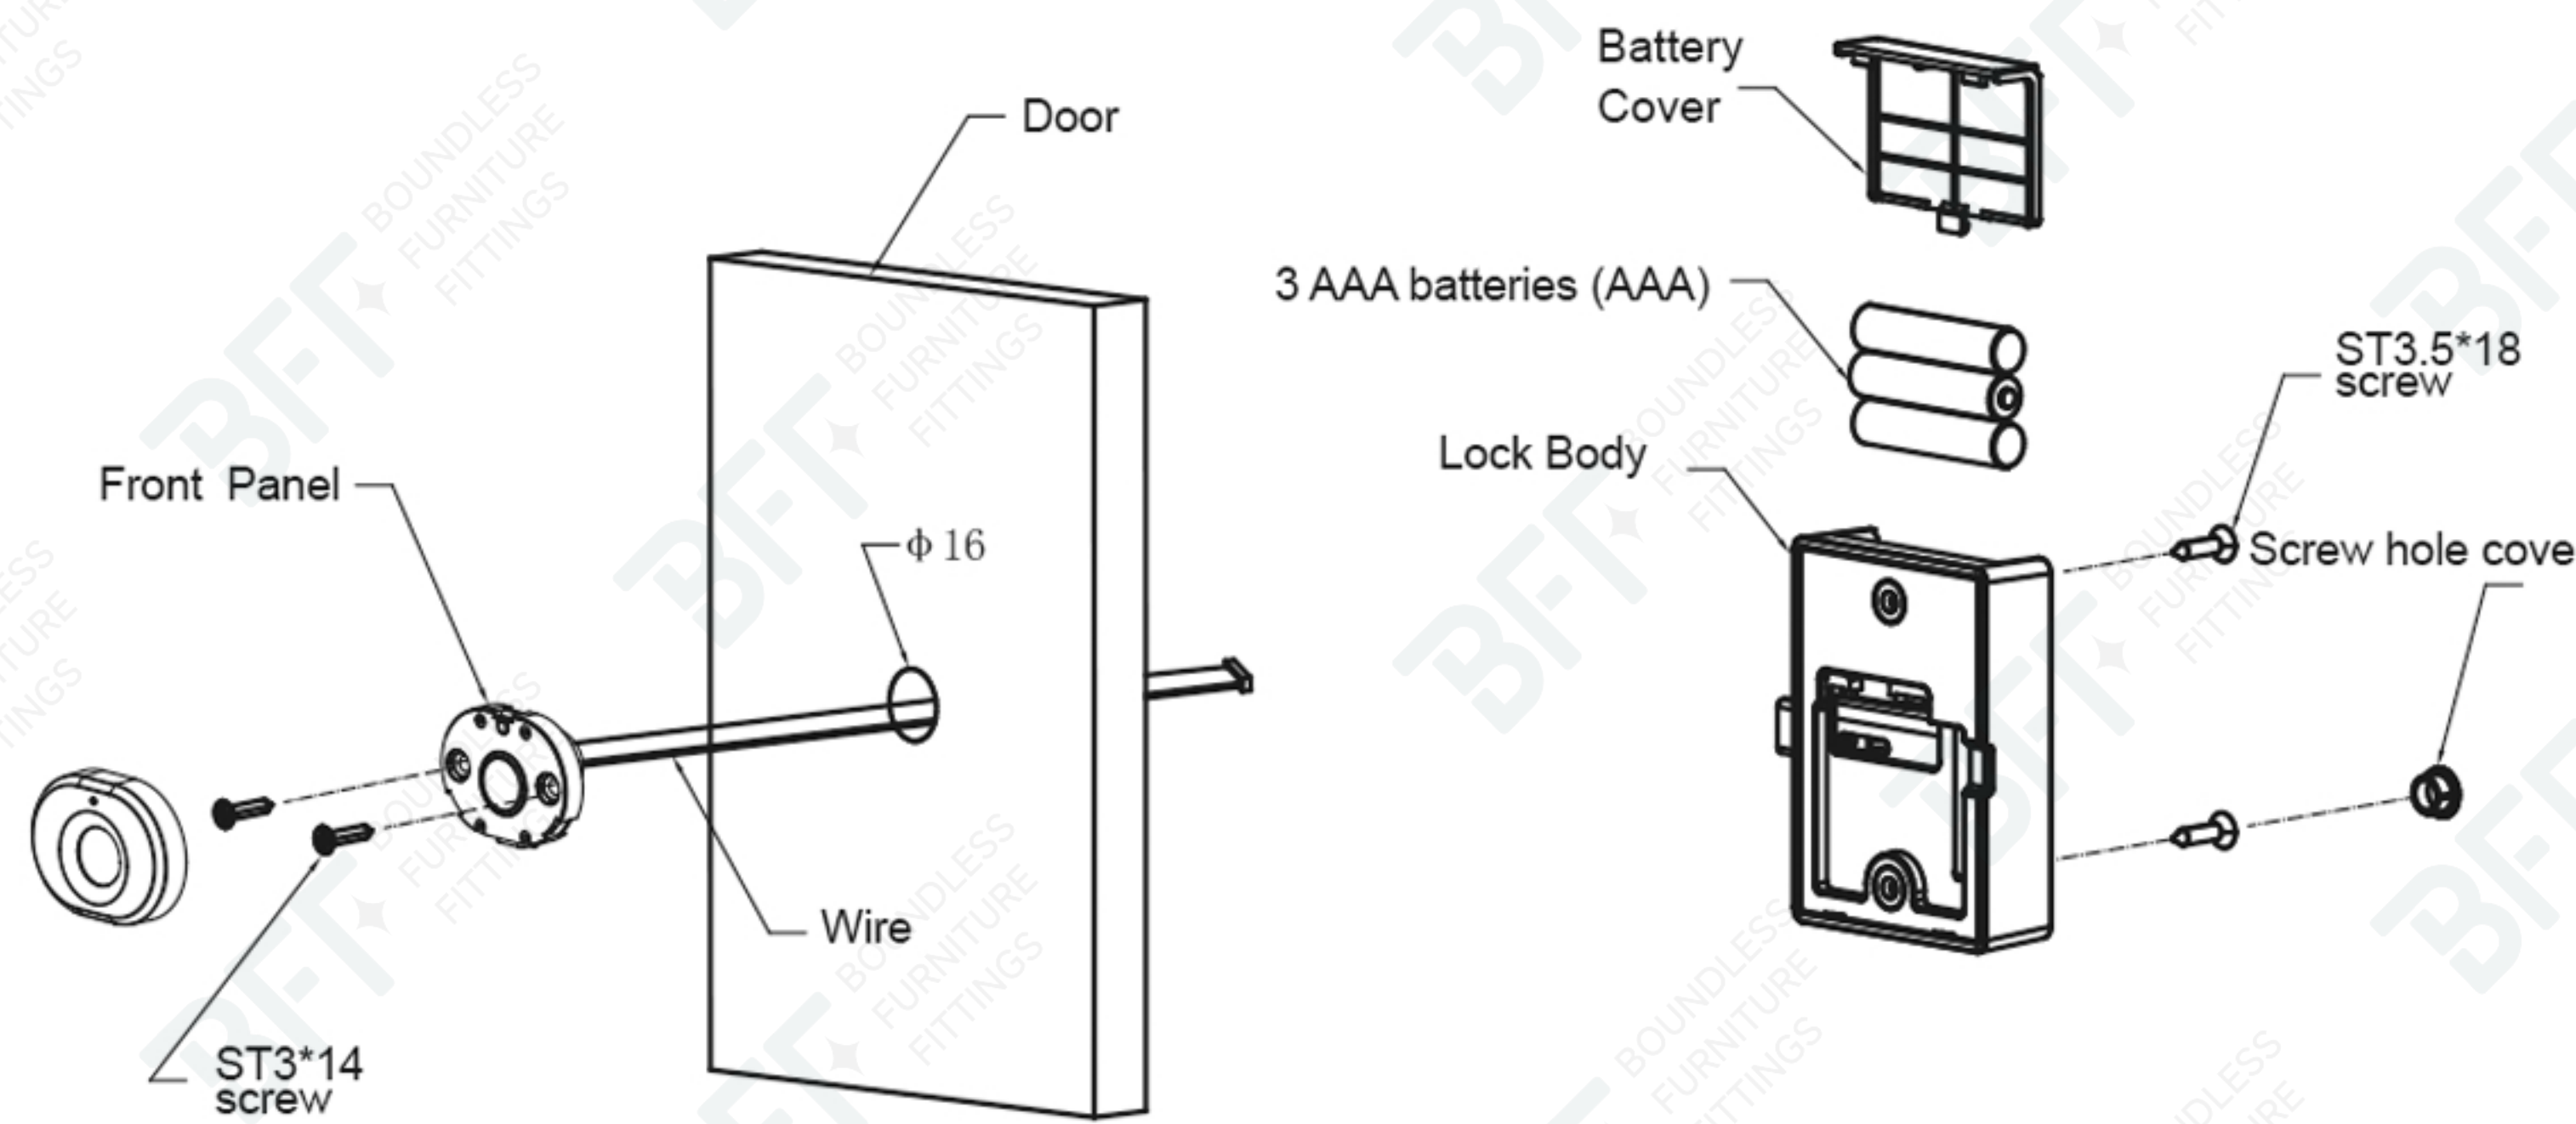

Picture 2

3. Fix the striking plate by screw ST3.5X18 (Make sure latch works well)

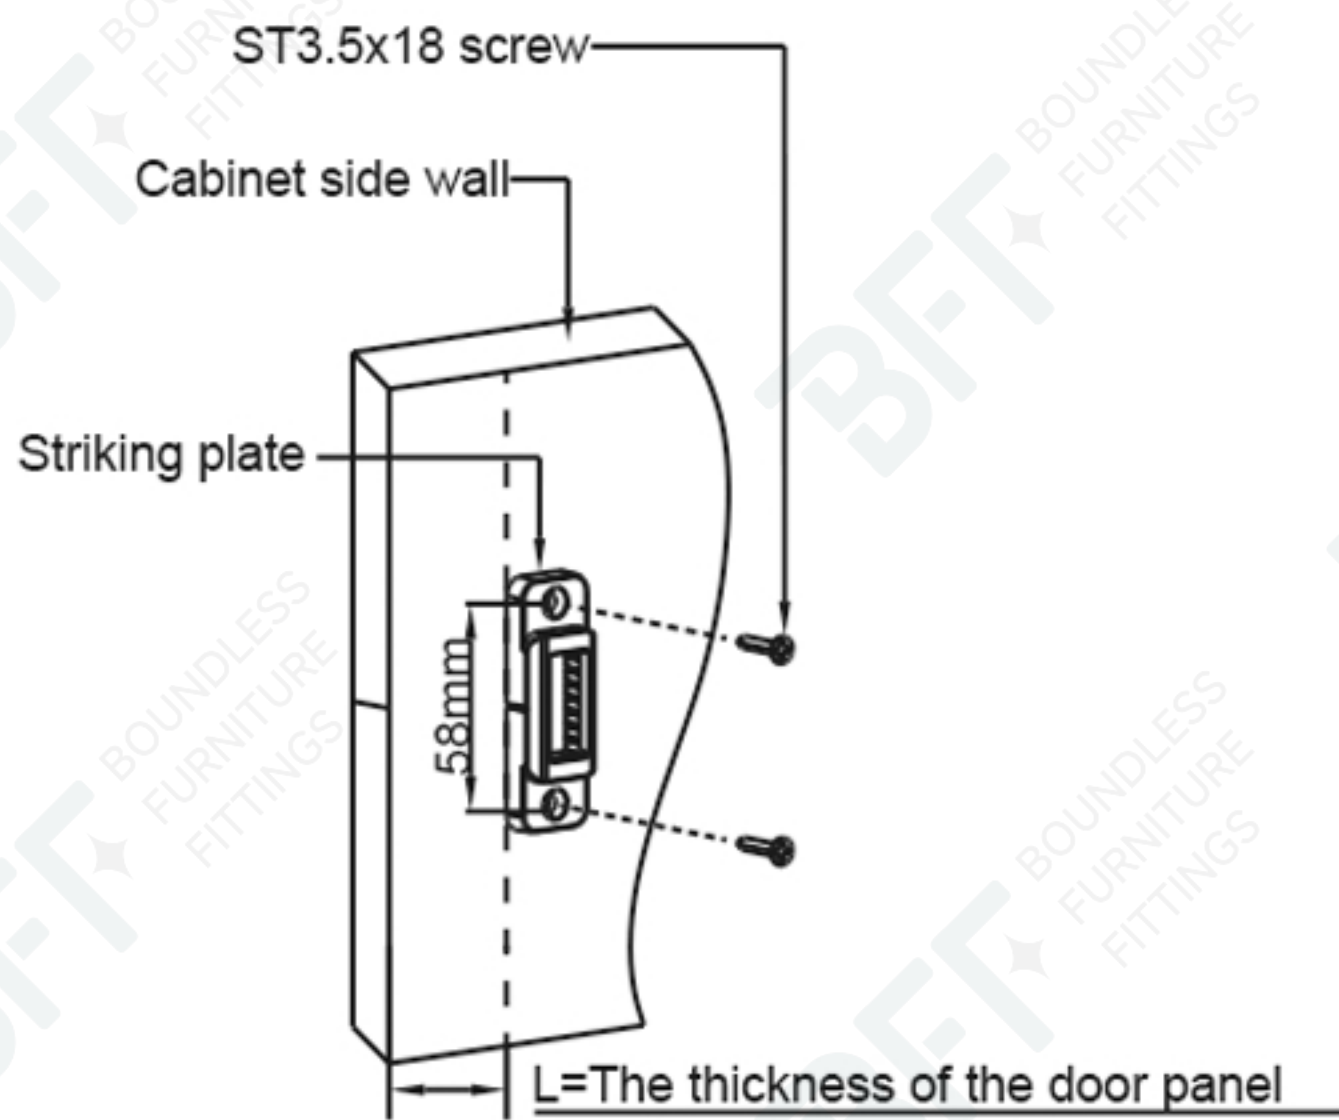

Picture 3

Other Functions

1.E-Key

→ Insert E-Key
→ Put any finger on sensor, green light on, all the fingerprints deleted




2. Low battery warning


- Insufficient power: Green and red lights flash frequently when unlocking the door. Please replace the battery in time
- Battery type: 3*AAA alkaline batteries. Prohibit the use of carbon batteries

3. Emergency power


- Can be connected to a power bank or mobile plug for external power supply when the power is low. Replace the battery after unlocking.

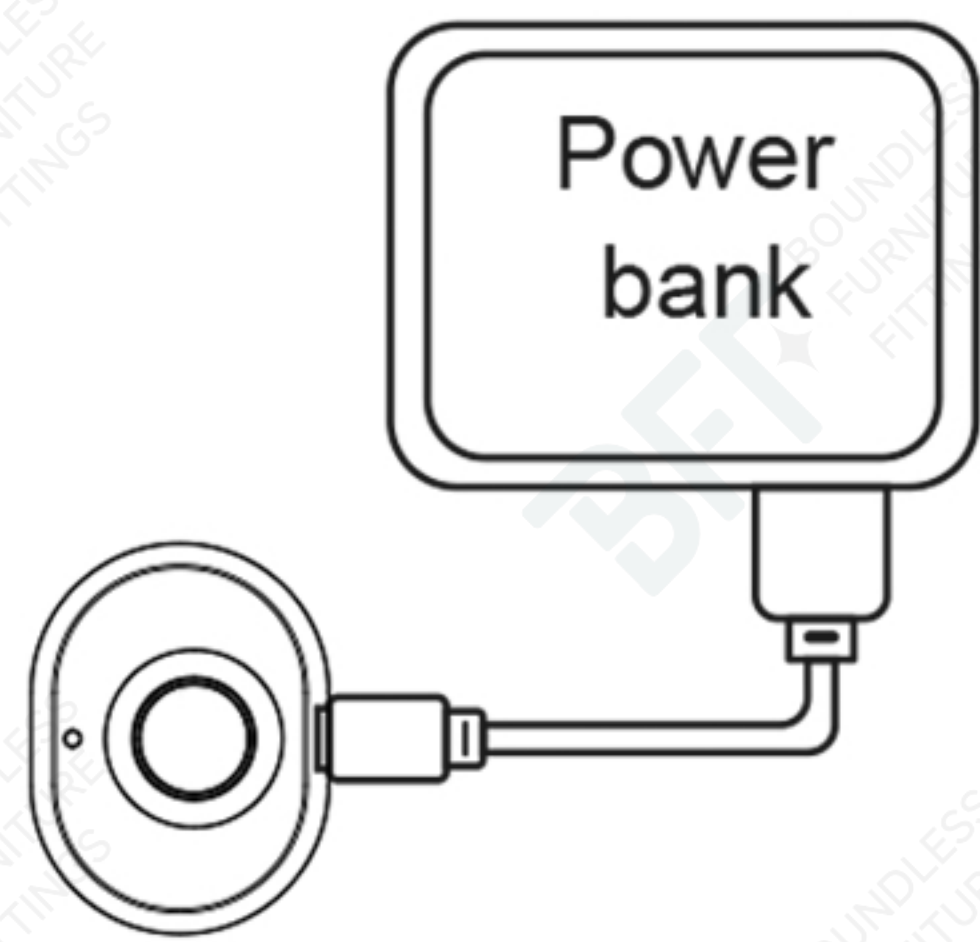

COMPONENT

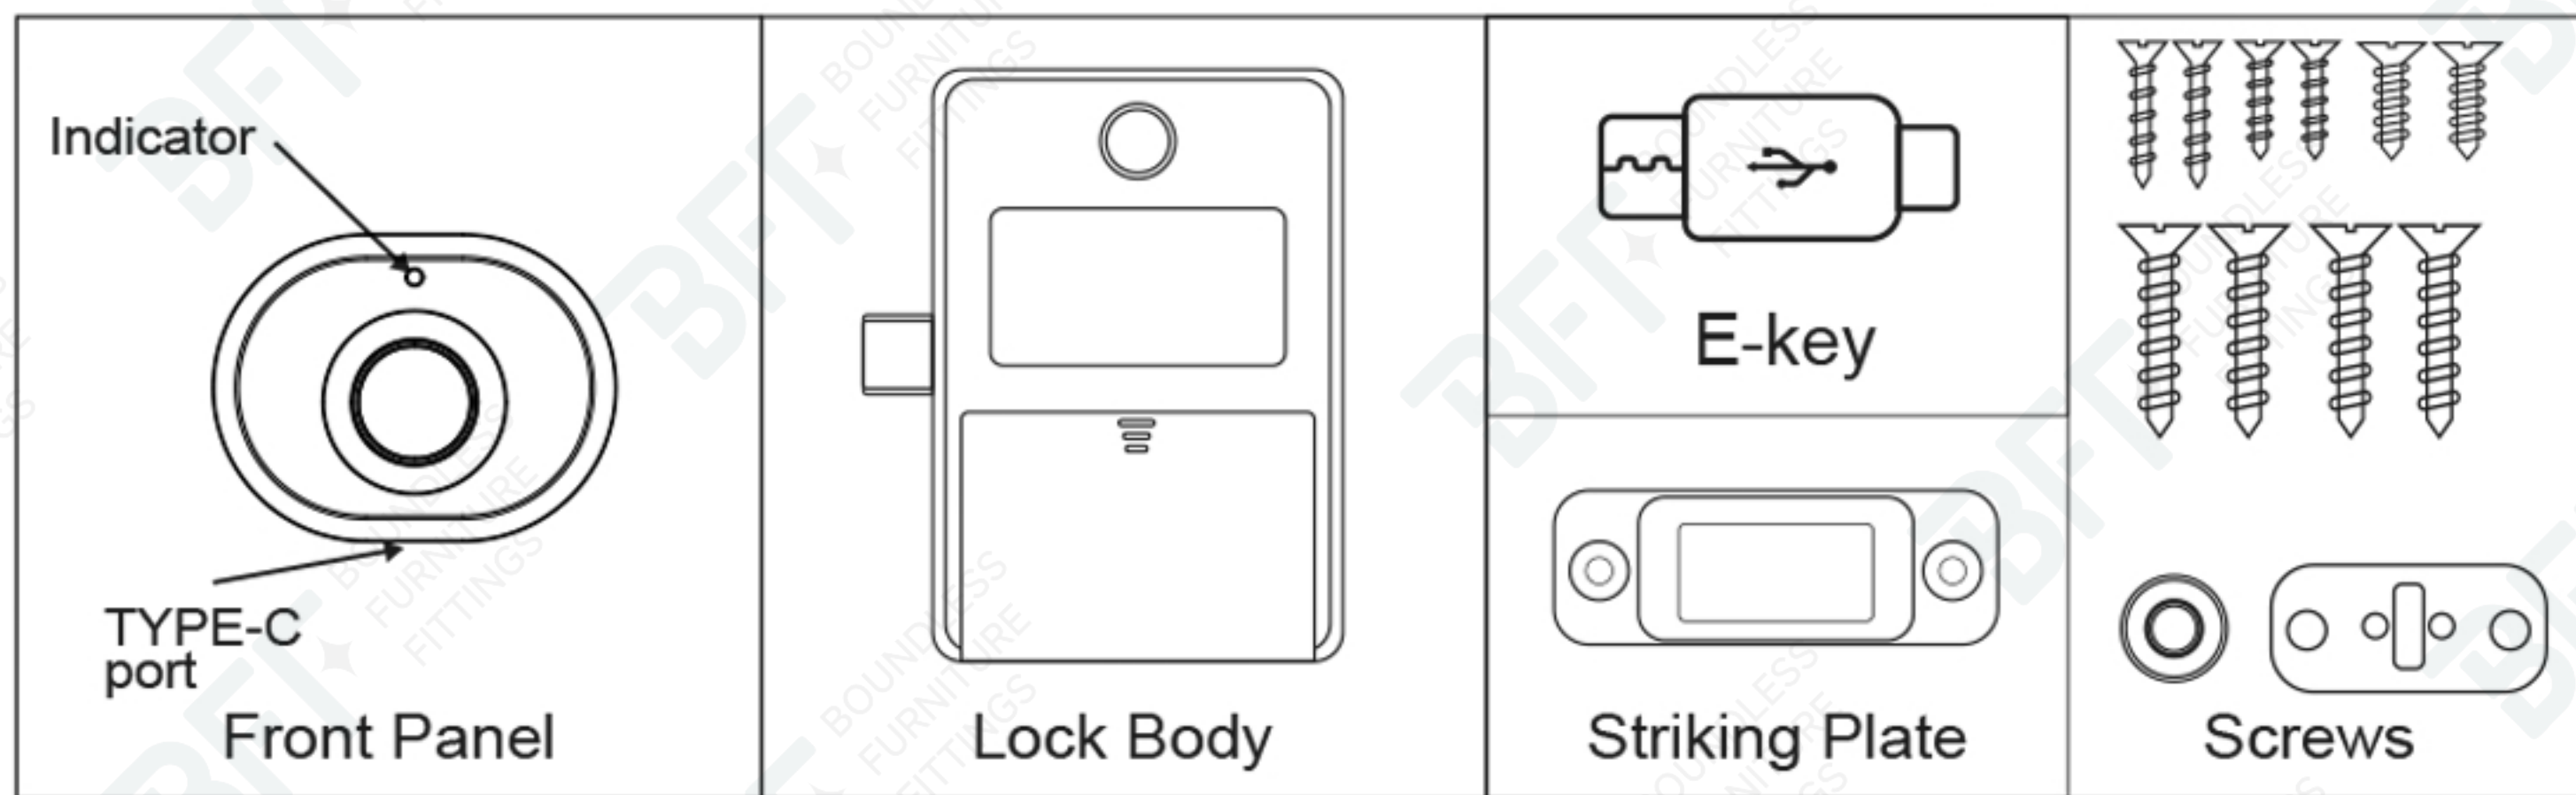

INSTALLATION DRAWING

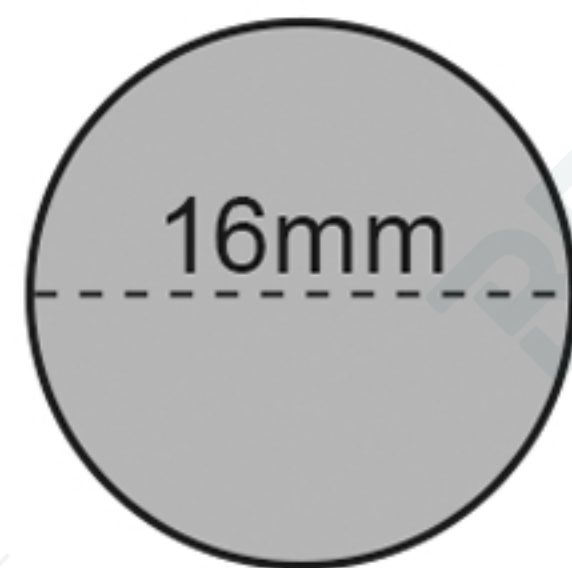

Follow the drawing to drill the hole