


FINGERPRINT CABINET LOCK

USER MANUAL

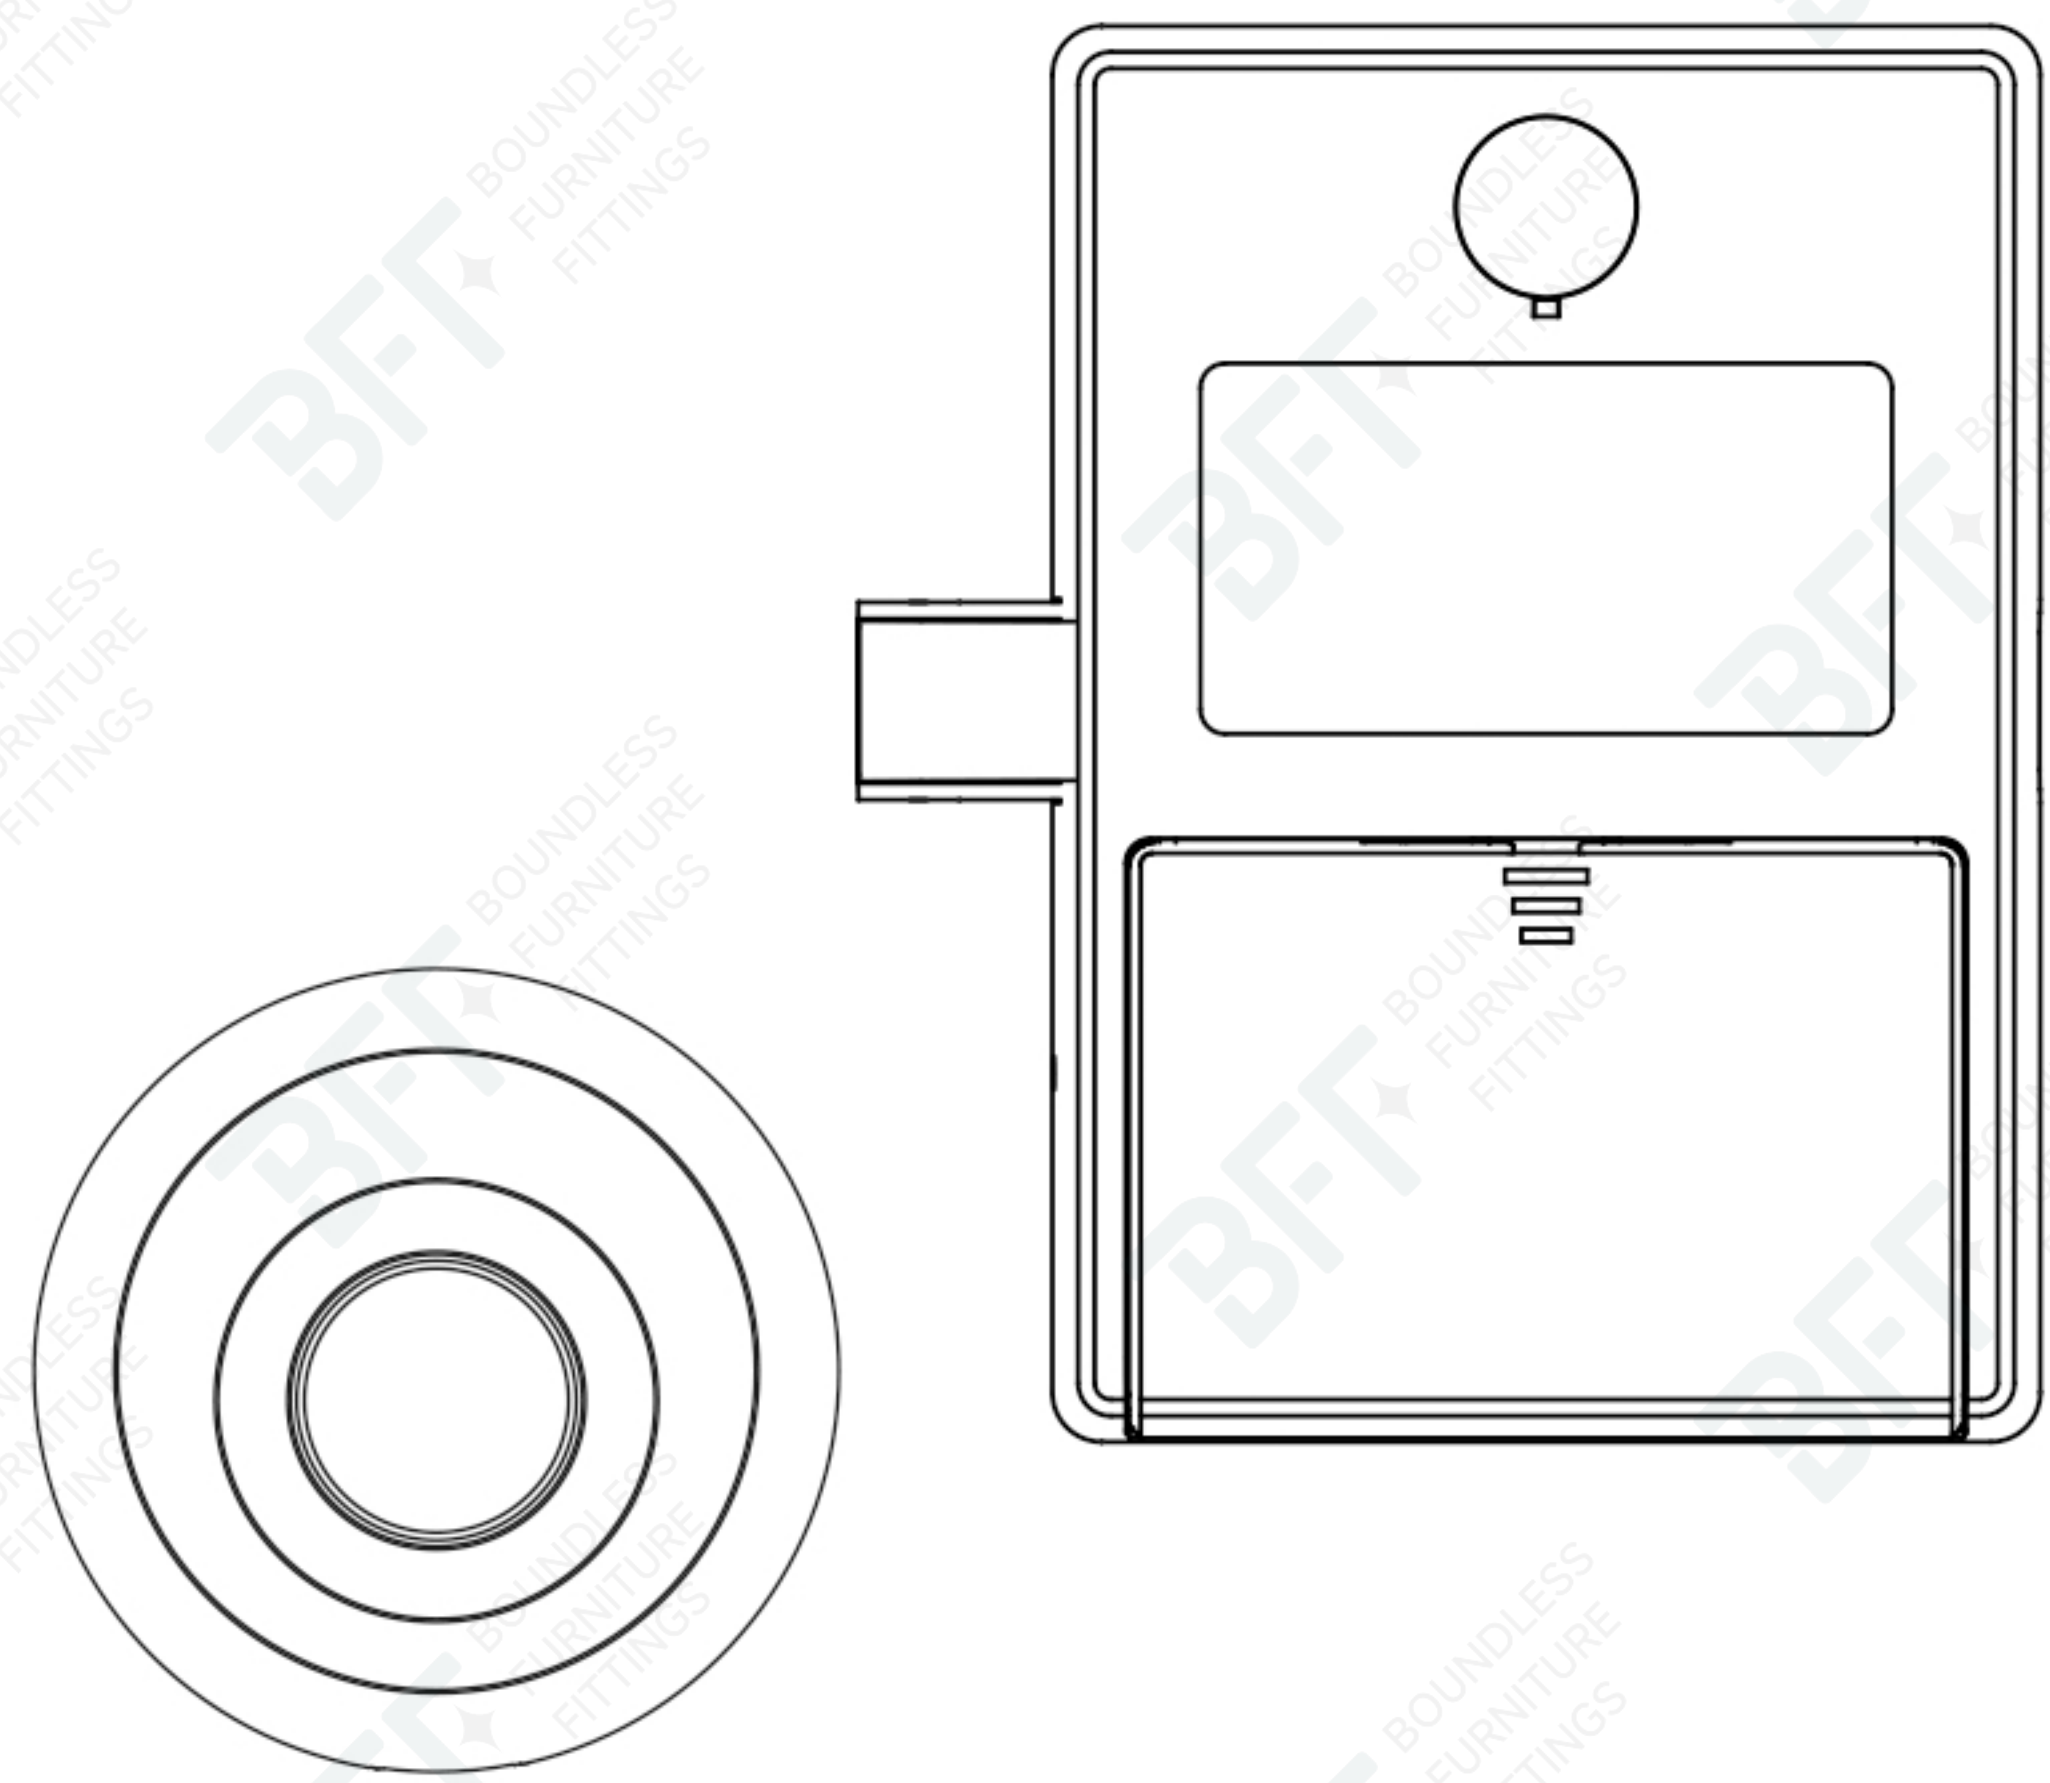


Feature


- 1. Biometric sensor, high sensitive and rapid responsive
- 2. Max. 10 fingerprints for multiple users
- 3. E-Key for emergency key and management
- 4. Zinc alloy panel with elegant design
- 5. Surface mounted, widely used in drawer, cabinet, wardrobe etc.

Installation Instructions

1. Put the installation drawing on the door, approx. 45mm between the door frame and center hole (Picture 1), then drill the hole

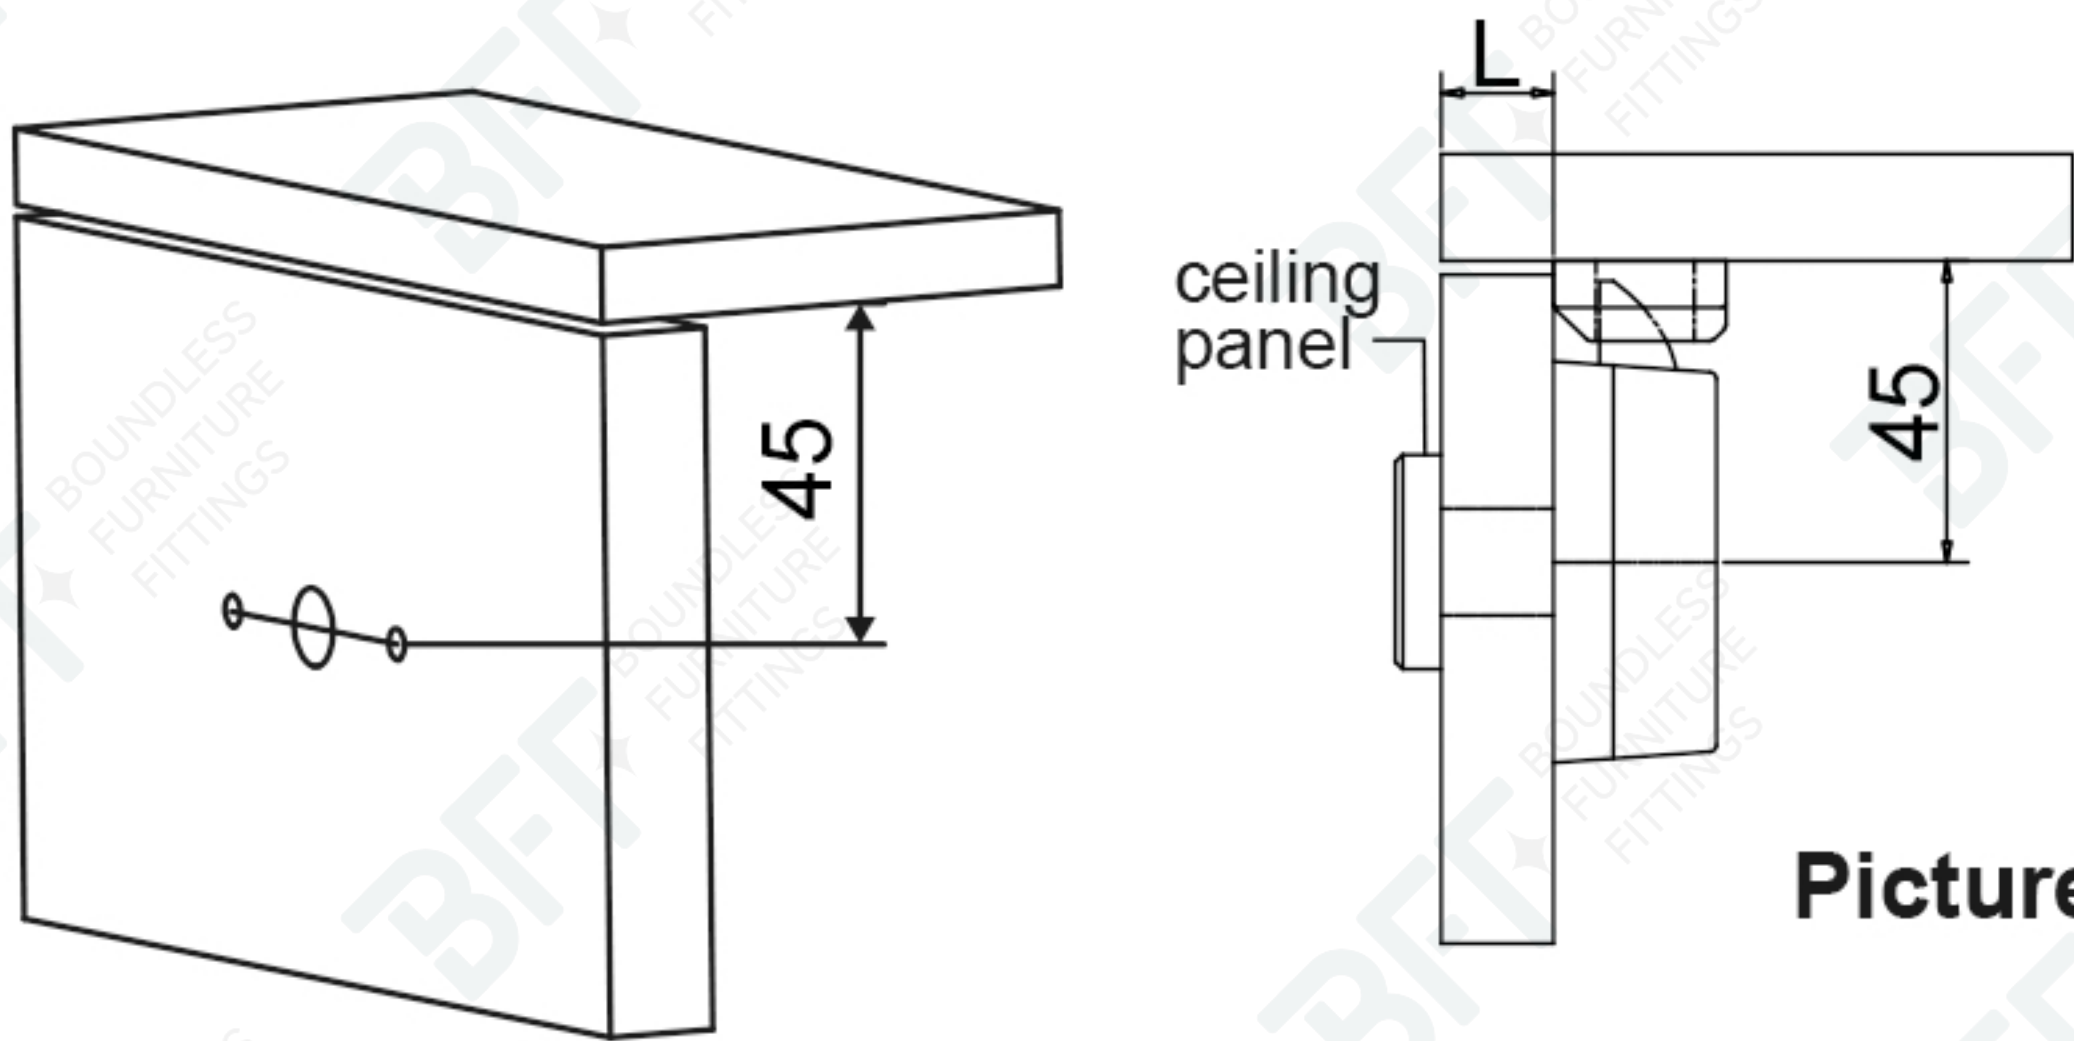


Picture 1

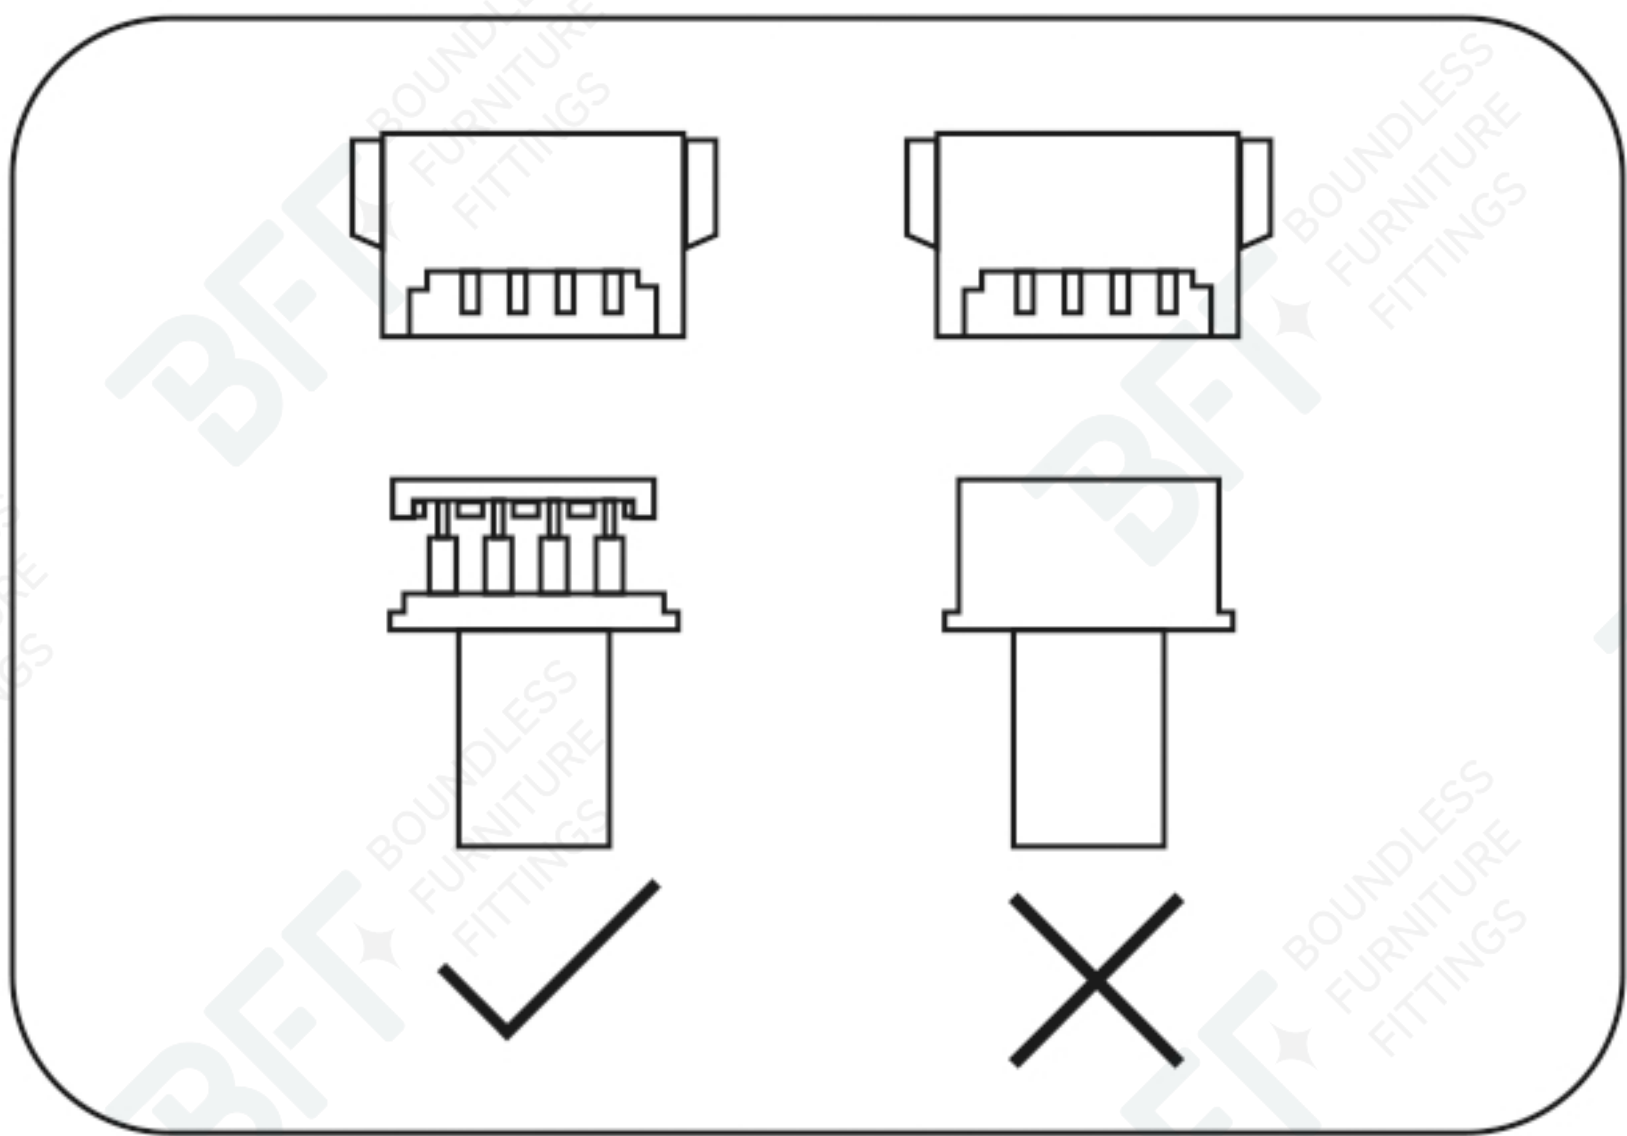

	Door Thickness (mm)	Screw
	14mm~16mm	(M4*20) X 2
	16mm~18mm	(M4*22) X 2
	19mm~21mm	(M4*25) X 2

How to add new fingerprints

- Place your (registered) finger on the sensor. Waiting green light to come on for the third time then release your finger.
- Blue light is on, you can start recording your fingerprints.
- Repeat placing your finger on the sensor (blue and green lights flash alternately) until the green light stays on for 2 seconds (fingerprint registration is successful).
- The blue light is on again, the next fingerprint can be recorded. (If fingerprinting is not required, wait for the light to go out)

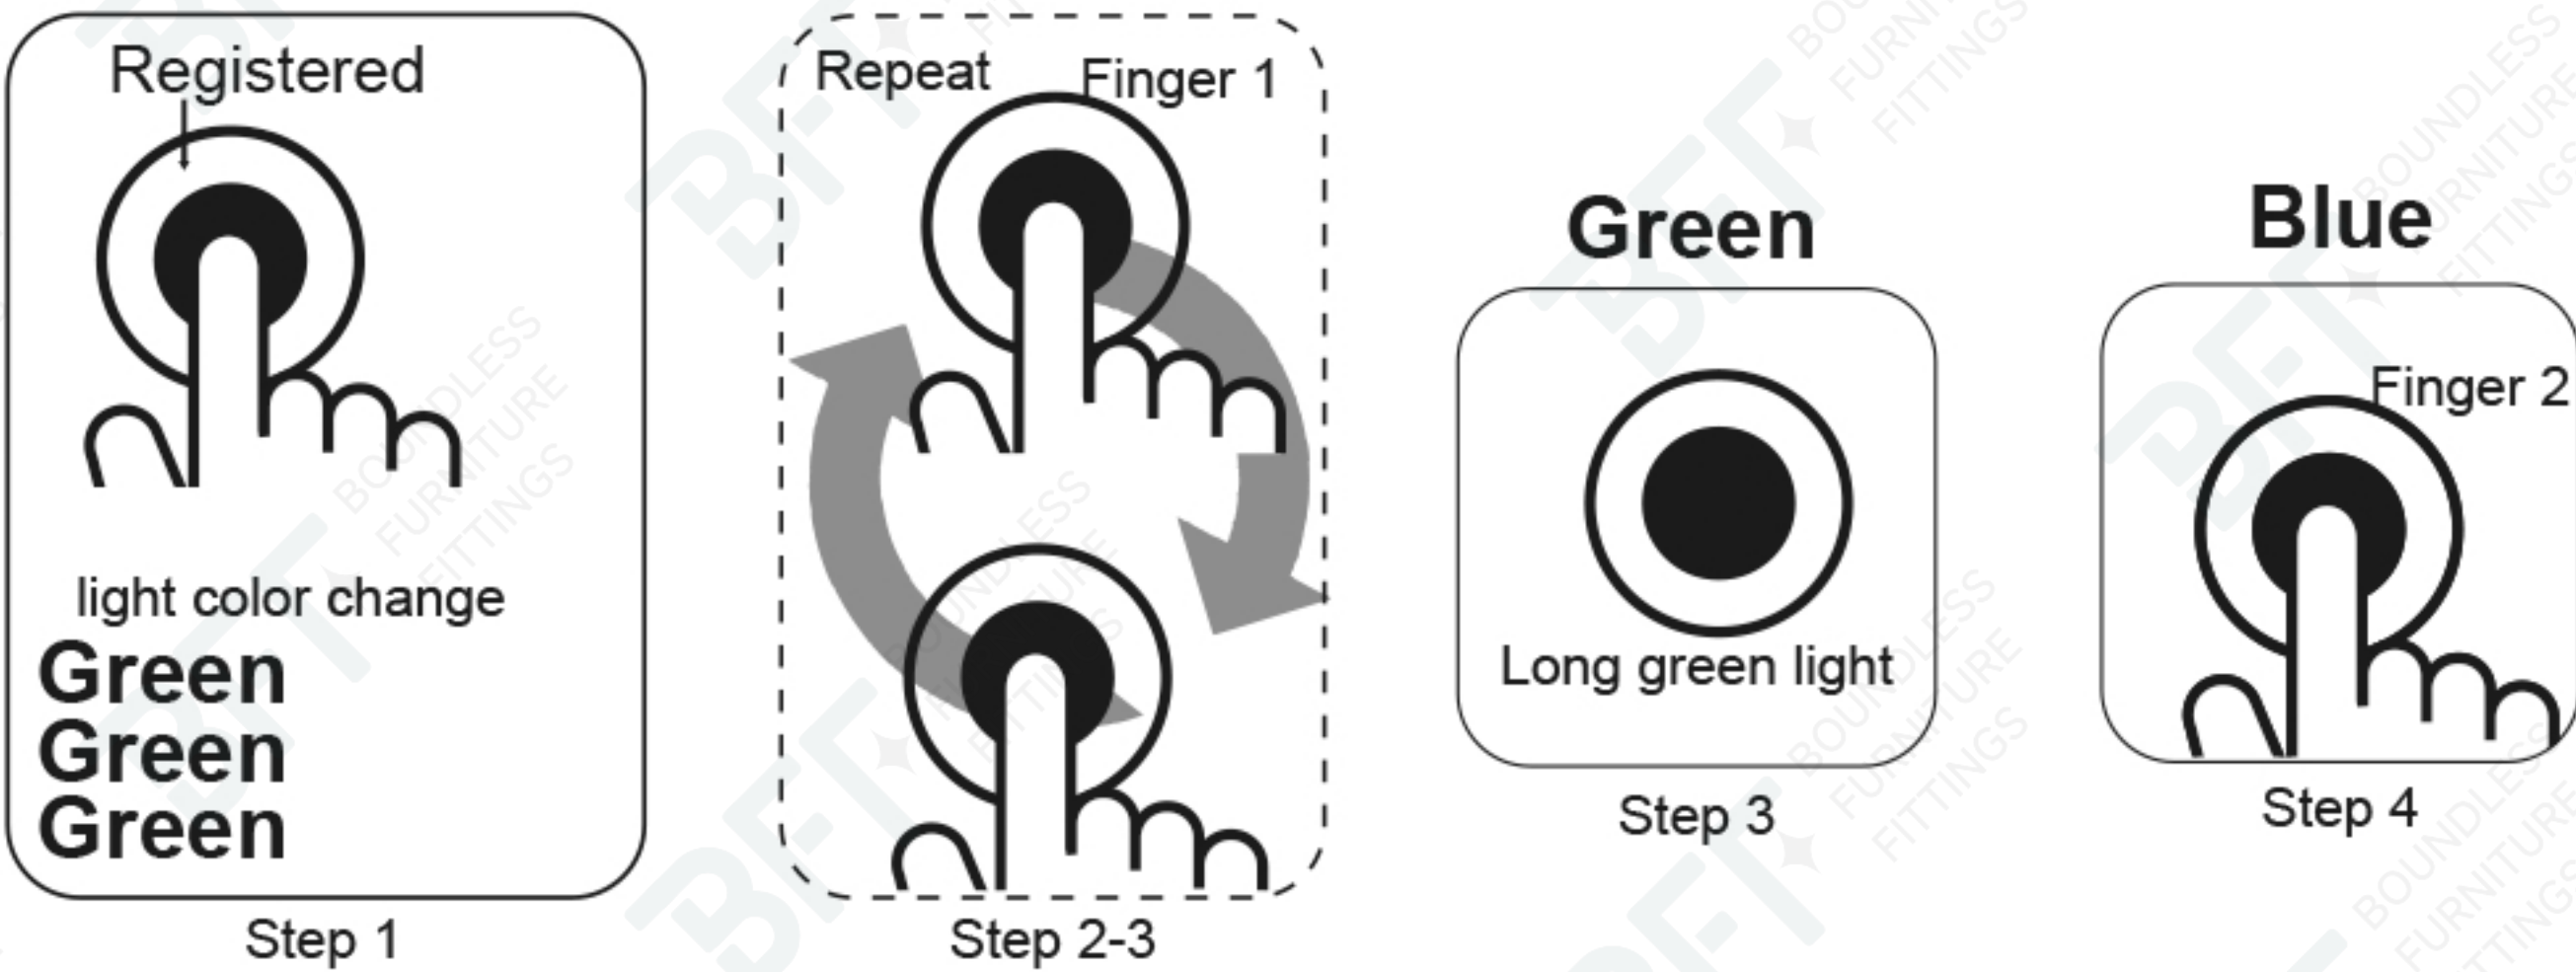

Note


- 1) Make sure add the fingerprint before using. Any finger can unlock in the factory setting
- 2) In order to keep the lock work well, to add no less than 3 fingerprints

How to delete fingerprints

- Holding with the registered finger until a red light is illuminated.
- Release your finger.
- Green light for 2 seconds, registered fingerprints will be deleted.




- 1) Insert connecting wire (See picture 2) into the front panel, then wire goes through the centre hole; Fix the panel by screw M4*22
- 2) Insert connection wire (See Picture 2) into lock case, then fix by screw ST3.5X18MM. Make sure the distance is 45MM between the centre of back panel and opening wall

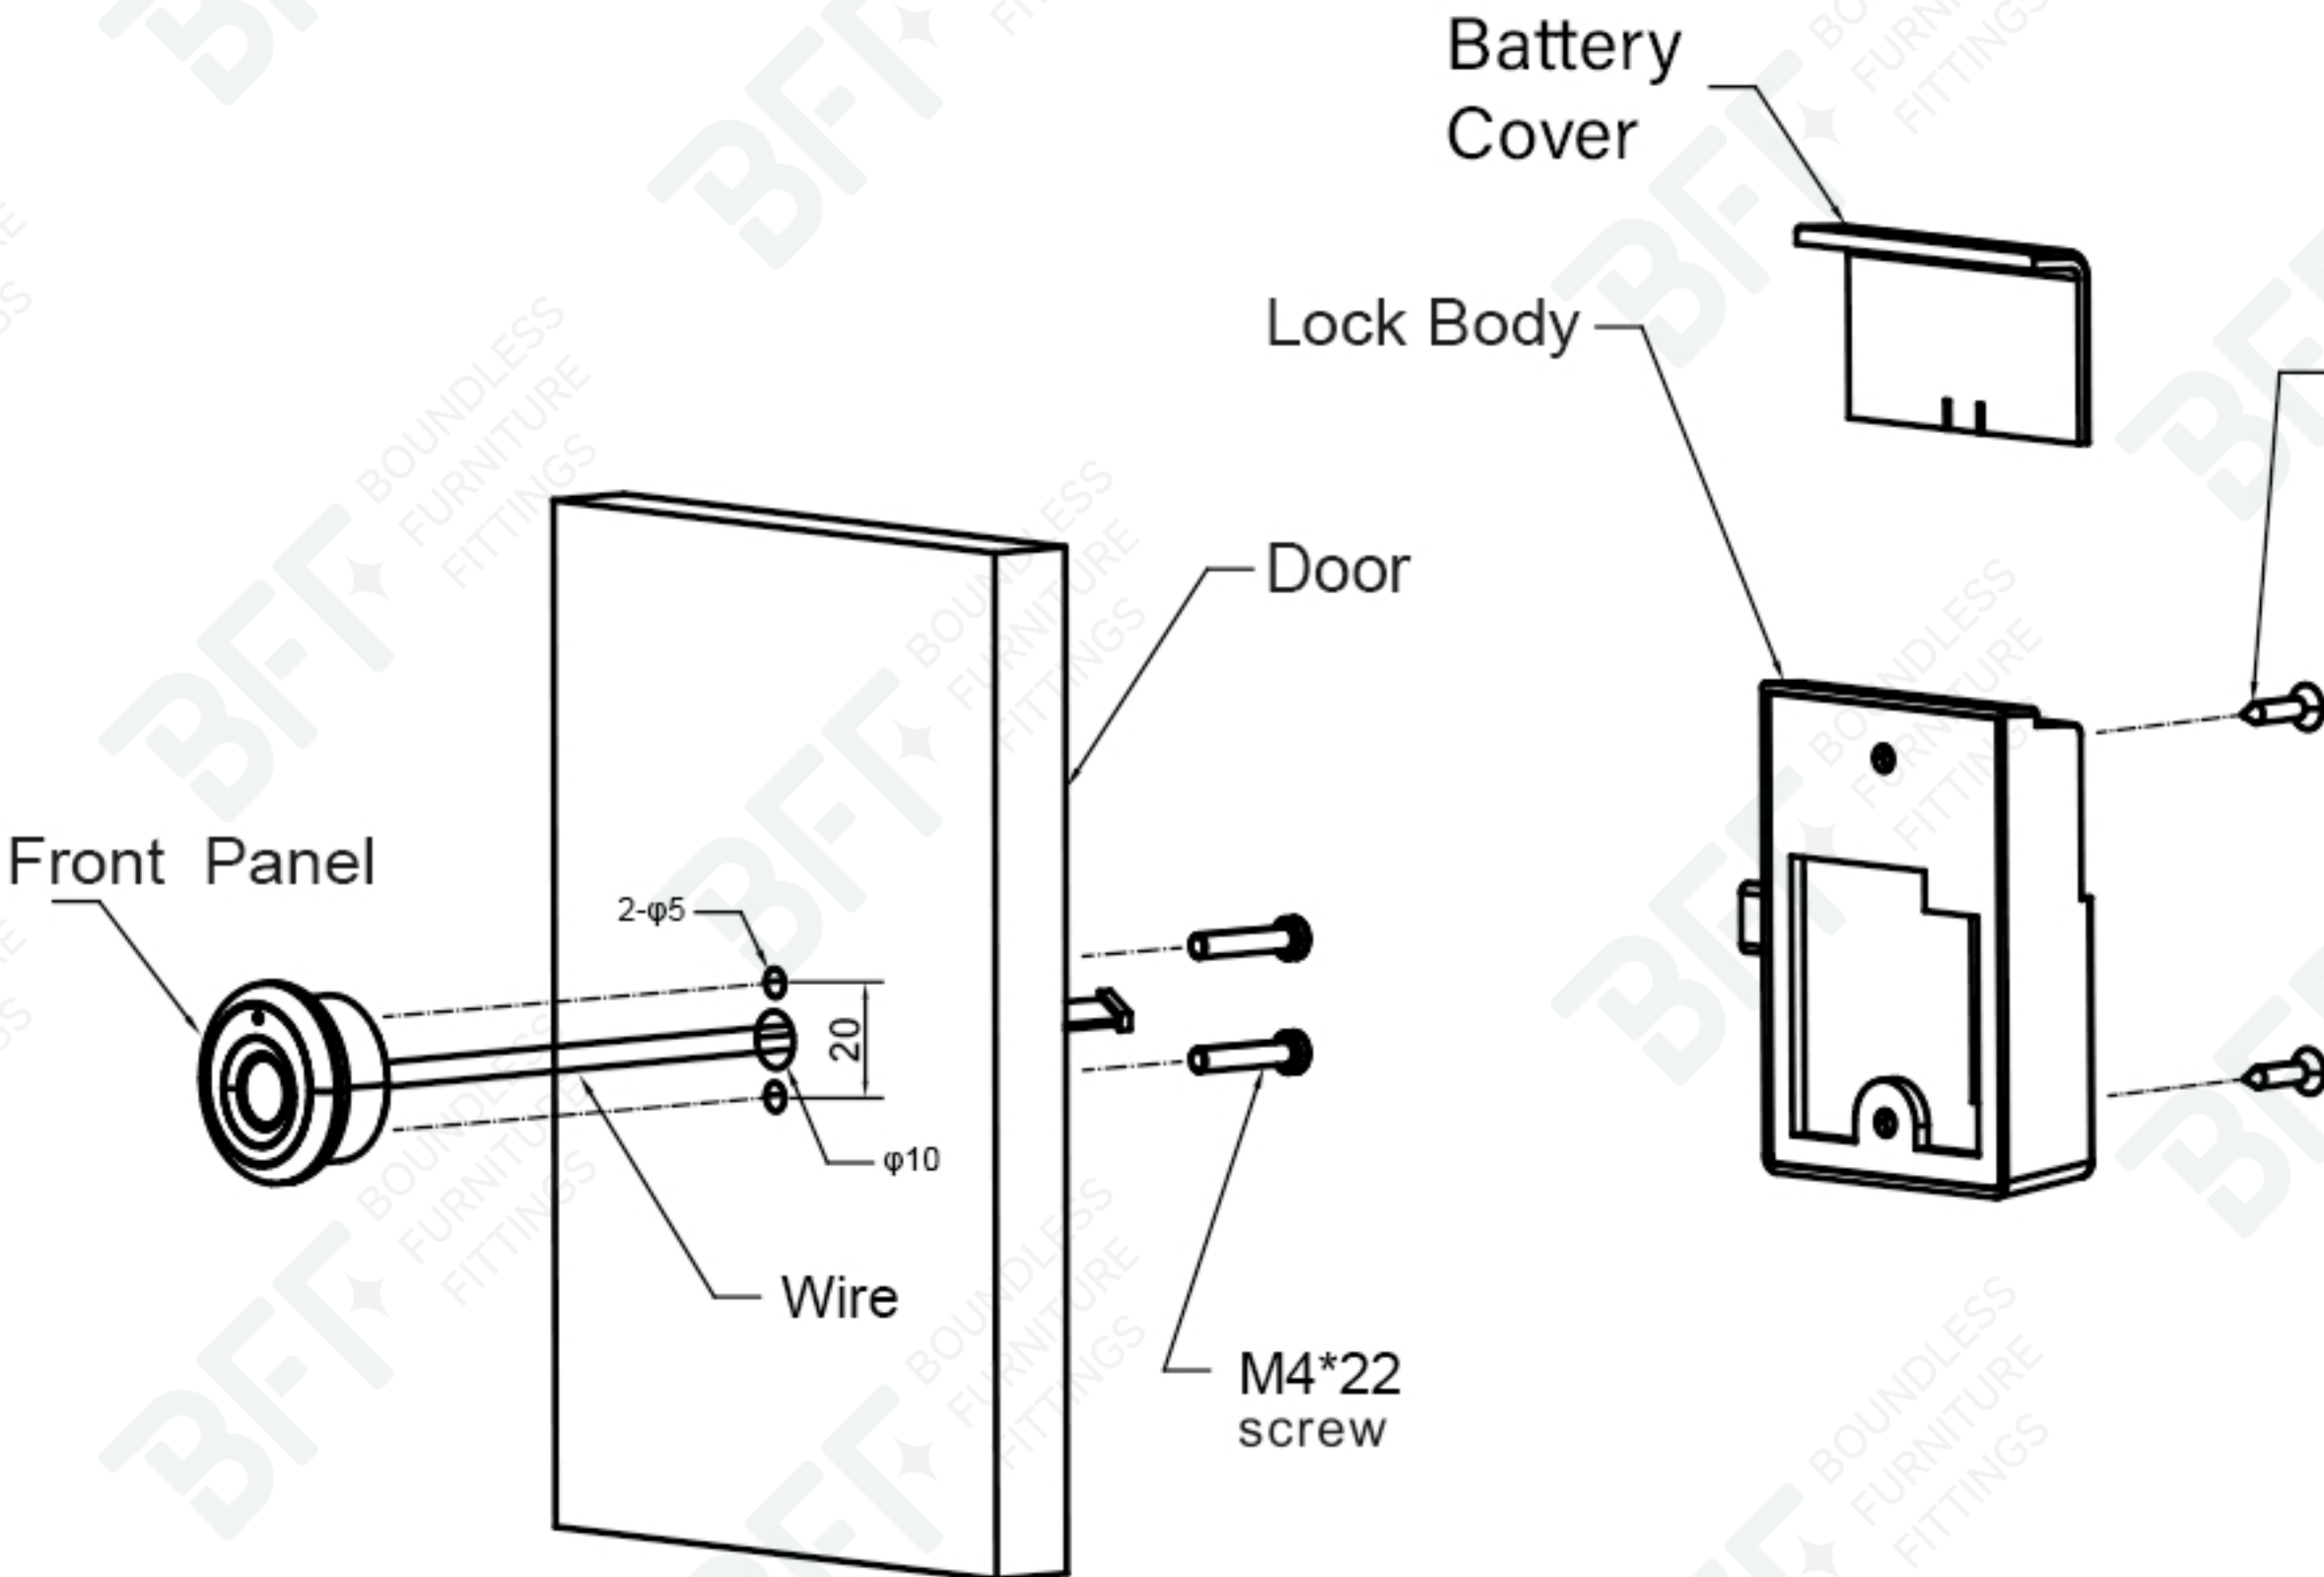

Picture 2

3. Fix the striking plate by screw ST3.5X18 (Make sure latch works well)

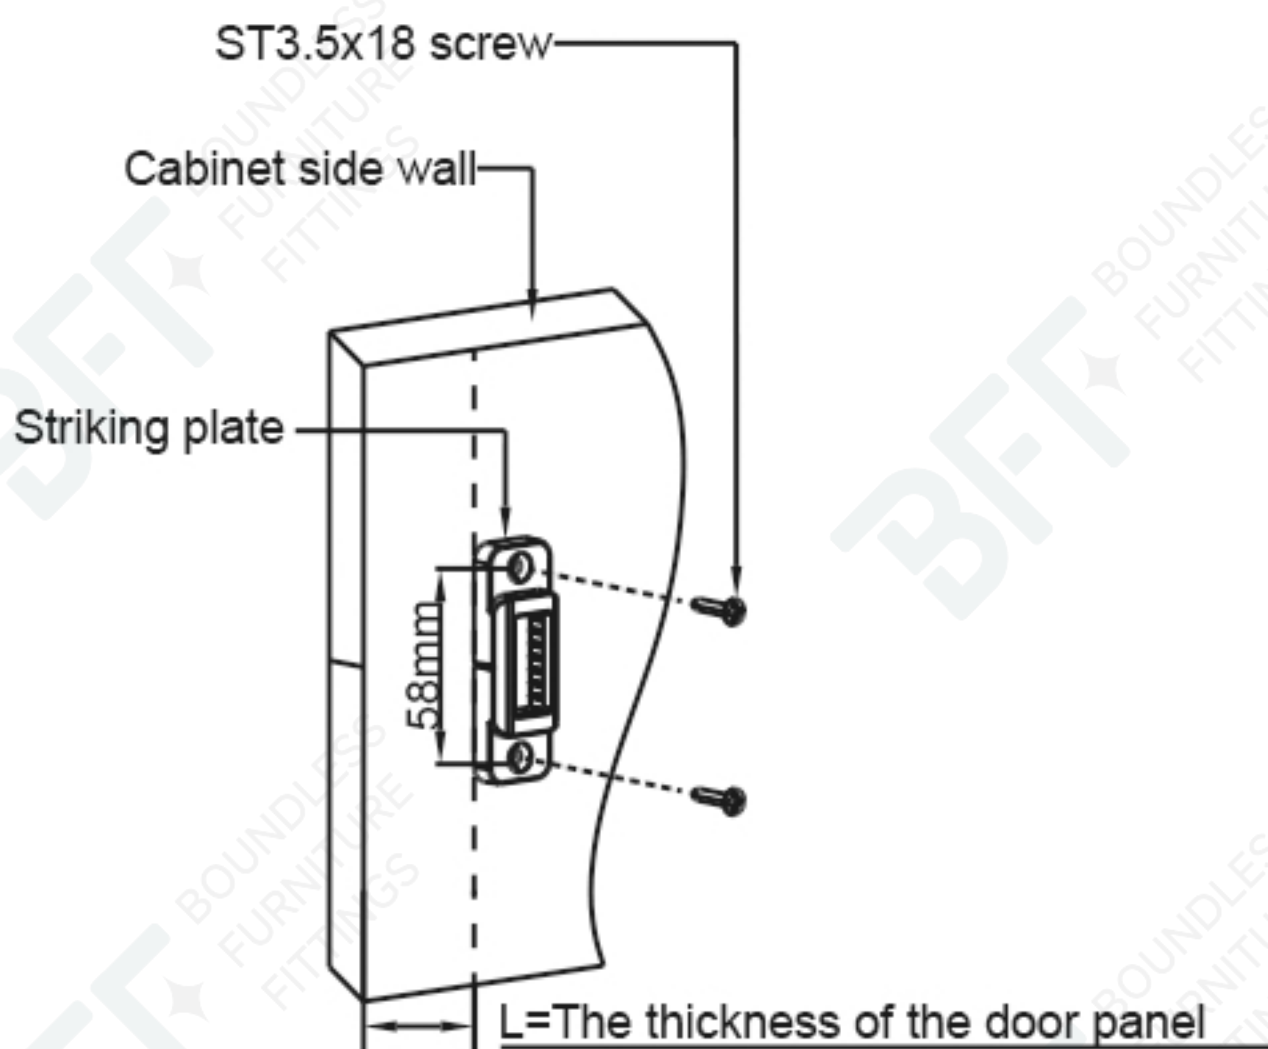


Picture 3

Other Functions

1. E-Key

- Insert E-Key
- Put any finger on sensor, green light on, all the fingerprints deleted

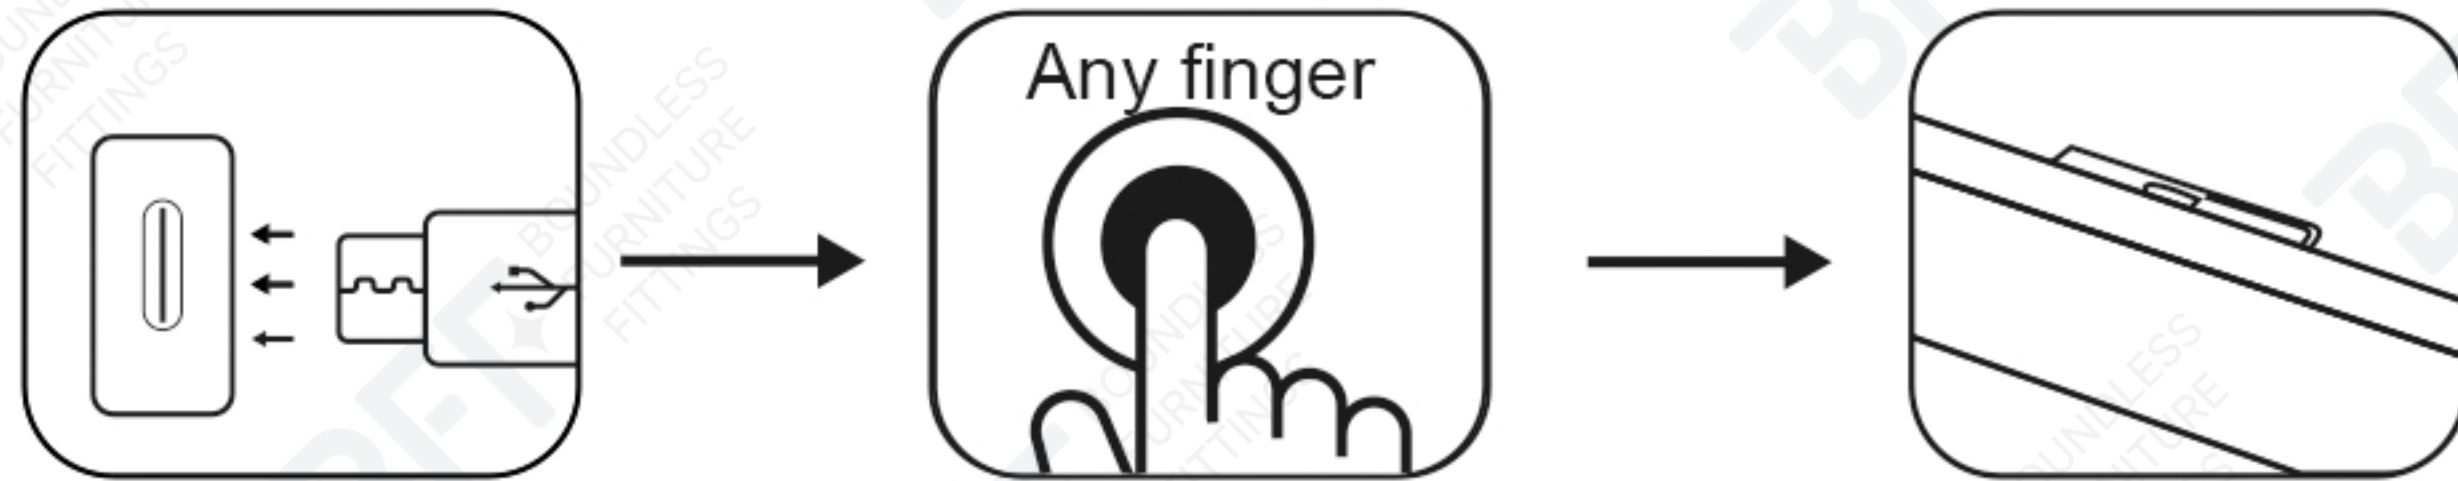


2. Low battery warning


- Insufficient power: Green and red lights flash frequently when unlocking the door. Please replace the battery in time
- Battery type: 3*AAA alkaline batteries. Prohibit the use of carbon batteries

3. Emergency power


- Can be connected to a power bank or mobile plug for external power supply when the power is low. Replace the battery after unlocking.

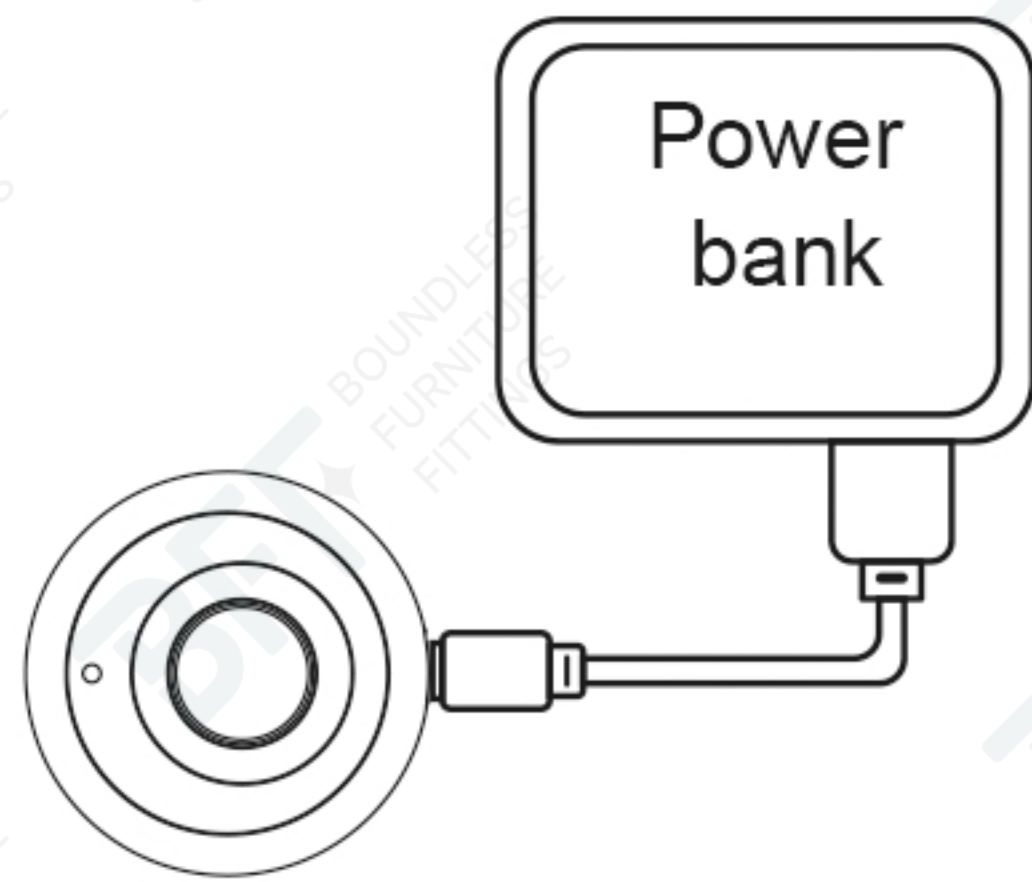

COMPONENT

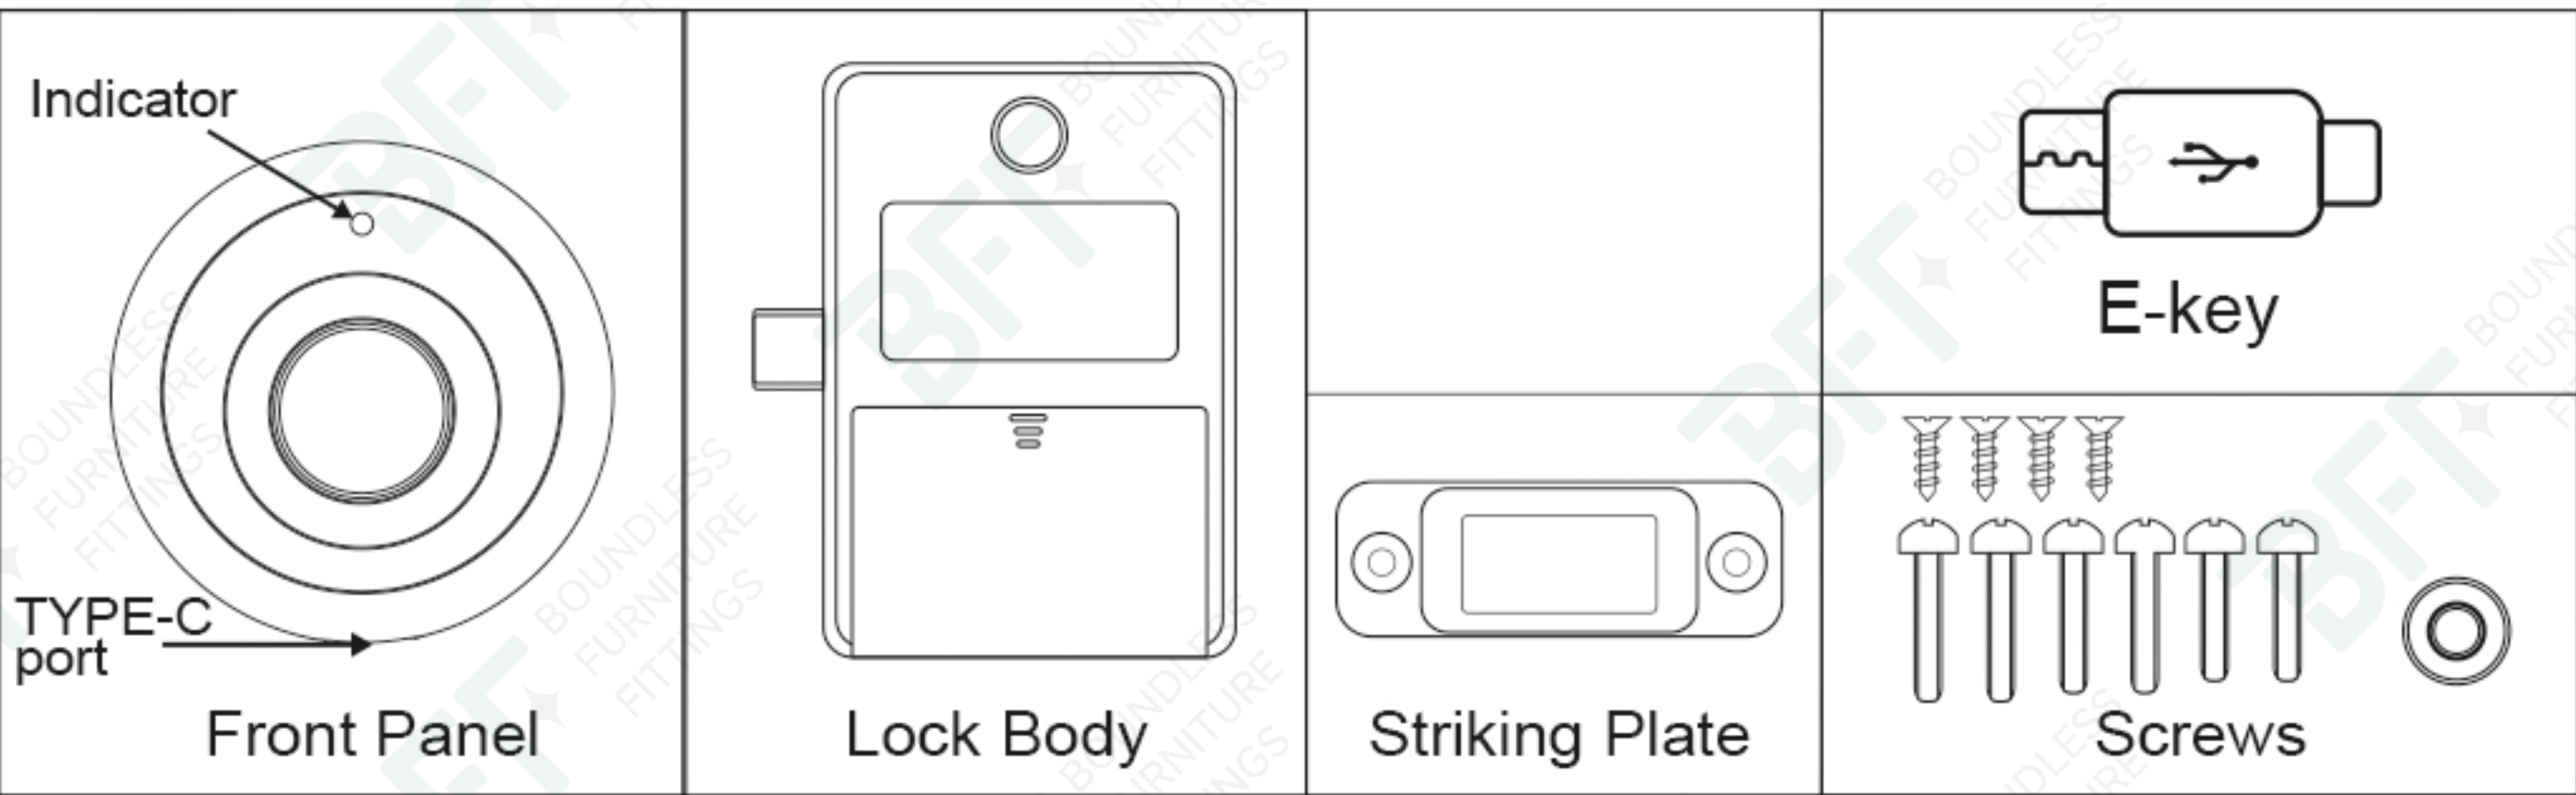

INSTALLATION DRAWING

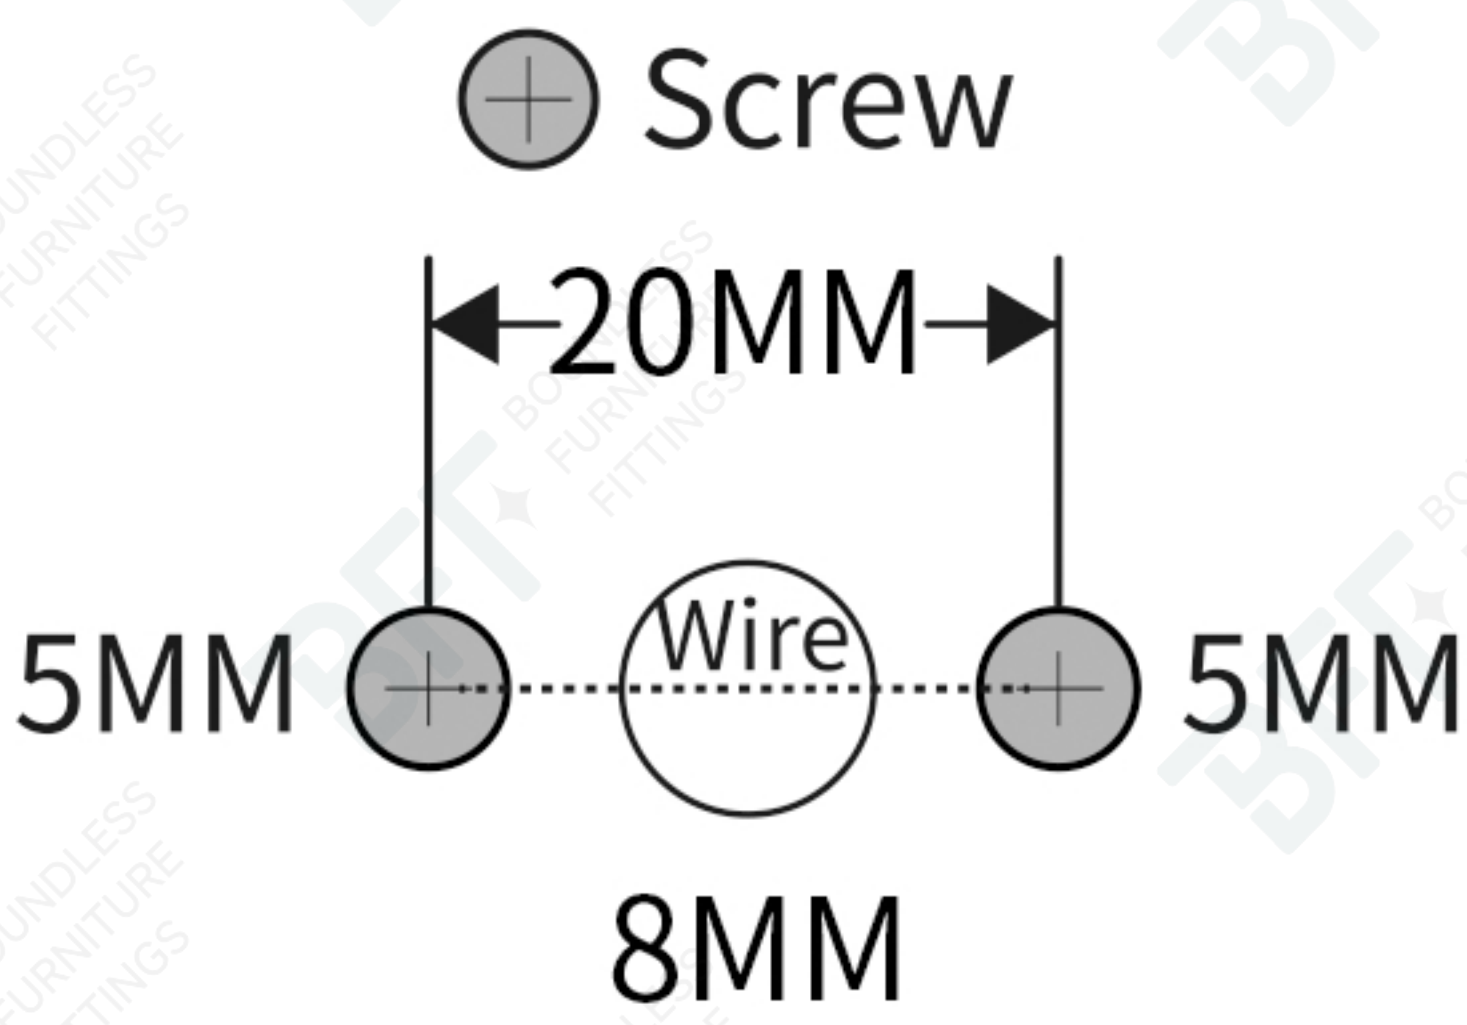

Follow the drawing to drill the hole