


FINGERPRINT CABINET LOCK
USER MANUAL

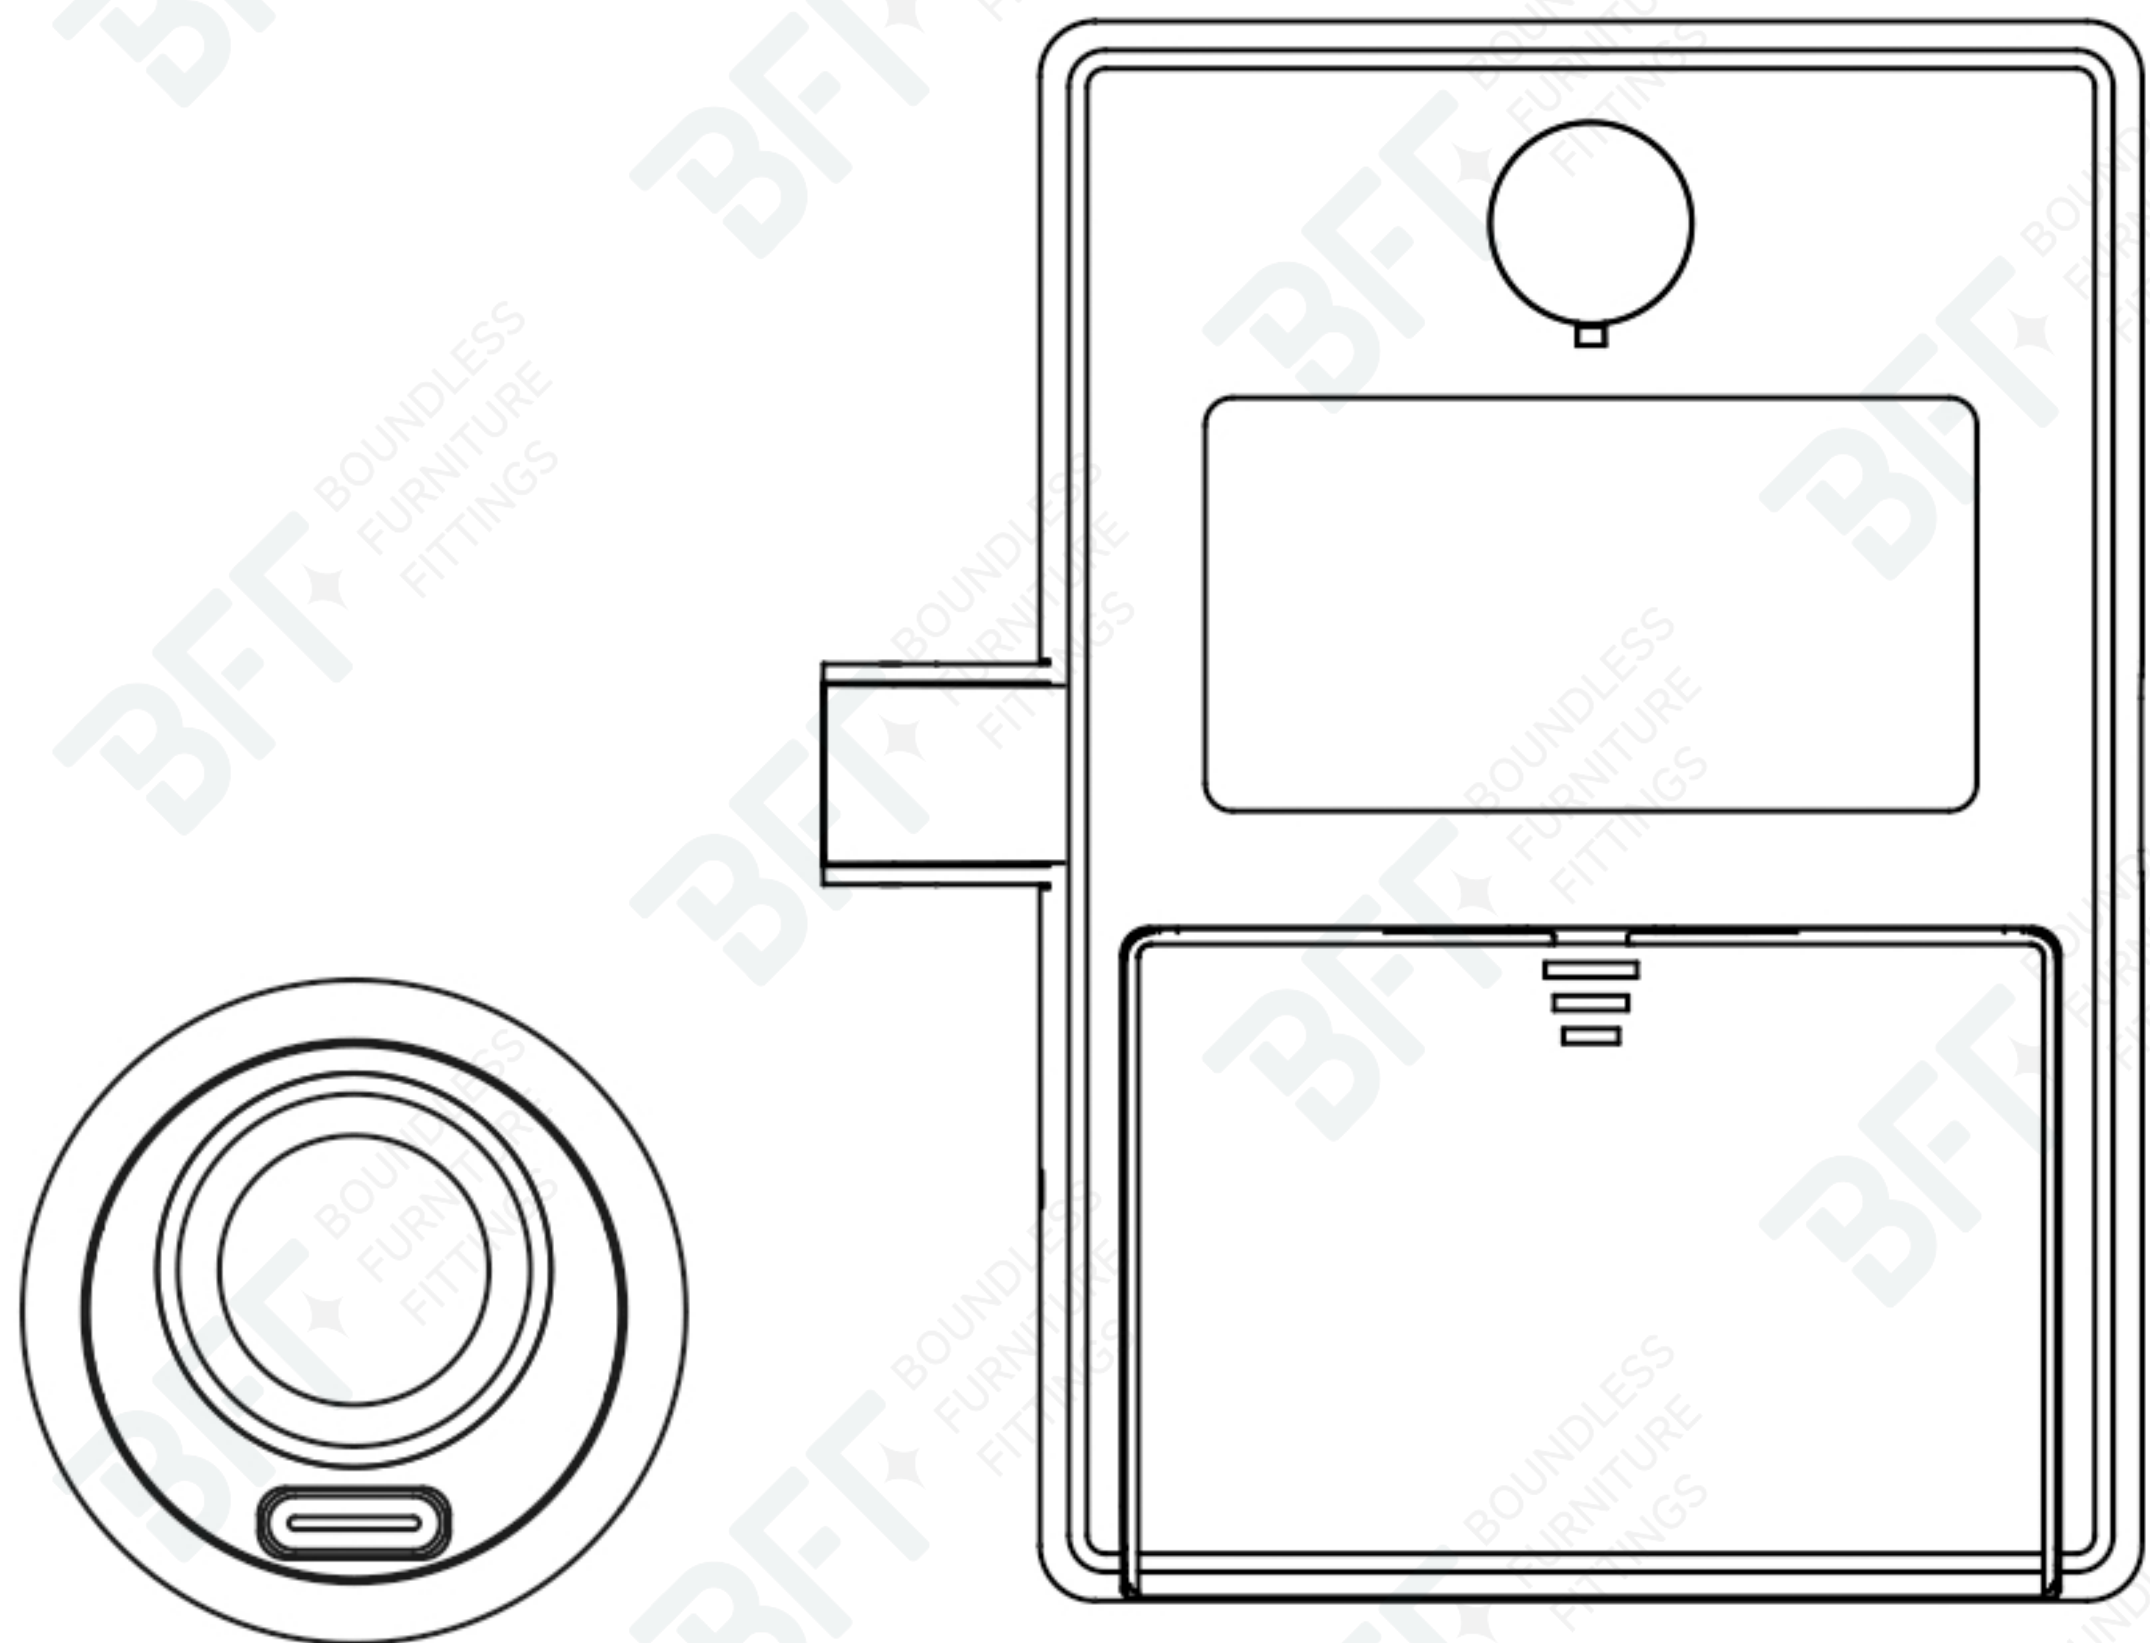


Feature

- Biometric sensors with high sensitivity
- Fingerprint capacity: 20 groups
- E-key for emergency unlocking and management
- Usage Scenarios: drawer, cabinet, wardrobe etc.


Installation Instructions

1. Put the installation drawing on the door, approx. 45mm between the door frame and center hole (Picture 1), then drill the hole.

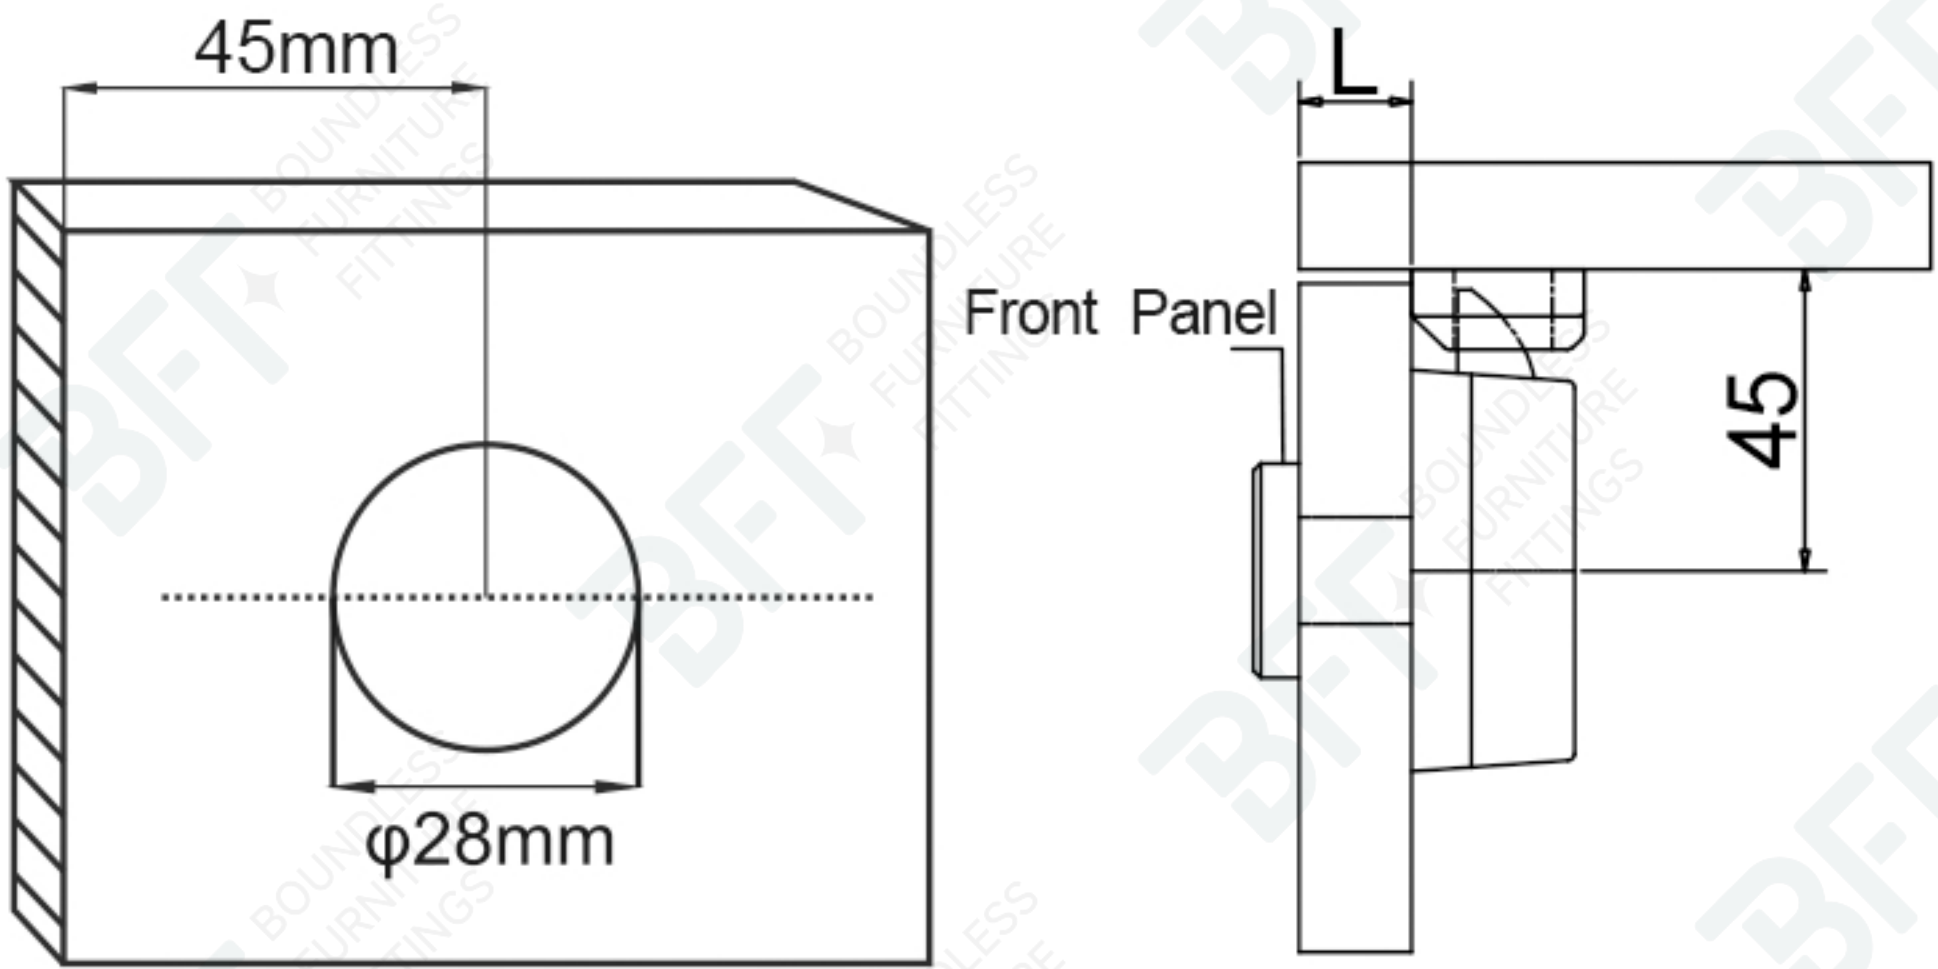


Picture 1

wire connection

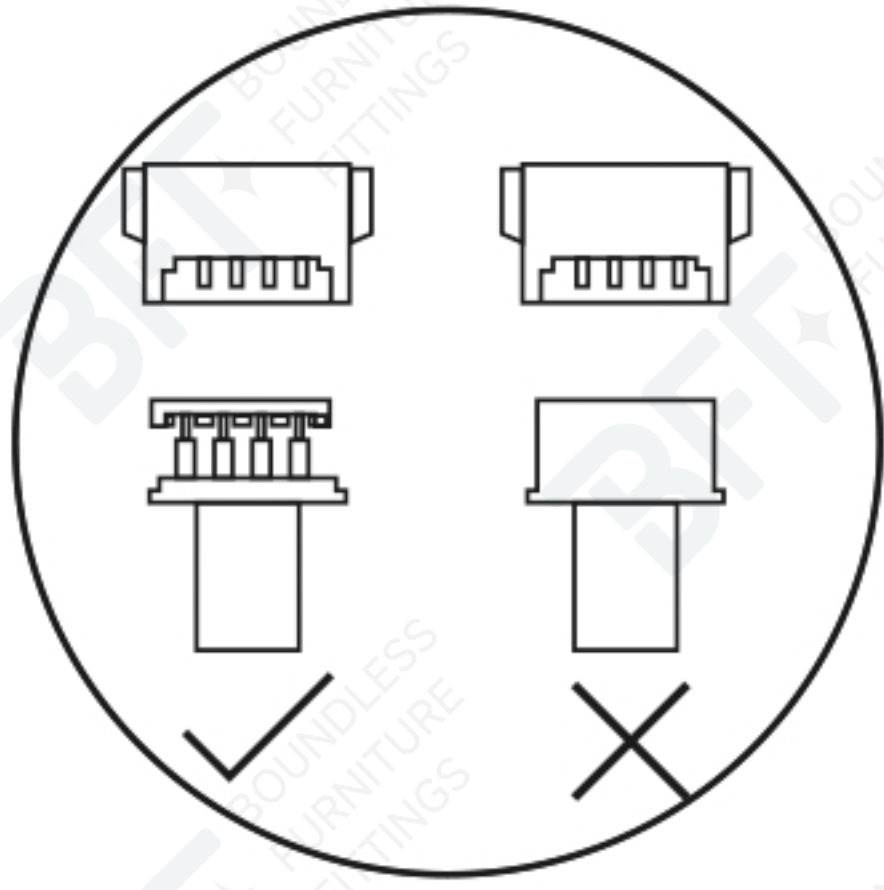

How to add new fingerprints

→Place your (registered) finger on the sensor. Waiting green light to come on for the second time then release your finger.
→ Blue light is on, you can start recording your fingerprints.
→ Repeat placing your finger on the sensor (blue and green lights flash alternately) until the green light stays on for 2 seconds (fingerprint registration is successful).
→The blue light is on again, the next fingerprint can be recorded.(If fingerprint ing is not required, wait for the light to go out)

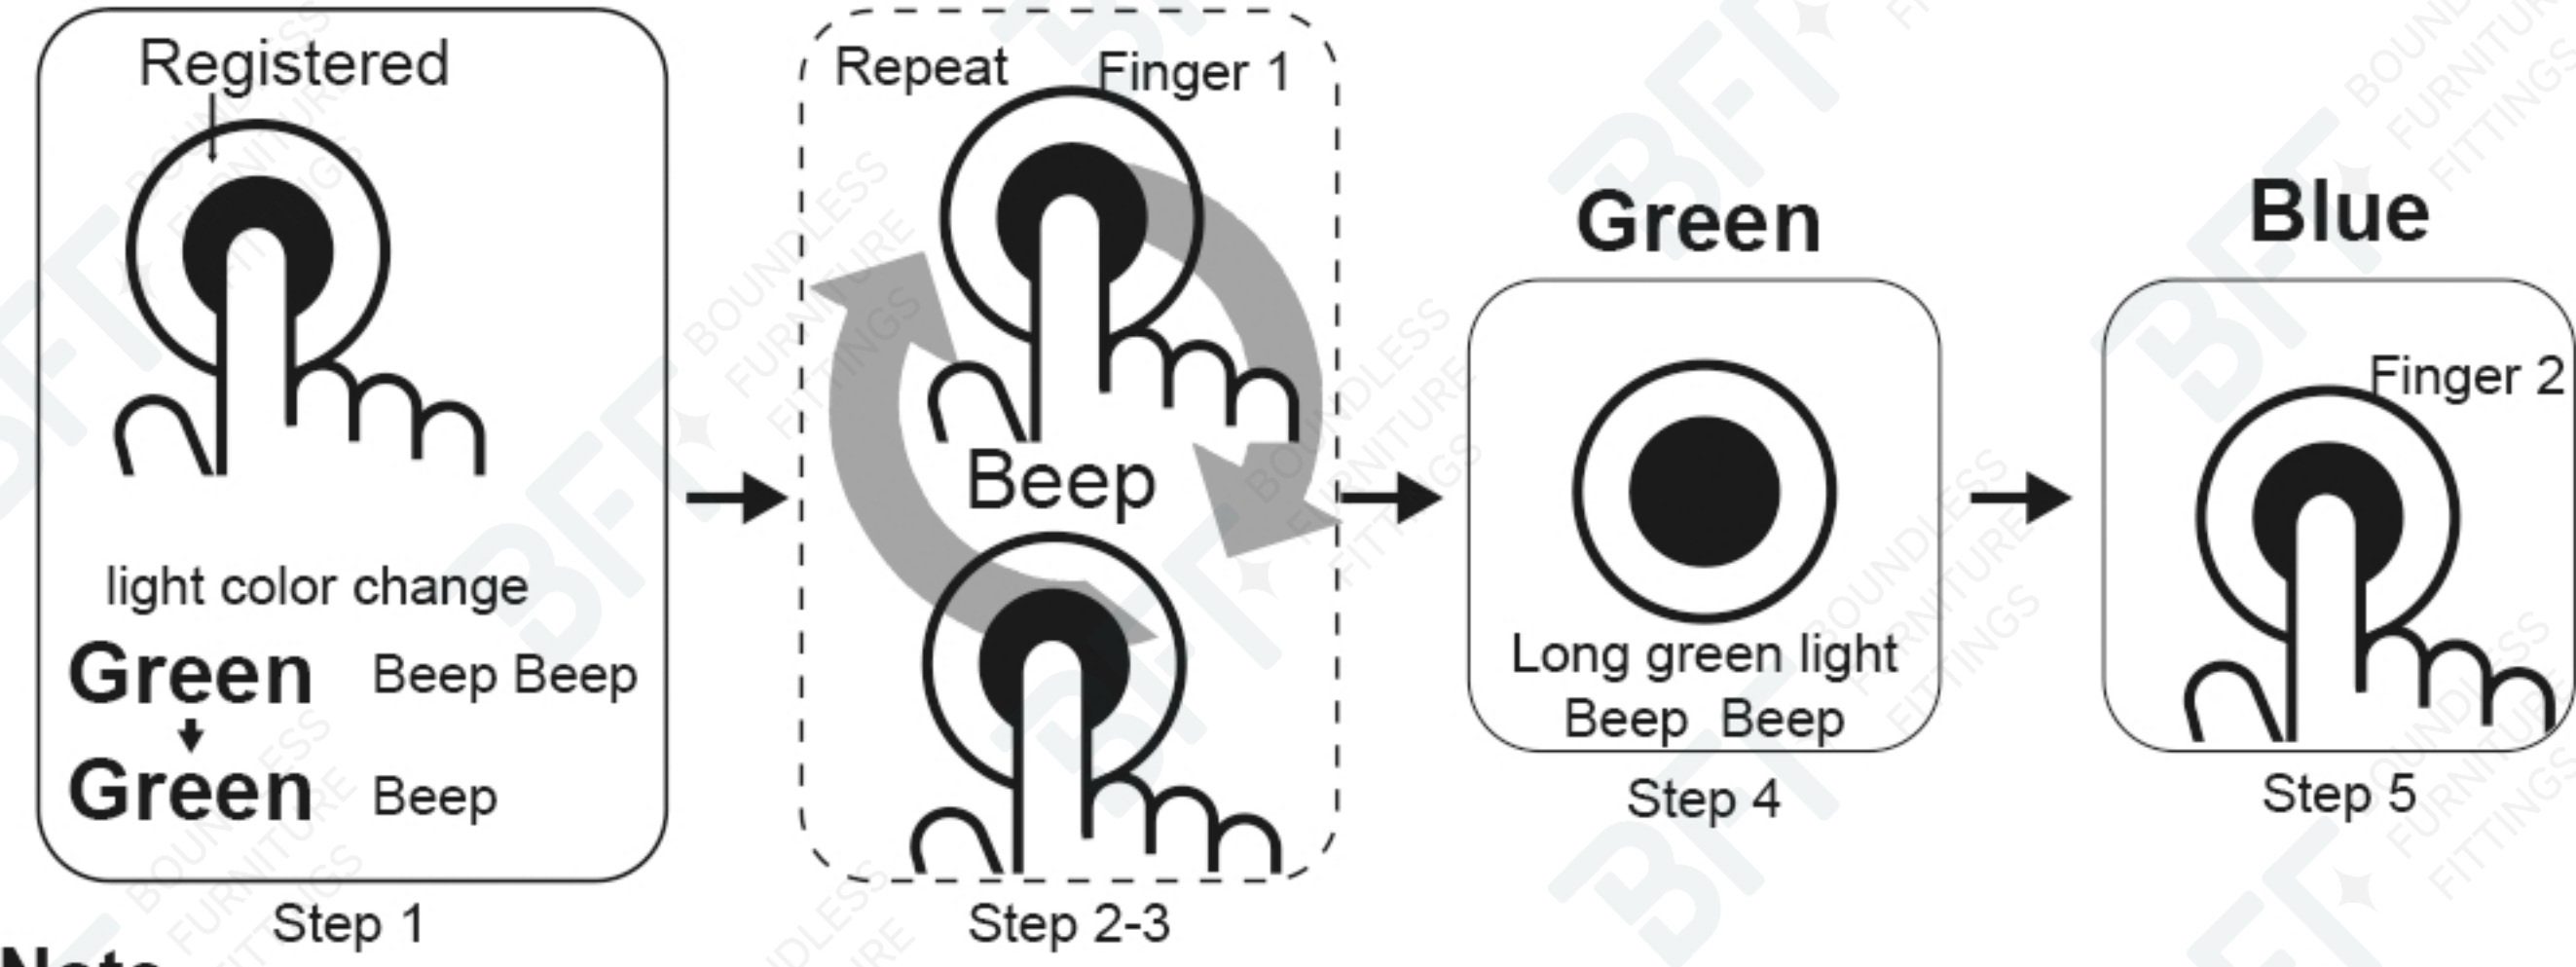

Note

- 1). Make sure add the fingerprint before using. Any finger can unlock in the factory setting
- 2) In order to keep the lock work well, to add no less than 3 fingerprints

How to delete fingerprints


Method 1

→Holding with the registered finger until a red light is illuminated.
→Release your finger.
→Hearing the sound "Beep, Beep", registered fingerprint will be deleted.



2. Install the front panel and back lock


Wire goes through the center hole and fix the front panel by washer and screw M3X6, then connect the back lock, (Tide up the wire not crush), fix back lock by screw ST3.5X18.

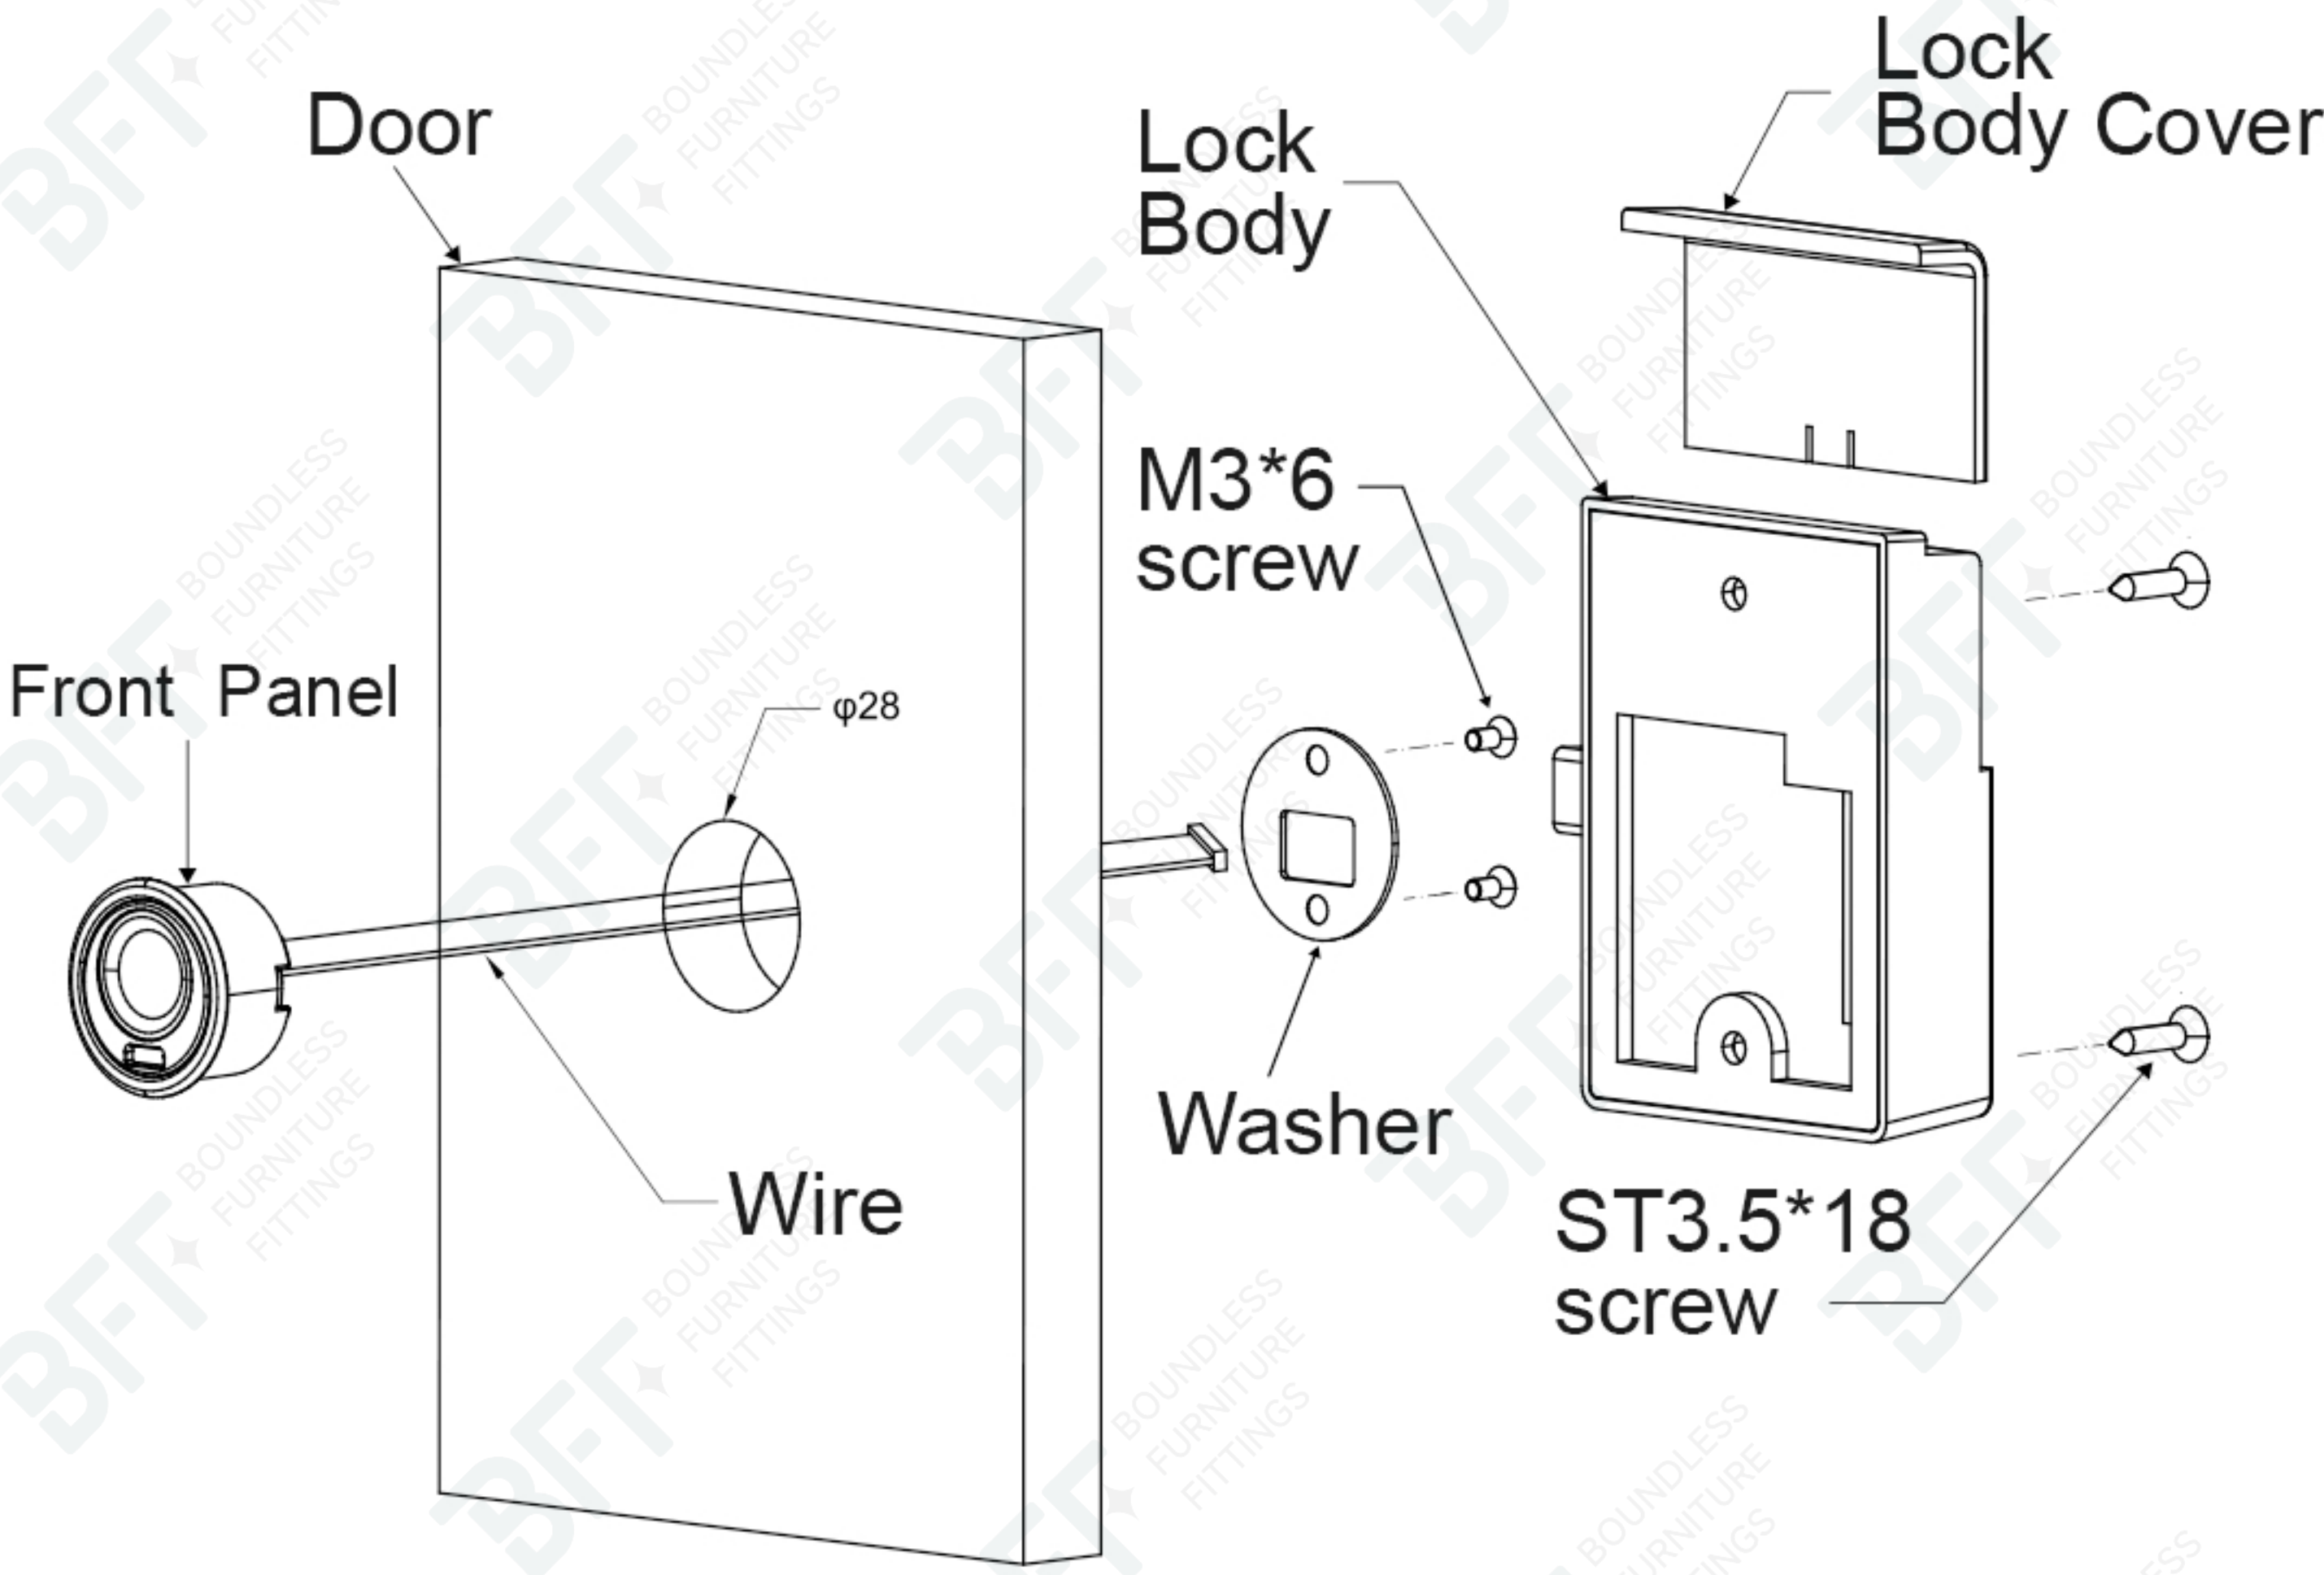

Picture 2

Method 2


→Insert E-Key
→Place any fingerprint and wait for the green light to red.
→Hear the sound"Beep,Beep",registered fingerprints will be deleted.

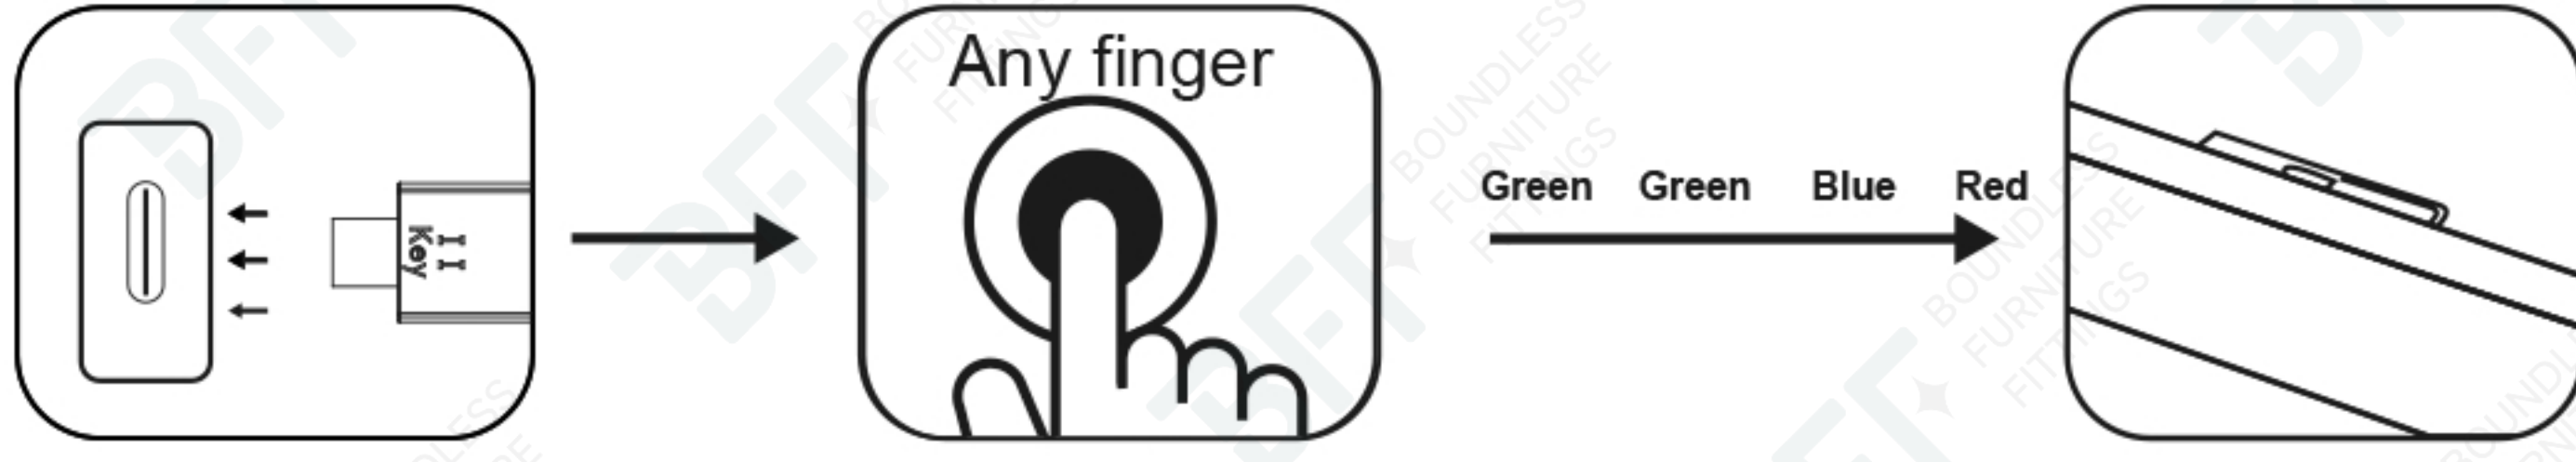

How to change manual mode( register fingerprint is required to lock and unlock)


Method 1

→Holding with the registered finger until a blue light is illuminated.
→Release your finger.
→Hearing the sound "Beep, Beep".
→Manual mode change complete.

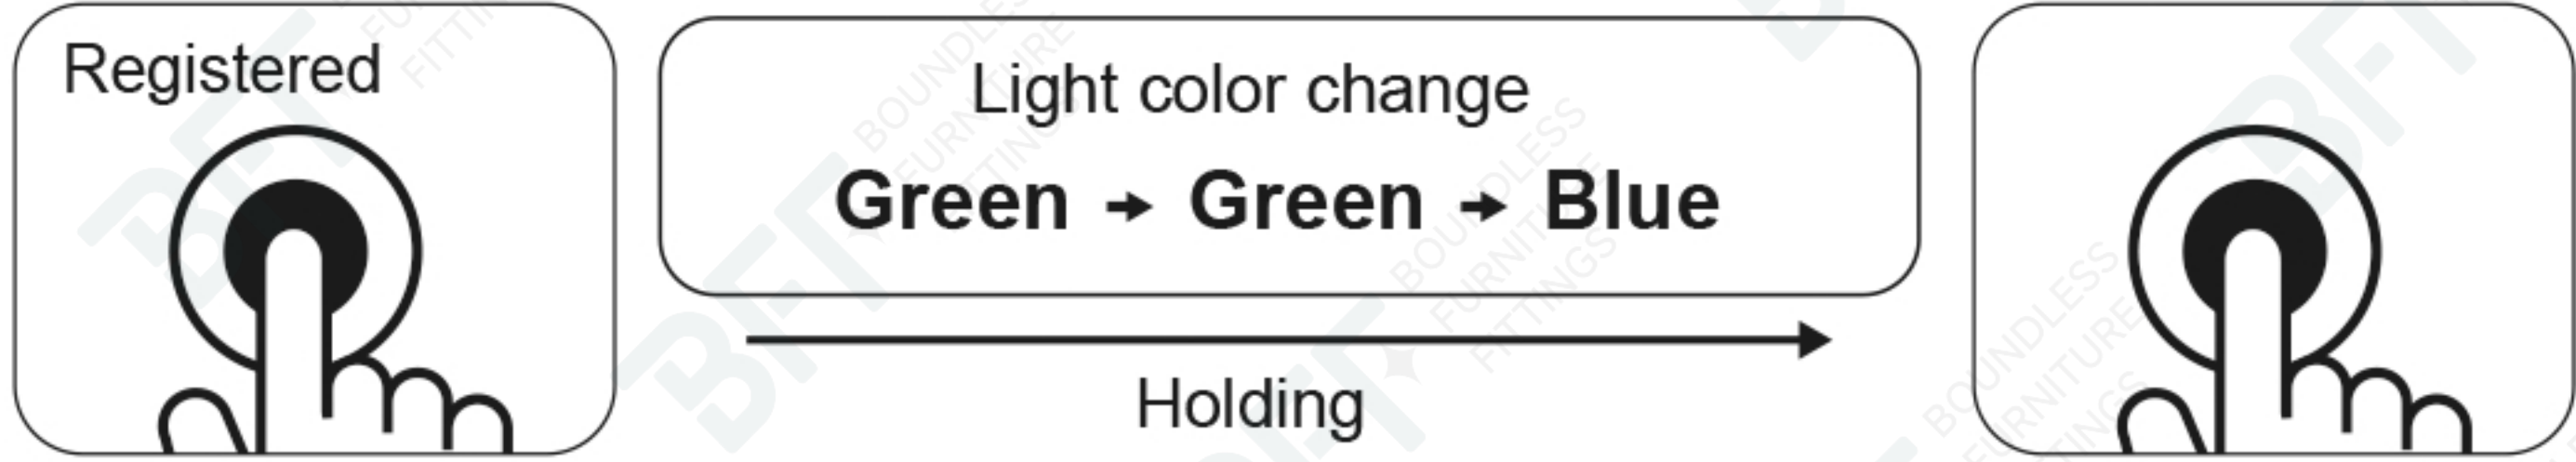


Method 2

→Inserting E-key and holding with any finger until a blue light is illuminated.
→Release your finger.
→Hearing the sound "Beep, Beep".
→Manual mode change complete.

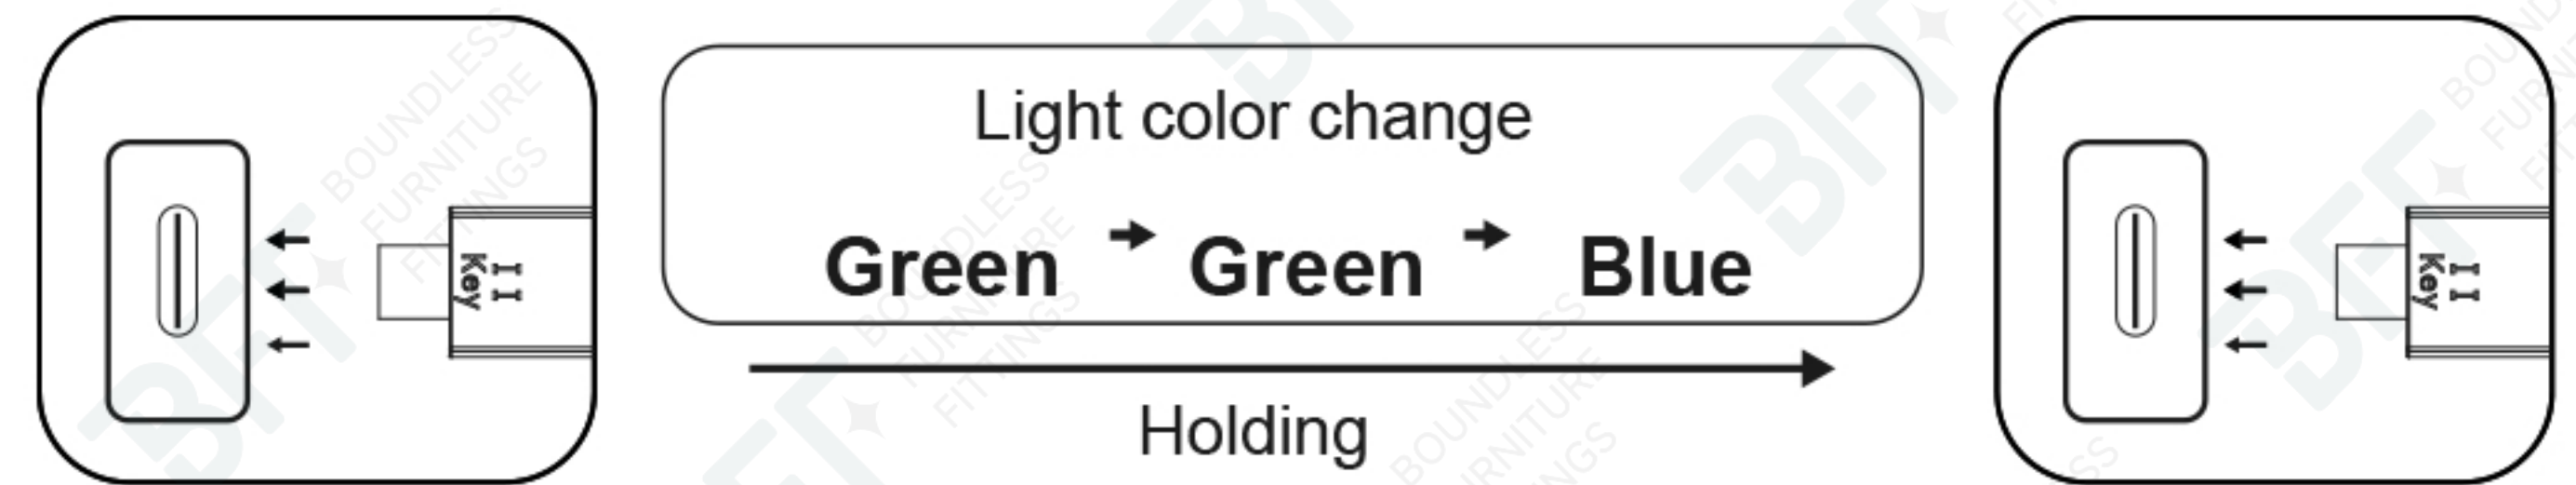

	Door Thickness (mm)	Screw
	16mm~17mm	M3X6
	17mm~19mm	M3X8
	18mm~21mm	M3X10

3. Fix the striking plate by screw ST3.5X18 (Make sure latch works well)

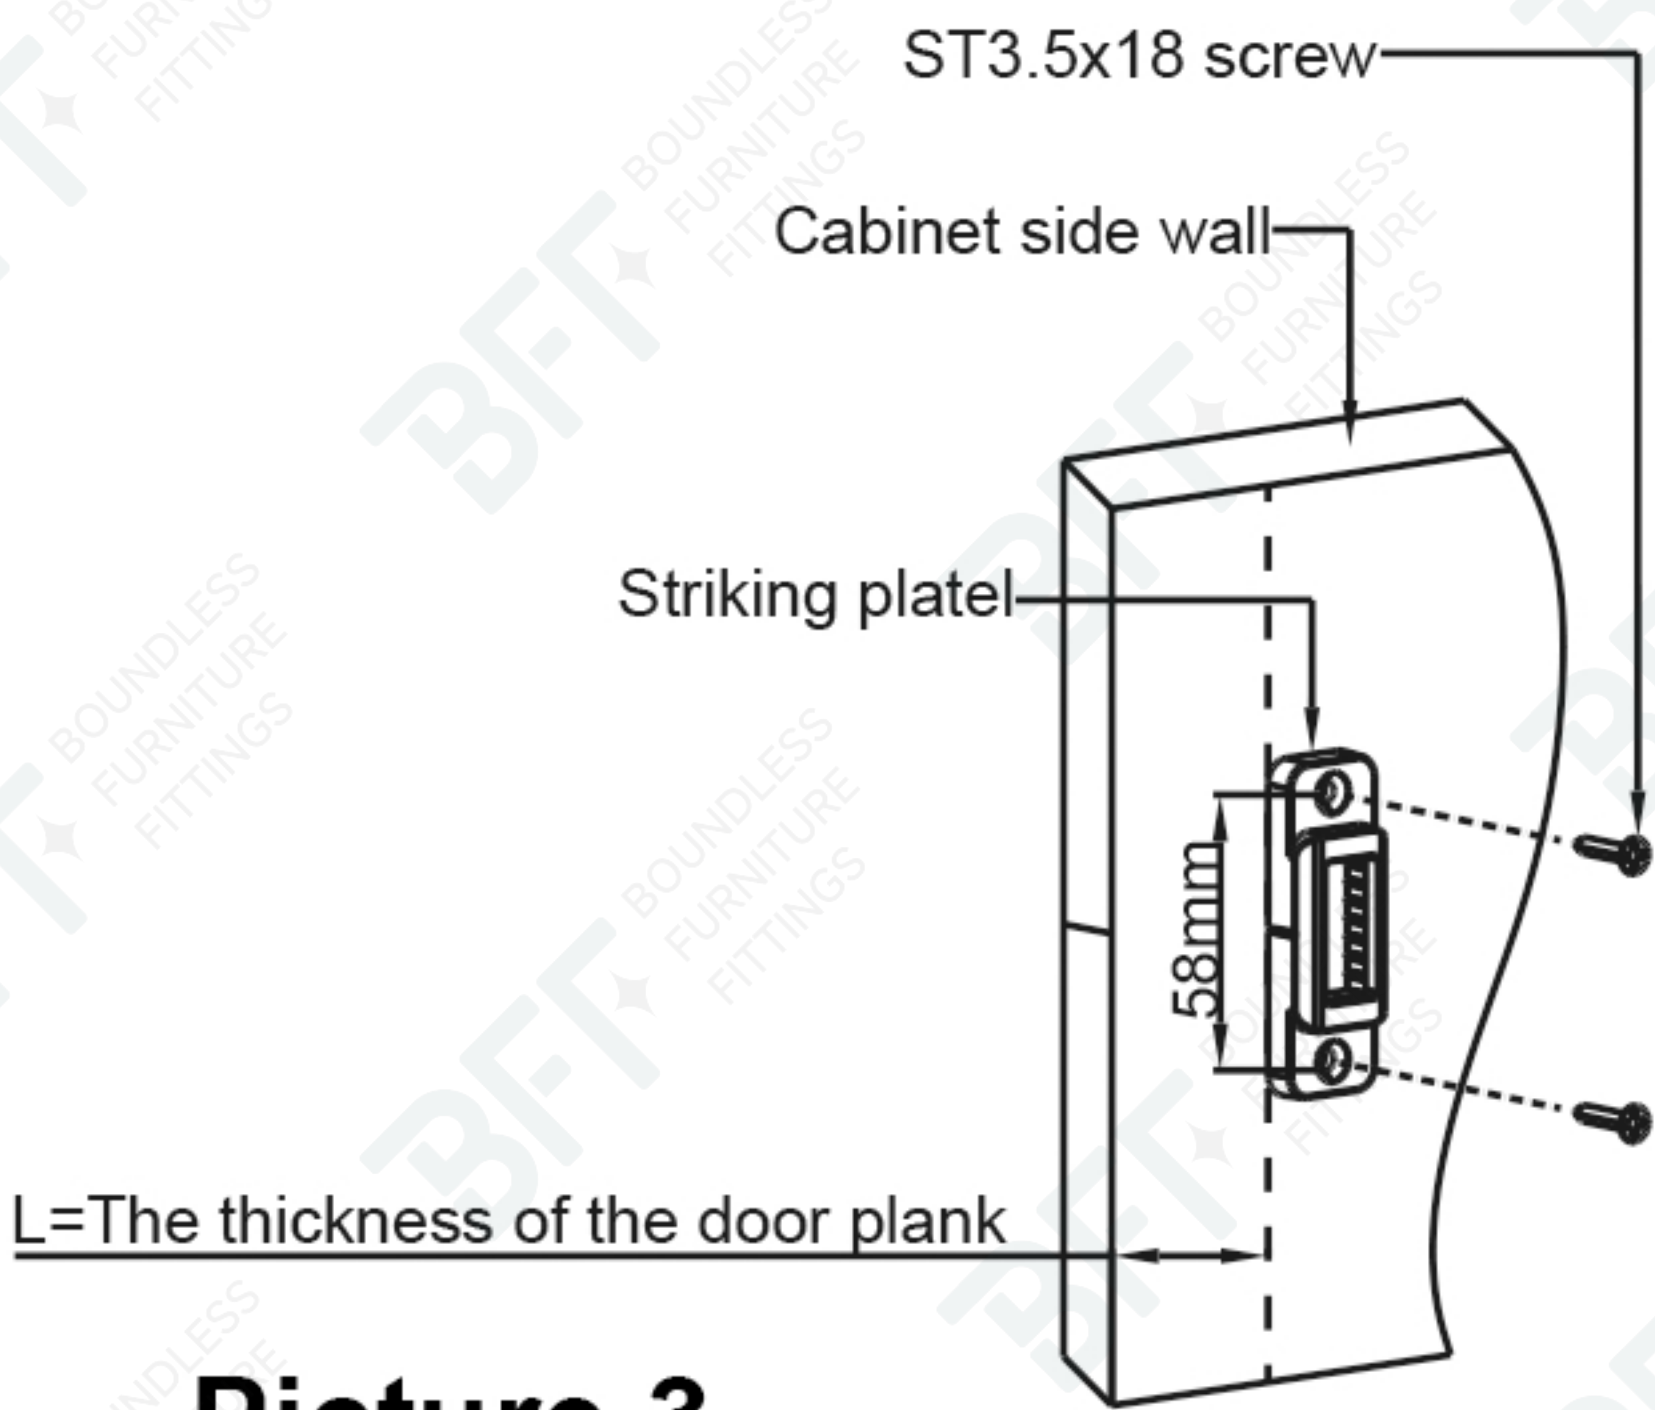


Picture 3

Other Functions

1.E-Key

- Insert E-Key
- Green light on,unlocked
- Pull the door open

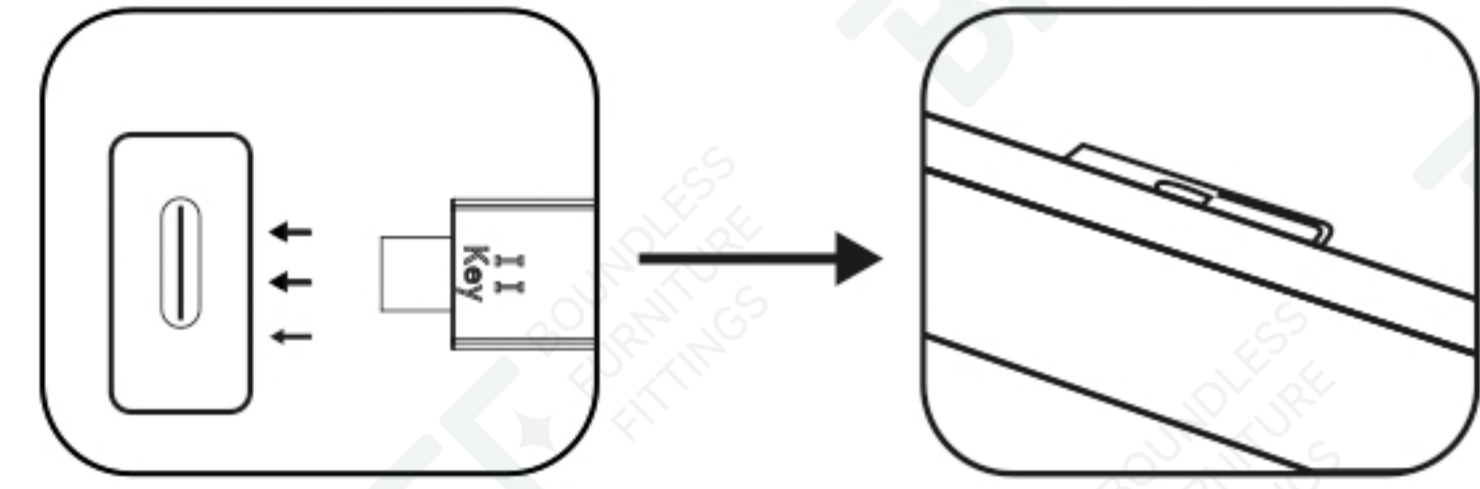


2. Low battery warning


- Insufficient power: Green and red lights flash frequently when unlocking the door. Please replace the battery in time
- Battery type: 3\*AAA alkaline batteries. Prohibit the use of carbon batteries

3. Emergency power


- Can be connected to a power bank or mobile plug for external power supply when the power is low. Replace the battery after unlocking.
- Fingerprint error and low battery occur at the same time, insert the E-key and external emergency.

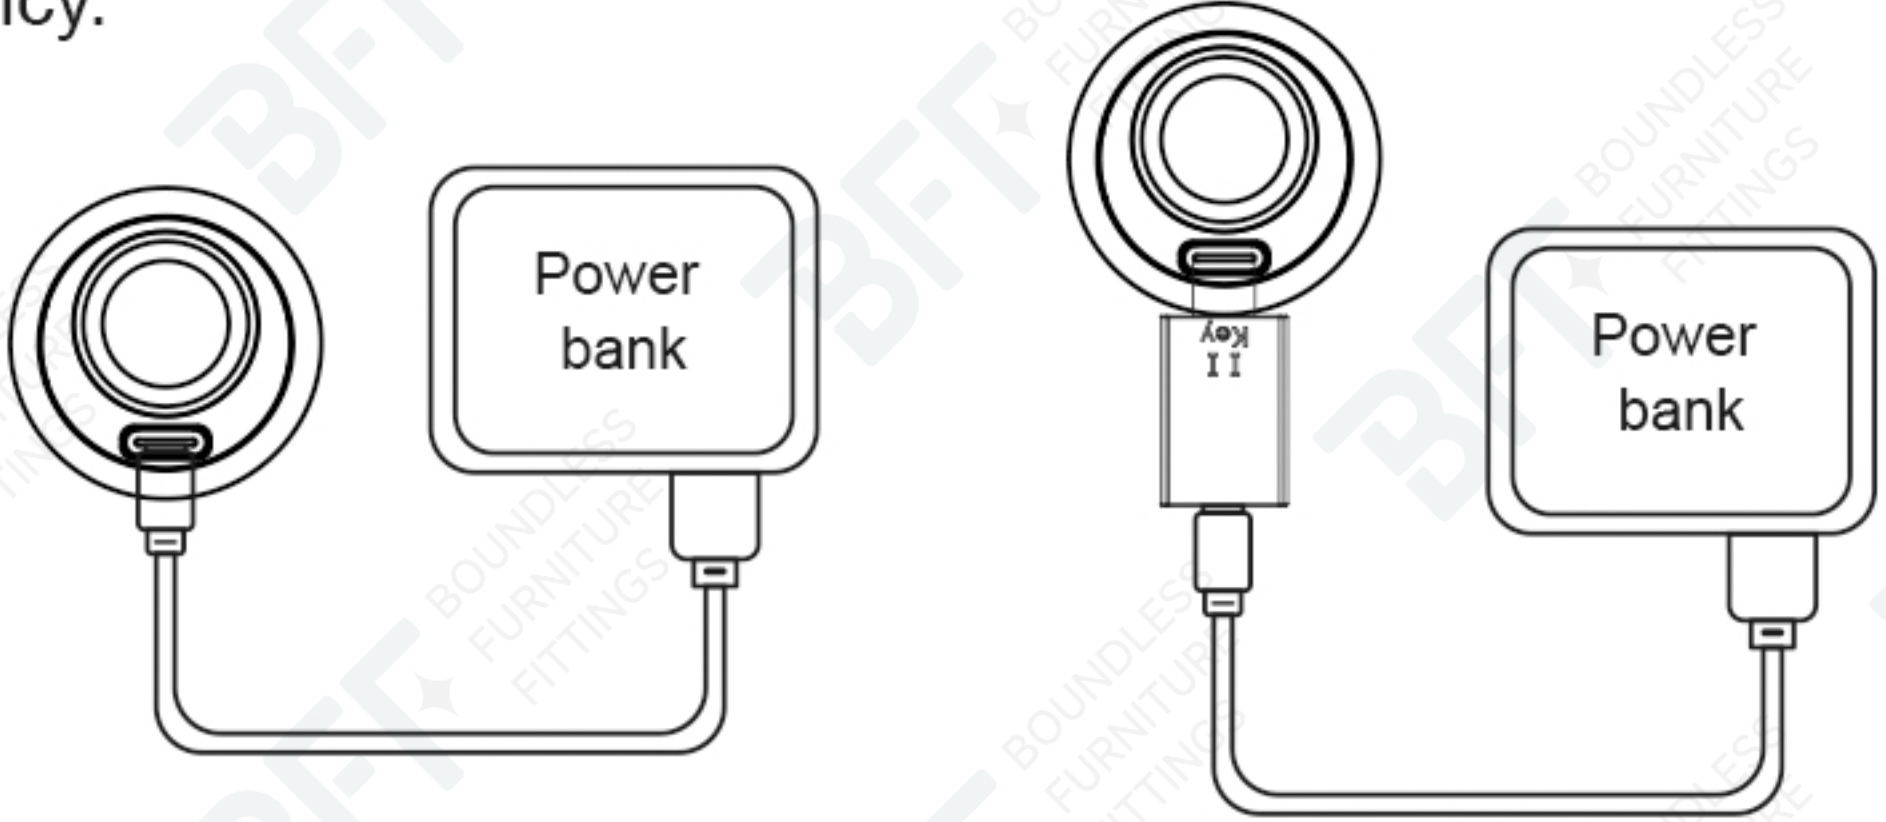

COMPONENT

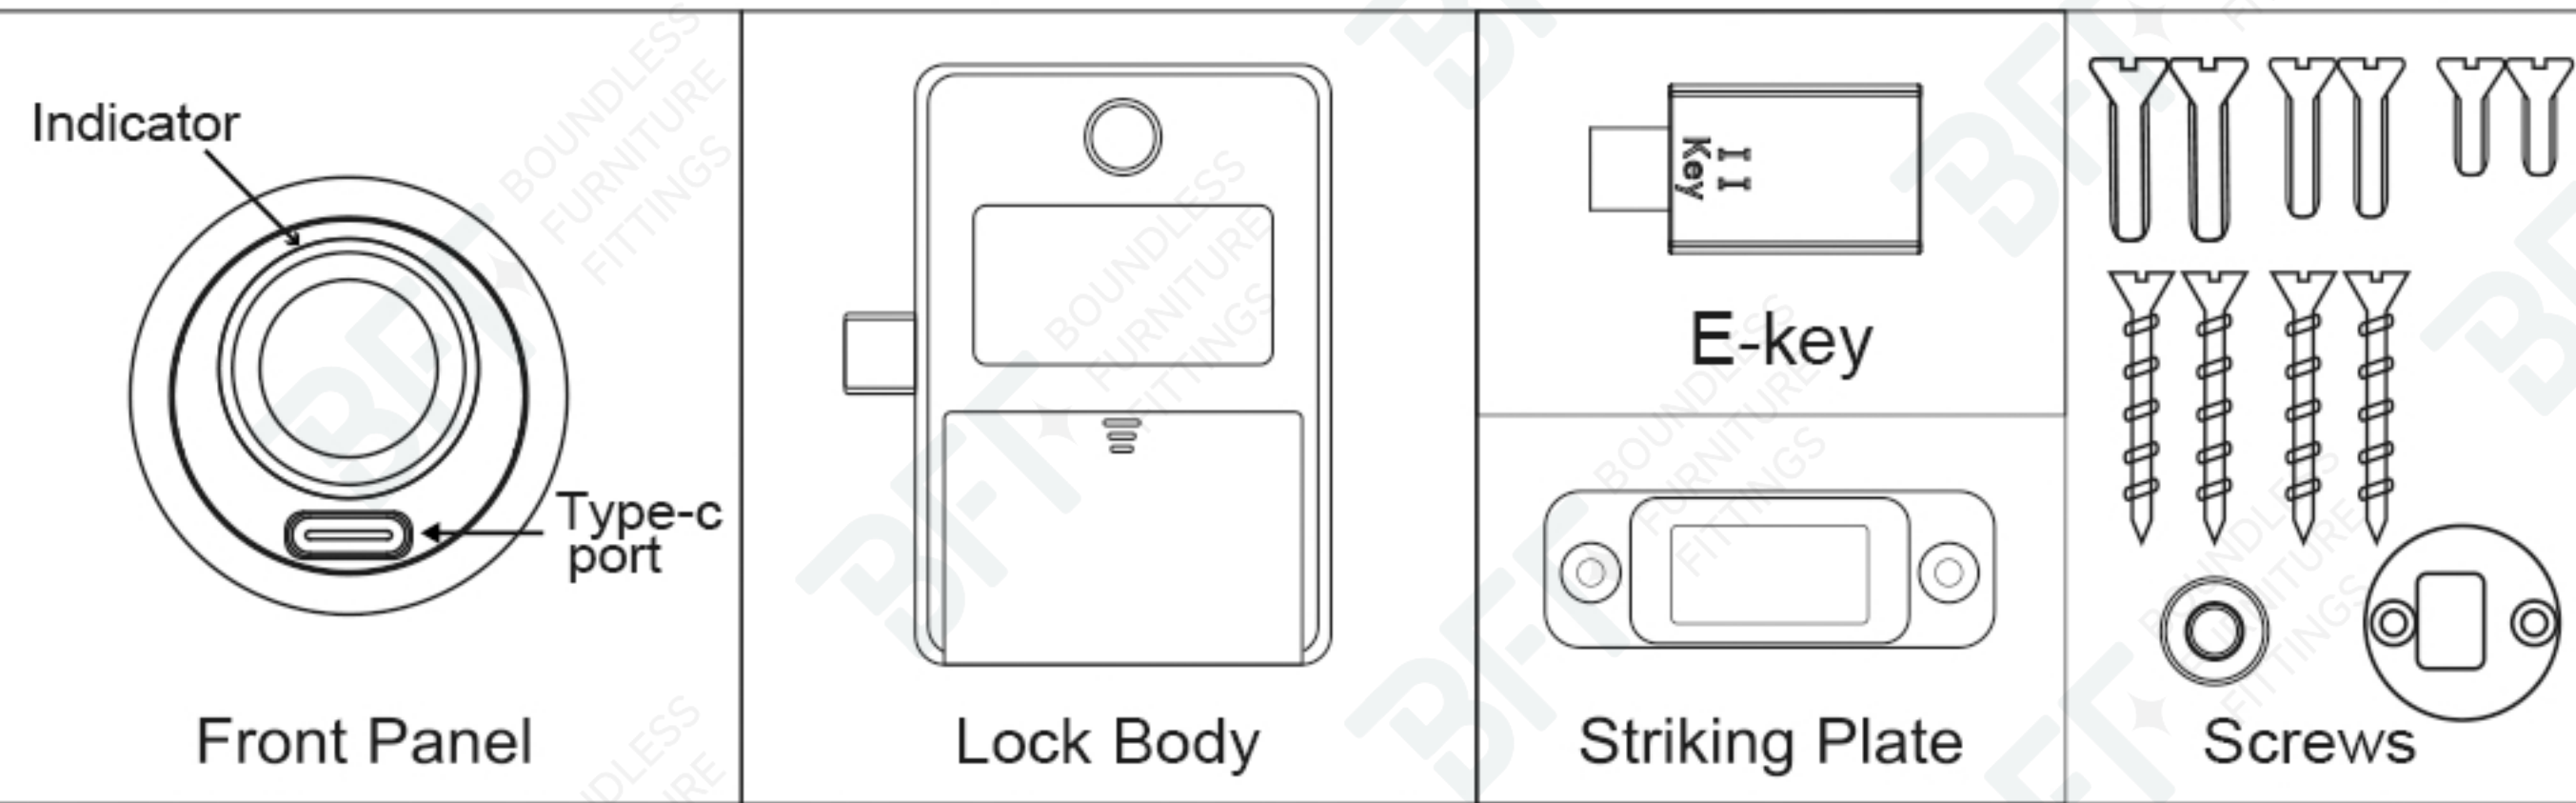

INSTALLATION DRAWING

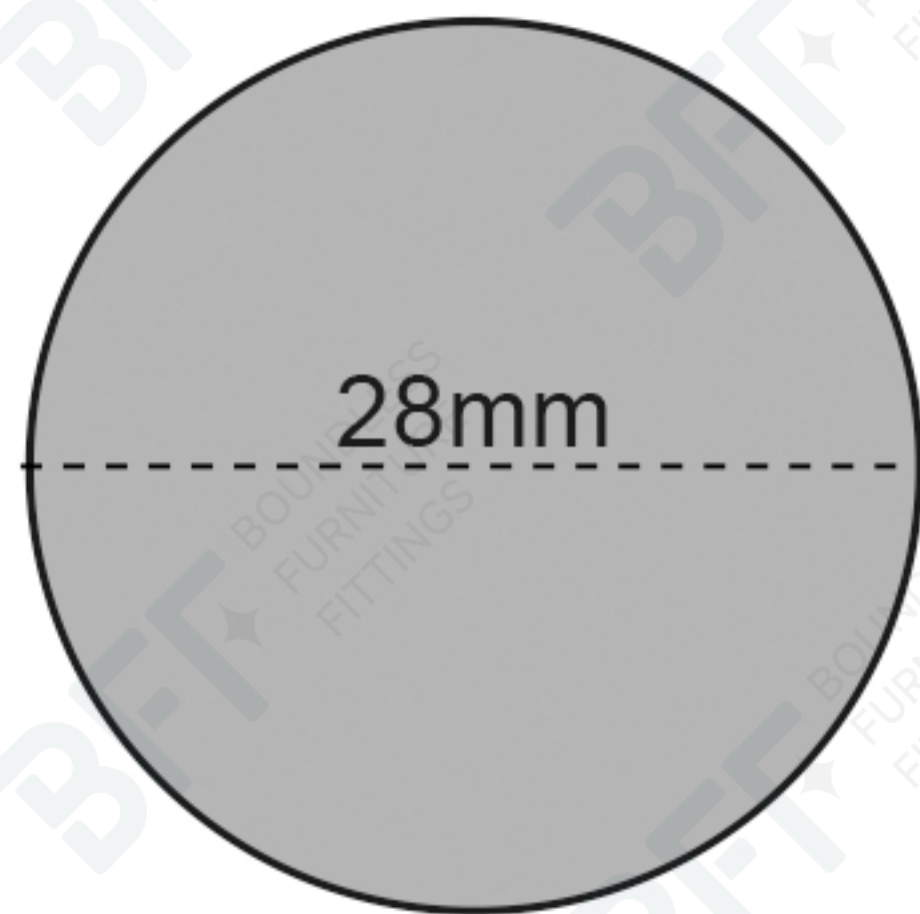

Follow the drawing to drill the hole