


Fingerprint Lock Instructions BFF-2403

1. Panel lock box dimension drawing:

2403

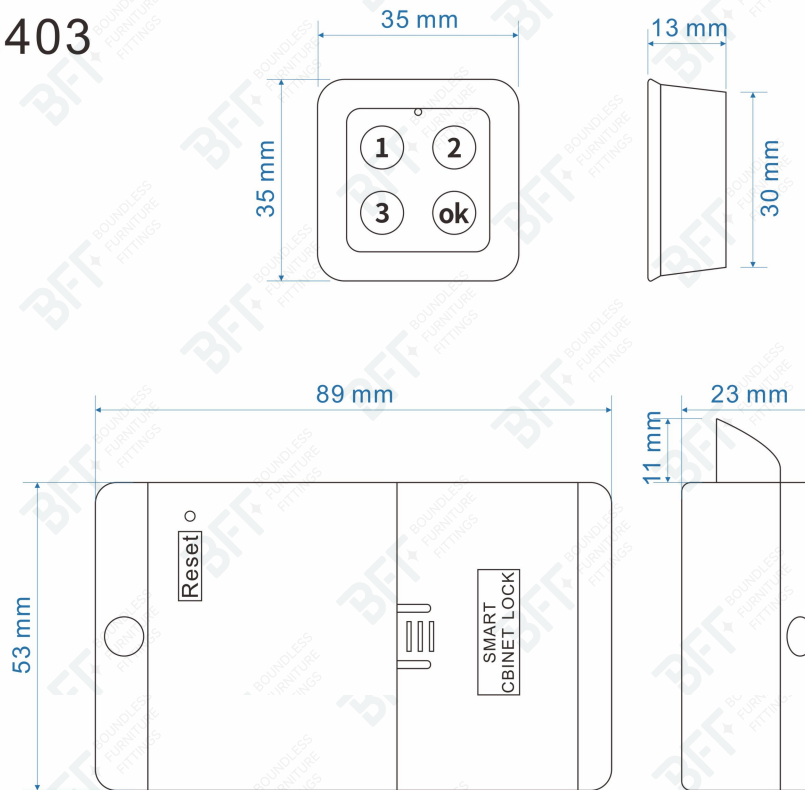

2. Operating Instructions:

1) Password unlocking:

Enter "User Password + OK", then turn the handle.

The factory default password is "1". Enter "1 + OK" – a long beep will sound, unlocking is complete.

2) Changing the password:

Enter the old password (e.g., 1) + OK, wait until the latch retracts, then press OK again. Then enter the new password (1–12 digits) + OK. A long beep indicates success.

(Example: Changing default password "1" to "123": Enter "1 + OK" → wait for latch to retract → press OK → enter "123 + OK" → long beep – password changed successfully.)

3) Forgot password:

Insert the USB key into the Type-C port. Press "OK" – a long beep will sound, and the lock will be restored to factory settings.

(Password resets to default "1". Follow step 2 to set a new password.)

Note: The USB key is blank at factory. Once paired with a lock, it becomes 1:1. No other USB key can be used with that lock.

4) Low battery:

Replace the batteries promptly when power is low. If the battery is completely dead, connect a power source to the Type-C port for emergency unlocking.