
FINGERPRINT CABINET LOCK USER MANUAL

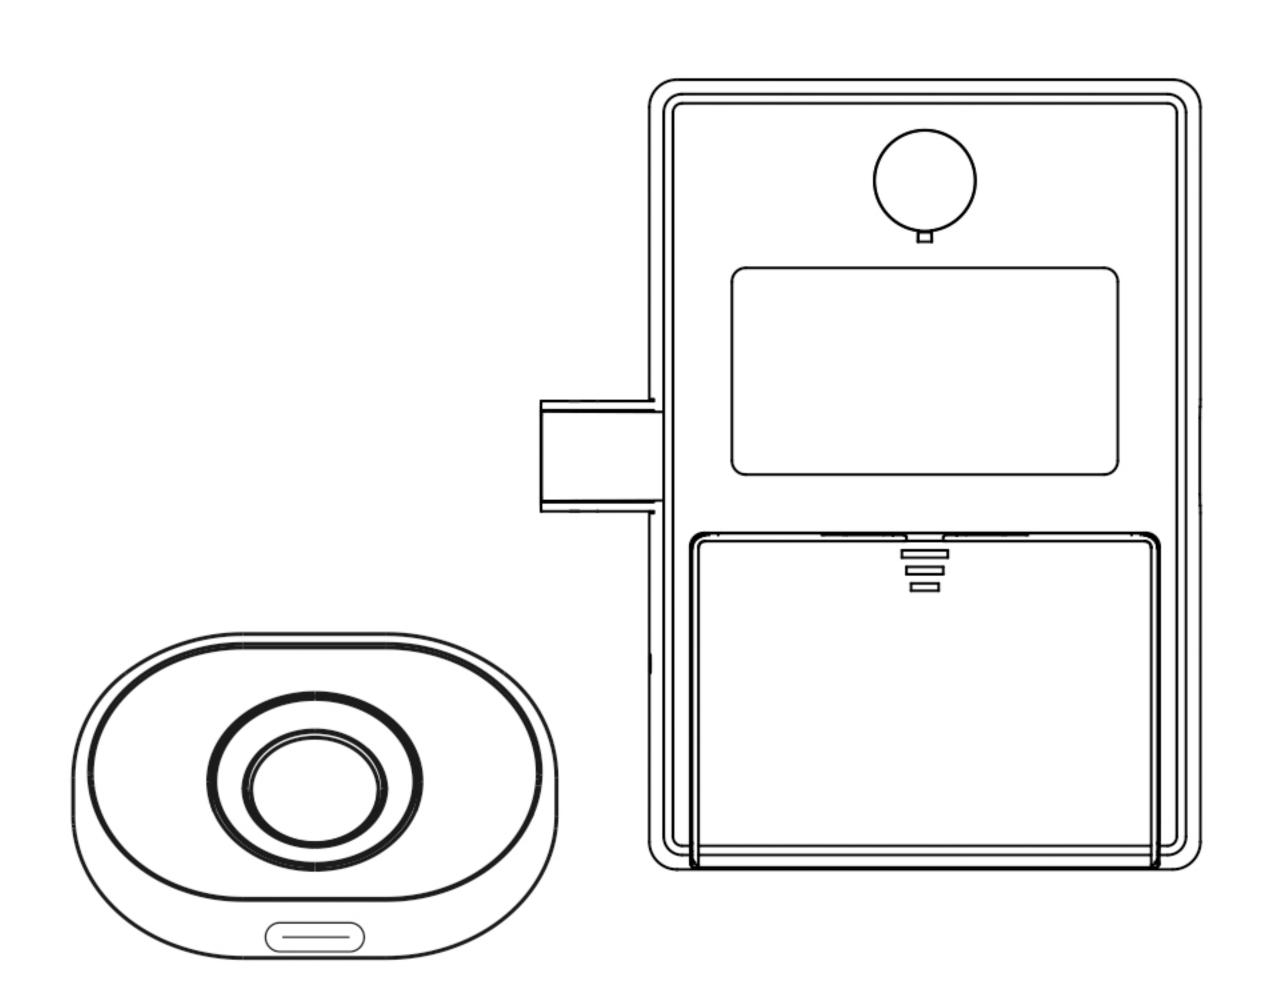


Feature


- 1.Biometric sensor, high sensitive and rapid responsive
- 2. Max.10 fingerprints for multiple users
- 3. E-Key for emergency key and management
- 4. Zinc-alloy back lock, automatic locking system
- 5. Surface mounted, widely used in drawer, cabinet, wardrobe etc.

Installation Instructions

1. Put the installation drawing on the door, approx. 45mm between the door frame and center hole (Picture 1), then drill the hole

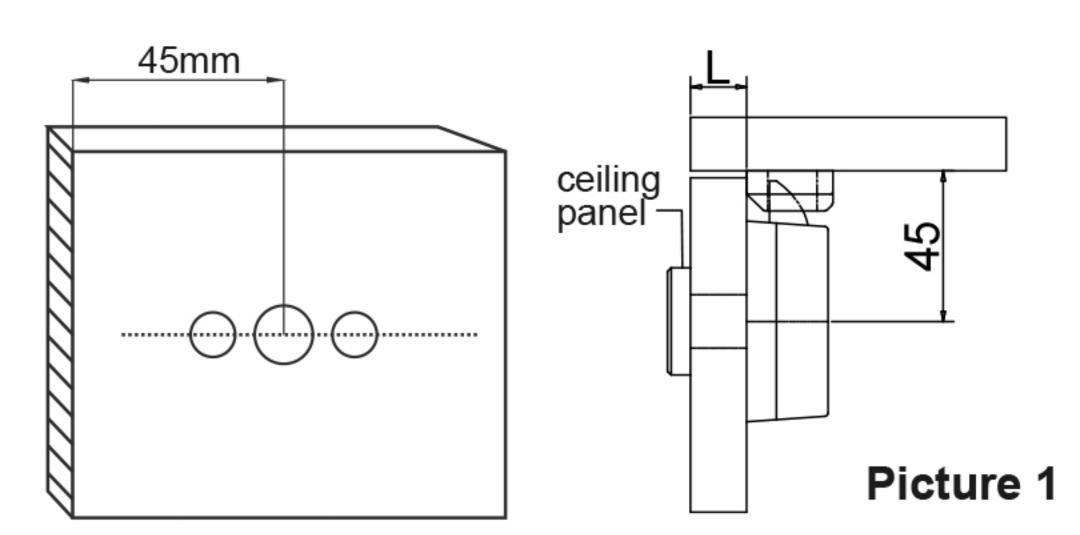



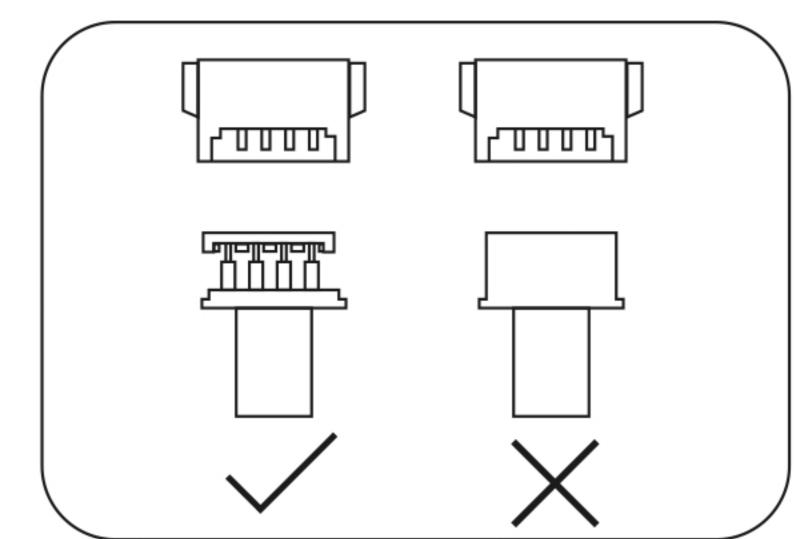


		Door Thickness (mm)	Screw
	1	14mm~16mm	M4X20
	2	16mm~18mm	M4X22
	3	19mm~21mm	M4X25

Automatic Mode

1. How to add new fingerprints

- →Put a registered finger on sensor, green light and latch retracts, holding, green light and latch comes out, keep holding, green light on, then remove
- →Blue light, put a finger on, green light then remove
- →Put the finger on, green light then remove; repeat until a long green light for 2 seconds (The fingerprint is registered)
- →Blue light, add more new fingerprints

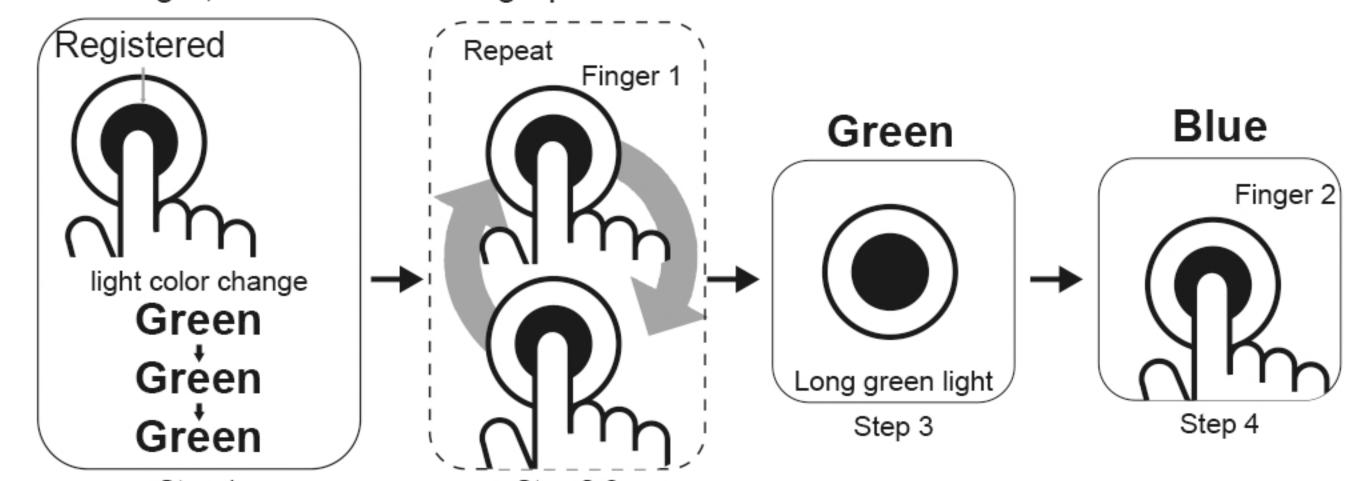


Note

- 1). Make sure add the fingerprint before using. Any finger can unlock in the factory setting
- 2) In order to keep the lock work well, to add no less than 3 fingerprints

2. How to delete fingerprints

→Put any registered on sensor, green light, holding, green light again, keep holding, green light then red light flashed, then remove


→green light for 2 seconds, all the fingerprints deleted

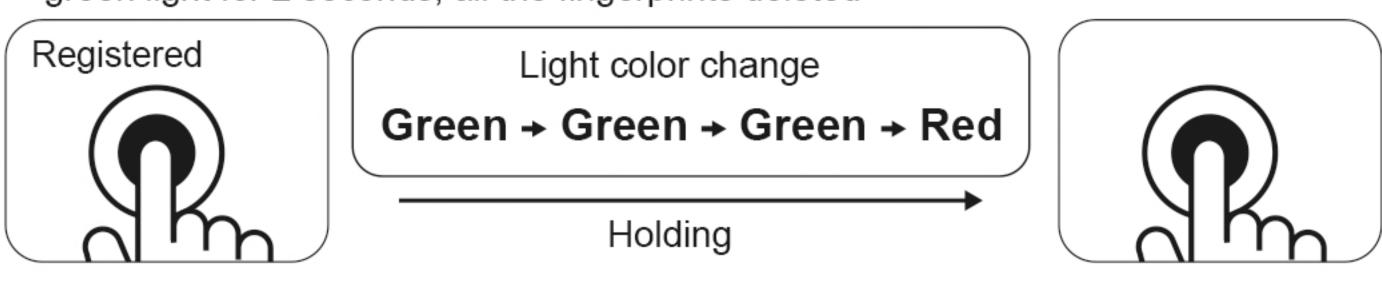

3. How to lock


→Push the door closed, door lock automatically

2. Wire goes through the center hole and fix the front panel by screw M4X22, then connect the back lock, (Tide up the wire not crush), fix back lock by screw ST3.5X18

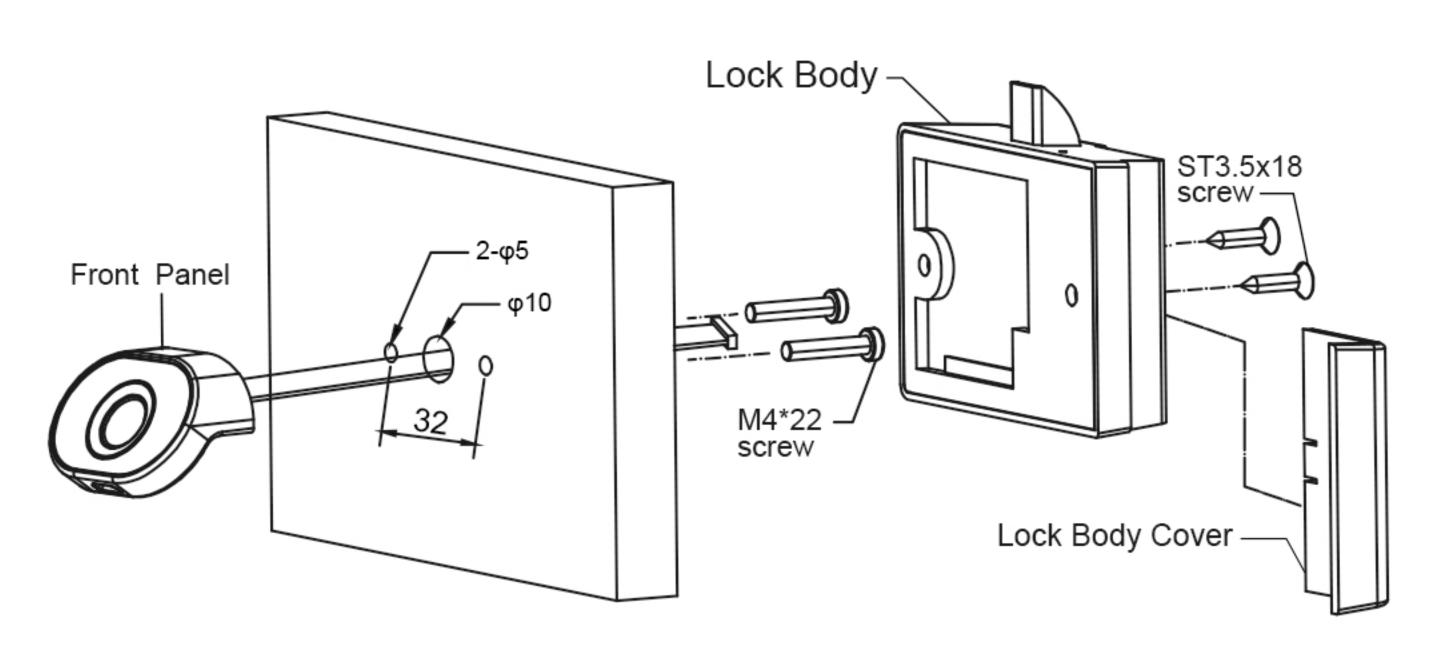

Picture 2

3. Fix the striking plate by screw ST3.5X18 (Make sure latch works well)

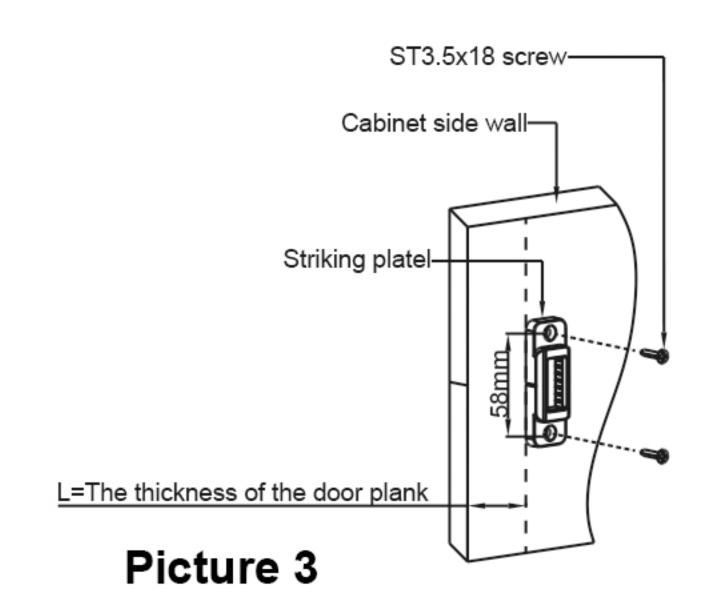

4. How to unlock

- →Put any registered fingerprint on sensor
- →Green light, unlocked
- →Pull the door open

Other Function E-Key 1.Insert E-Key 2.Put any finger on sensor, green light on, unlocked 3.Pull the door open Any finger

2. Low battery warning


In case of low battery, to put on the registered fingerprint, green light flashes once, and red light flashes twice, then a long green light, unlocked. To change the battery immediately after door open

Note: Use 3XAAA alkaline battery, not take Carbon battery


3. Outer Power Supply

When low battery, can connect power bank or mobile plug for outer power supply


After unlocked, change the battery immediately

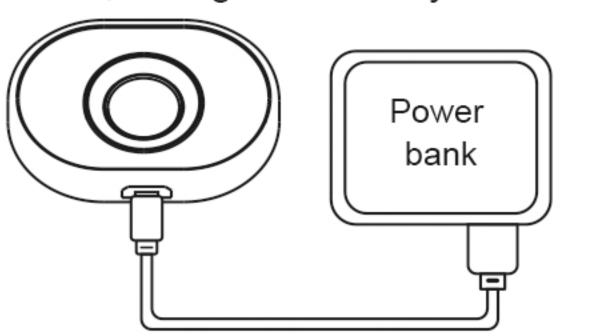

COMPONENT

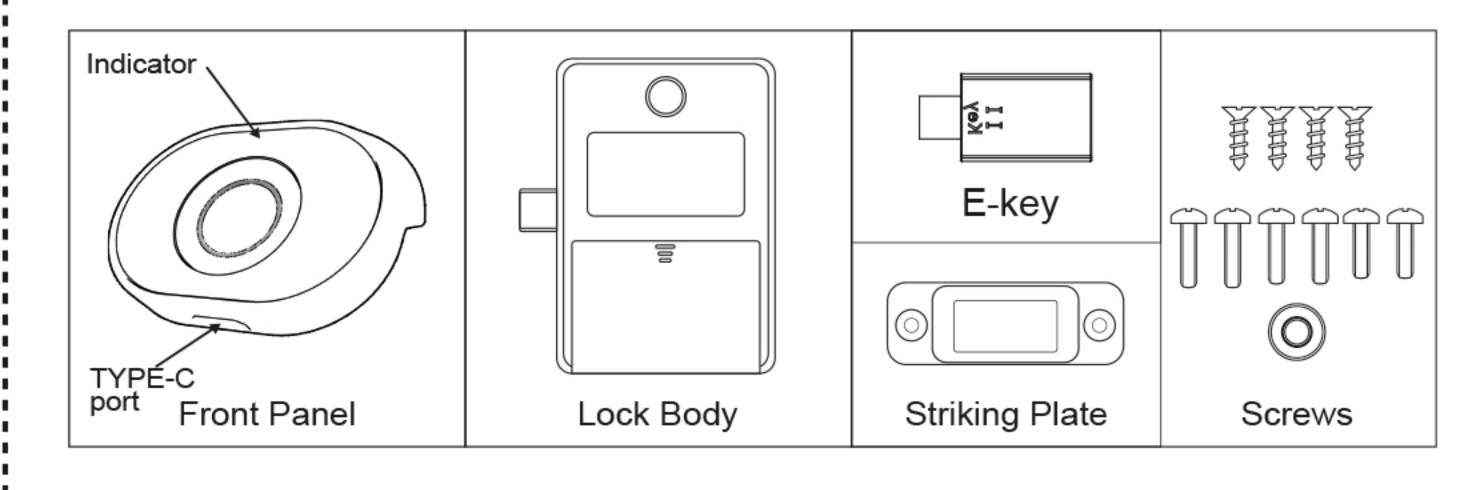

INSTALLATION DRAWING

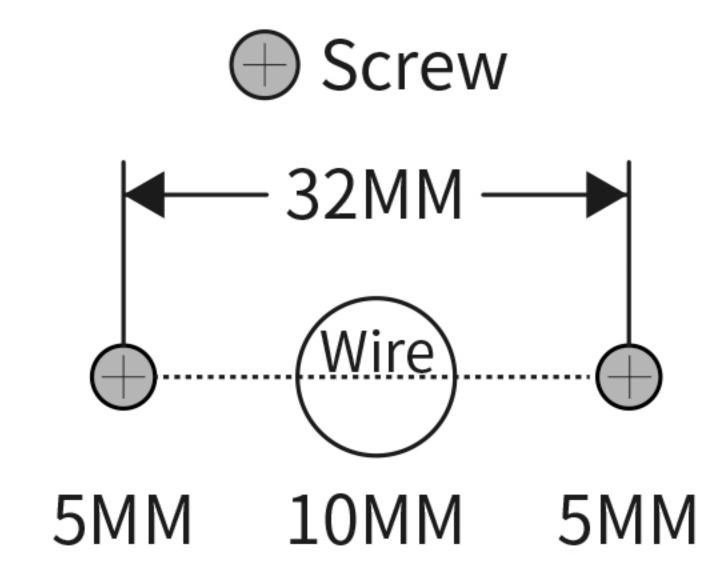

Follow the drawing to drill the hole