


Fingerprint Lock Instructions BFF-2406

1. Panel lock box dimension drawing:

2406

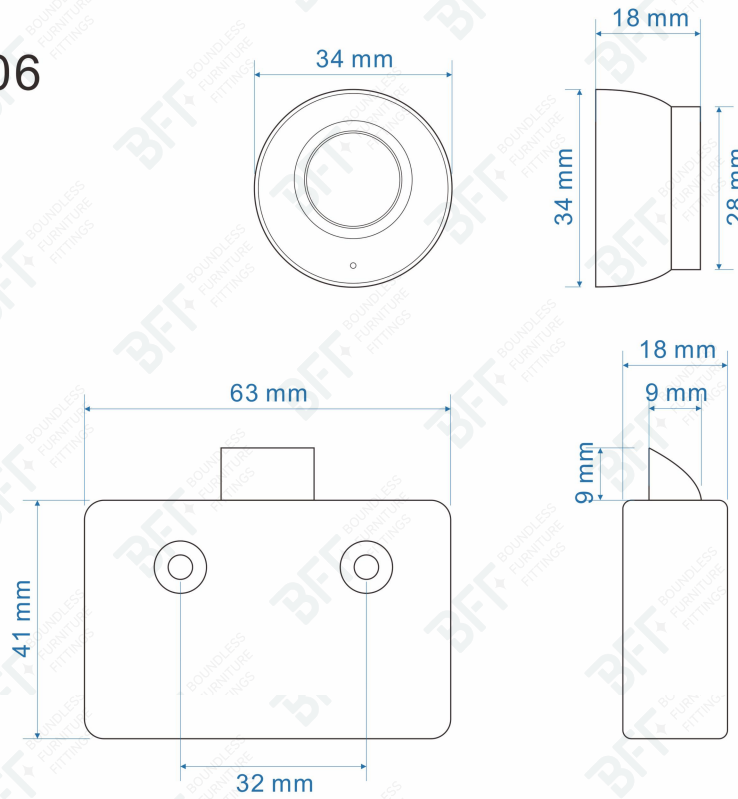

2. Operating Instructions:

1) Unlock

- (1) In initial state, any fingerprint can unlock the lock.
- (2) After enrollment, only registered fingerprints work. The lock relocks automatically 4 seconds after unlocking.

2) Fingerprint Enrollment

- (1) Press and hold any fingerprint for 8 seconds until green light flashes once and blue light stays on, then release.
- (2) With blue light on, press the sensor area 8 times. Green light + long beep = success.
- (3) Add more fingerprints while blue light is on, max 10 fingerprints.

3) Add More Fingerprints

Activate steady blue light with a registered fingerprint, press new fingerprint 8 times. Green light + long beep = success.

4) System Reset

Method 1: Hold valid fingerprint about 18 seconds. Keep holding when green/color lights on.

Release at red light to clear all fingerprints.

Method 2: Insert electronic key, touch the sensor. Green light for 2s, lock opens, reset done.

5) Low Battery Alert

When unlocking, green flash followed by 4 red flashes = low battery. Replace batteries soon.

Note: Use alkaline batteries only. NO carbon batteries.

6) Emergency Power Supply

If too low to unlock, use power bank or Type-C for external power.